 


ЧОРНИЛО
ДЛЯ CANON

Чорнило GI-46 BARVA для Canon



Canon MAXIFY GX3010, GX3020, GX3030, GX3040, GX3050, GX3060, GX3070, GX4010, GX4020, GX4030, GX4040, GX4050, GX4060, GX4070, GX5010, GX5020, GX5030, GX5040, GX5050, GX5060, GX5070, GX5540, GX6010, GX6020, GX6030, GX6040, X6050, GX6060, GX6070, GX6550, GX7010, GX7020, GX7021, GX7030, GX7040, GX7050, GX7055, GX7060, GX7070



Canon GI-16 BK, GI-26 BK, GI-36 BK, GI-46 BK, GI-56 BK, GI-66 BK, GI-76 BK
 Canon GI-16 C, GI-26 C, GI-36 C, GI-46 C, GI-56 C, GI-66 C, GI-76 C
 Canon GI-16 M, GI-26 M, GI-36 M, GI-46 M, GI-56 M, GI-66 M, GI-76 M
 Canon GI-16 Y, GI-26 Y, GI-36 Y, GI-46 Y, GI-56 Y, GI-66 Y, GI-76 Y

1K 100 мл


180 мл

Black	CGI46-903-1K	CGI46-907
Cyan	CGI46-904-1K	CGI46-908
Magenta	CGI46-905-1K	CGI46-909
Yellow	CGI46-906-1K	CGI46-910
BK/C/M/Y	CGI46-1K-MP	—————


Чорнило GI-43 BARVA для Canon



 Canon PIXMA G510, G540, G550, G570, G580, G590, G595, G610, G620, G640, G650, G670, G680, G690, G695



 Canon GI-13 BK, GI-23 BK, GI-43 BK, GI-53 BK, GI-73 BK, GI-83 BK, GI-93 BK
 Canon GI-13 C, GI-23 C, GI-43 C, GI-53 C, GI-73 C, GI-83 C, GI-93 C
 Canon GI-13 M, GI-23 M, GI-43 M, GI-53 M, GI-73 M, GI-83 M, GI-93 M



Canon GI-13 Y, GI-23 Y, GI-43 Y, GI-53 Y, GI-73 Y, GI-83 Y, GI-93 Y
 Canon GI-13 R, GI-23 R, GI-43 R, GI-53 R, GI-73 R, GI-83 R, GI-93 R
 Canon GI-13 GY, GI-23 GY, GI-43 GY, GI-53 GY, GI-73 GY, GI-83 GY, GI-93 GY

1K 100 мл





180 мл

Black	CGI43-841-1K	CGI43-847
Cyan	CGI43-842-1K	CGI43-848
Magenta	CGI43-843-1K	CGI43-849
Yellow	CGI43-844-1K	CGI43-850
Red	CGI43-845-1K	CGI43-851
Gray	CGI43-846-1K	CGI43-852
BK/C/M/Y/R/GY	CGI43-1K-MP	—————

Чорнило GI-41 BARVA для Canon



Canon PIXMA G1020, G1220, G1430, G1460, G1520, G1530, G1560, G1820, G1920, G1922, G2020, G2021, G2060, G2160, G2260, G2420, G2430, G2460, G2470, G2520, G2560, G2570, G2820, G2860, G2920, G2923, G2960, G2962, G3020, G3060, G3160, G3260, G3420, G3430, G3460, G3470, G3520, G3560, G3570, G3571, G3572, G3620, G3630, G3660, G3670, G3675, G3820, G3821, G3860, G3920, G3923, G3960, G3962, G3963, G4470, G4570, G4670

 Black Пігментне	 Циан Водорозчинне	 Magenta Водорозчинне	 Yellow Водорозчинне
Canon GI-11 PGBK, GI-21 PGBK, GI-41 PGBK, GI-51 PGBK, GI-61 PGBK, GI-71 PGBK, GI-81 PGBK, GI-91 PGBK	Canon GI-11 C, GI-21 C, GI-41 C, GI-51 C, GI-61 C, GI-71 C, GI-81 C, GI-91 C	Canon GI-11 M, GI-21 M, GI-41 M, GI-51 M, GI-61 M, GI-71 M, GI-81 M, GI-91 M	Canon GI-11 Y, GI-21 Y, GI-41 Y, GI-51 Y, GI-61 Y, GI-71 Y, GI-81 Y, GI-91 Y

	1К 100 мл	180 мл	1 л
Black	CGI41-805-1K	CGI41-809	CGI41-813
Cyan	CGI41-806-1K	CGI41-810	CGI41-814
Magenta	CGI41-807-1K	CGI41-811	CGI41-815
Yellow	CGI41-808-1K	CGI41-812	CGI41-816
БК/С/М/У	CGI41-1К-МР	CGI41-180-МР	_____

Чорнило GI-40 BARVA для Canon







Black

Canon PIXMA G5010, G5011, G5020, G5030, G5040, G5050, G5070, G5090, G5092, G6010, G6011, G6020, G6030, G6040, G6050, G6060, G6065, G6070, G6090, G6091, G6092, G7010, G7011, G7020, G7030, G7040, G7050, G7060, G7070, G7090; GM2010, GM2011, GM2030, GM2040, GM2050, GM2070, GM2090, GM2092, GM2400, GM4010, GM4011, GM4030, GM4040, GM4050, GM4070, GM4090

Циан, Magenta, Yellow

Canon PIXMA G5010, G5011, G5020, G5030, G5040, G5050, G5070, G5090, G5092, G6010, G6011, G6020, G6030, G6040, G6050, G6060, G6065, G6070, G6090, G6091, G6092, G7010, G7011, G7020, G7030, G7040, G7050, G7060, G7070, G7090

 Black Пігментне	 Циан Водорозчинне	 Magenta Водорозчинне	 Yellow Водорозчинне
Canon GI-10 PGBK, GI-20 PGBK, GI-30 PGBK, GI-40 PGBK, GI-50 PGBK, GI-60 PGBK, GI-70 PGBK, GI-90 PGBK	Canon GI-10 C, GI-20 C, GI-30 C, GI-40 C, GI-50 C, GI-60 C, GI-70 C, GI-90 C	Canon GI-10 M, GI-20 M, GI-30 M, GI-40 M, GI-50 M, GI-60 M, GI-70 M, GI-90 M	Canon GI-10 Y, GI-20 Y, GI-30 Y, GI-40 Y, GI-50 Y, GI-60 Y, GI-70 Y, GI-90 Y

	100 мл	1К 100 мл	180 мл
Black	CGI40-743	CGI40-837-1K	CGI40-747
Cyan	CGI40-744	CGI40-838-1K	CGI40-748
Magenta	CGI40-745	CGI40-839-1K	CGI40-749
Yellow	CGI40-746	CGI40-840-1K	CGI40-750
БК/С/М/У	CGI40-100-МР	CGI40-1К-МР	_____

Чорнило GI-490 BARVA для Canon



Canon PIXMA G1000, G1010, G1100, G1110, G1200, G1210, G1300, G1310, G1400, G1410, G1411, G1500, G1501, G1510, G1600, G1700, G1800, G1810, G1900, G1910, G2000, G2002, G2010, G2012, G2100, G2101, G2110, G2200, G2210, G2300, G2400, G2410, G2411, G2415, G2416, G2500, G2501, G2510, G2600, G2700, G2800, G2900, G3000, G3010, G3012, G3100, G3102, G3110, G3200, G3202, G3300, G3310, G3400, G3410, G3411, G3415, G3416, G3500, G3501, G3510, G3600, G3610, G3700, G3800, G3900, G4000, G4010, G4085, G4100, G4110, G4200, G4210, G4300, G4400, G4410, G4411, G4500, G4510, G4511, G4600, G4610, G4700, G4800, G4900



Black
Пігментне



Циан
Водорозчинне



Magenta
Водорозчинне



Yellow
Водорозчинне

Canon GI-190 BK,
GI-290 BK, GI-390 BK,
GI-490 BK, GI-590 BK,
GI-690 BK, GI-790 BK,
GI-890 BK, GI-990 BK

Canon GI-190 BK,
GI-290 BK, GI-390 BK,
GI-490 BK, GI-590 BK,
GI-690 BK, GI-790 BK,
GI-890 BK, GI-990 BK

Canon GI-190 M,
GI-290 M, GI-390 M,
GI-490 M, GI-590 M,
GI-690 M, GI-790 M,
GI-890 M, GI-990 M

Canon GI-190 Y,
GI-290 Y, GI-390 Y,
GI-490 Y, GI-590 Y,
GI-690 Y, GI-790 Y,
GI-890 Y, GI-990 Y

	90 г	180 г	1 л
Black	G490-507	G490-503	CGI41-813
Циан	G490-508	G490-504	CGI41-814
Magenta	G490-509	G490-505	CGI41-815
Yellow	G490-510	G490-506	CGI41-816
BK/C/M/Y	CG490-090-MP	CG490-180-MP	—————

Чорнило PG-460 BARVA для Canon



Canon PIXUS TS5330, TS5430; PIXMA TS5300, TS5320, TS5340, TS5350, TS5351, TS5352, TS5353, TS5360, TS5365, TS5370, TS5380, TS5391, TS5392, TS6420, TS7440, TS7450, TS7451; TR7020, TR7060



Black
Пігментне

Canon BC-360, PG-260, PG-460, PG-560, PG-660, PG-760, PG-860, PG-960

100 мл

180 мл

Black

C460-727

C460-731

ВК/С/М/У

CPG460-100-MP

CPG460-180-MP

Чорнило CL-461 BARVA для Canon



Canon PIXUS TS5330, TS5430; PIXMA TS5300, TS5320, TS5340, TS5350, TS5351, TS5352, TS5353, TS5360, TS5365, TS5370, TS5380, TS5391, TS5392, TS6420, TS7440, TS7450, TS7451; TR7020, TR7060



 
Сяан
Водорозчинне

Canon BC-361, CL-261, CL-461, CL-561, CL-661, CL-761, CL-861, CL-961



Magenta
Водорозчинне

Canon BC-361, CL-261, CL-461, CL-561, CL-661, CL-761, CL-861, CL-961

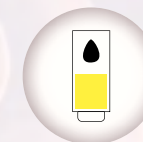

Yellow
Водорозчинне

Canon BC-361, CL-261, CL-461, CL-561, CL-661, CL-761, CL-861, CL-961

100 мл

180 мл

Сяан

C461-728

C461-732

Magenta

C461-729

C461-733

Yellow

 
C461-730

C461-734

Чорнило PGI-470/ PGI-480 BARVA для Canon



Canon PIXUS MG5730/ MG6930/ MG7730; TR7530/ TR8530; TS703/ TS5030/ TS6030/ TS6130/ TS6230/ TS6330/ TS8030/ TS8130/ TS8230/ TS8330/ TS9030/ TS9130/ TS9530; PIXMA MG5700/ MG5710/ MG5720/ MG5722/ MG5740/ MG5750/ MG5751/ MG5752/ MG5753/ MG5760/ MG5770/ MG5780/ MG5790/ MG6800/ MG6810/ MG6820/ MG6840/ MG6850/ MG6851/ MG6852/ MG6853/ MG6860/ MG6870/ MG6880/ MG6890/ MG7700/ MG7710/ MG7720/ MG7740/ MG7750/ MG7751/ MG7752/ MG7753/ MG7760/ MG7770/ MG7780/ MG7790; TR7500/ TR7510/ TR7520/ TR7540/ TR7550/ TR7560/ TR7570/ TR7580/ TR7590/ TR8500/ TR8510/ TR8520/ TR8540/ TR8550/ TR8560/ TR8570/ TR8580/ TR8590/ TR8620; TS701/ TS702/ TS704/ TS705/ TS706/ TS707/ TS708/ TS709/ TS5020/ TS5040/ TS5050/ TS5051/ TS5053/ TS5055/ TS5060/ TS5070/ TS5080/ TS5090/ TS6000/ TS6010/ TS6020/ TS6040/ TS6050/ TS6051/ TS6052/ TS6060/ TS6070/ TS6080/ TS6090/ TS6100/ TS6110/ TS6120/ TS6140/ TS6150/ TS6151/ TS6160/ TS6170/ TS6180/ TS6190/ TS6210/ TS6220/ TS6240/ TS6241/ TS6250/ TS6251/ TS6260/ TS6270/ TS6280/ TS6290/ TS6310/ TS6320/ TS6340/ TS6350/ TS6351/ TS6360/ TS6370/ TS6380/ TS6390/ TS8010/ TS8020/ TS8040/ TS8050/ TS8051/ TS8052/ TS8053/ TS8060/ TS8070/ TS8080/ TS8090/ TS8110/ TS8120/ TS8140/ TS8150/ TS8151/ TS8152/ TS8160/ TS8170/ TS8180/ TS8190/ TS8210/ TS8220/ TS8240/ TS8241/ TS8242/ TS8250/ TS8251/ TS8260/ TS8270/ TS8280/ TS8290/ TS8310/ TS8320/ TS8340/ TS8350/ TS8351/ TS8352/ TS8360/ TS8370/ TS8380/ TS8390/ TS9010/ TS9020/ TS9040/ TS9050/ TS9055/ TS9060/ TS9070/ TS9080/ TS9090/ TS9110/ TS9120/ TS9140/ TS9150/ TS9155/ TS9160/ TS9170/ TS9180/ TS9190/ TS9510/ TS9520/ TS9540/ TS9541/ TS9550/ TS9551/ TS9560/ TS9570/ TS9580/ TS9590

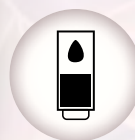

Black
Пігментне

Canon PGI-170 PGBK, PGI-180 PGBK, PGI-270 PGBK, PGI-280 PGBK, PGI-370 PGBK, PGI-380 PGBK, PGI-470 PGBK, PGI-480 PGBK, PGI-570 PGBK, PGI-580 PGBK, PGI-670 PGBK, PGI-680 PGBK, PGI-770 PGBK, PGI-780 PGBK, PGI-870 PGBK, PGI-880 PGBK, PGI-970 PGBK, PGI-980 PGBK

90 г

1 л

Black	C470-552	C470-661
PGBK/BK/C/M/Y	CPGI470-090-MP	_____
PGBK/BK/C/M/Y/GY	CPGI470-090-2MP	_____
PGBK/BK/C/M/Y	CPGI480-5-090-MP	_____

Чорнило CLI-471/ CLI-481 BARVA для Canon



Black, Cyan, Magenta, Yellow

Canon PIXUS MG5730/ MG6930/ MG7730; TR7530/ TR8530; TS703/ TS5030/ TS6030/ TS6130/ TS6230/ TS6330/ TS8030/ TS8130/ TS8230/ TS8330/ TS9030/ TS9130/ TS9530; PIXMA MG5700/ MG5710/ MG5720/ MG5722/ MG5740/ MG5750/ MG5751/ MG5752/ MG5753/ MG5760/ MG5770/ MG5780/ MG5790/ MG6800/ MG6810/ MG6820/ MG6840/ MG6850/ MG6851/ MG6852/ MG6853/ MG6860/ MG6870/ MG6880/ MG6890/ MG7700/ MG7710/ MG7720/ MG7740/ MG7750/ MG7751/ MG7752/ MG7753/ MG7760/ MG7770/ MG7780/ MG7790; TR7500/ TR7510/ TR7520/ TR7540/ TR7550/ TR7560/ TR7570/ TR7580/ TR7590/ TR8500/ TR8510/ TR8520/ TR8540/ TR8550/ TR8560/ TR8570/ TR8580/ TR8590/ TR8620; TS701/ TS702/ TS704/ TS705/ TS706/ TS707/ TS708/ TS709/ TS5010/ TS5020/ TS5040/ TS5050/ TS5051/ TS5053/ TS5055/ TS5060/ TS5070/ TS5080/ TS5090/ TS6000/ TS6010/ TS6020/ TS6040/ TS6050/ TS6051/ TS6052/ TS6060/ TS6070/ TS6080/ TS6090/ TS6100/ TS6110/ TS6120/ TS6140/ TS6150/ TS6151/ TS6160/ TS6170/ TS6180/ TS6190/ TS6210/ TS6220/ TS6240/ TS6241/ TS6250/ TS6251/ TS6260/ TS6270/ TS6280/ TS6290/ TS6310/ TS6320/ TS6340/ TS6350/ TS6351/ TS6360/ TS6370/ TS6380/ TS6390/ TS8010/ TS8020/ TS8040/ TS8050/ TS8051/ TS8052/ TS8053/ TS8060/ TS8070/ TS8080/ TS8090/ TS8110/ TS8120/ TS8140/ TS8150/ TS8151/ TS8152/ TS8160/ TS8170/ TS8180/ TS8190/ TS8210/ TS8220/ TS8240/ TS8241/ TS8242/ TS8250/ TS8251/ TS8260/ TS8270/ TS8280/ TS8290/ TS8310/ TS8320/ TS8340/ TS8350/ TS8351/ TS8352/ TS8360/ TS8370/ TS8380/ TS8390/ TS9010/ TS9020/ TS9040/ TS9050/ TS9055/ TS9060/ TS9070/ TS9080/ TS9090/ TS9110/ TS9120/ TS9140/ TS9150/ TS9155/ TS9160/ TS9170/ TS9180/ TS9190/ TS9510/ TS9520/ TS9540/ TS9541/ TS9550/ TS9551/ TS9560/ TS9570/ TS9580/ TS9590

Gray

Canon PIXUS MG7730; TS8030/ TS9030; PIXMA MG7700/ MG7710/ MG7720/ MG7740/ MG7750/ MG7751/ MG7752/ MG7753/ MG7760/ MG7770/ MG7780/ MG7790; TS8010/ TS8020/ TS8040/ TS8050/ TS8051/ TS8052/ TS8053/ TS8060/ TS8070/ TS8080/ TS8090/ TS9010/ TS9020/ TS9040/ TS9050/ TS9055/ TS9060/ TS9070/ TS9080/ TS9090

Photo Blue

Canon PIXMA TR7500/ TR7550/ TR8500/ TR8550; TS6100/ TS6150/ TS6151/ TS6240/ TS6241/ TS6250/ TS6251/ TS6252/ TS6290/ TS6320/ TS6350/ TS6350a/ TS6351/ TS705/ TS705a/ TS8120/ TS8140/ TS8150/ TS8151/ TS8152/ TS8160/ TS8170/ TS8180/ TS8190/ TS8195/ TS8220/ TS8240/ TS8241/ TS8242/ TS8250/ TS8251/ TS8260/ TS8280/ TS8290/ TS8320/ TS8350/ TS8351/ TS8352/ TS8360/ TS8370/ TS9120/ TS9140/ TS9150/ TS9155/ TS9160/ TS9170/ TS9180/ TS9540/ TS9541C/ TS9550/ TS9551C/ TS9590



Black
Водорозчинне

Canon CLI-171 BK, CLI-181 BK, CLI-271 BK, CLI-281 BK, CLI-371 BK, CLI-381 BK, CLI-471 BK, CLI-481 BK, CLI-571 BK, CLI-581 BK, CLI-671 BK, CLI-681 BK, CLI-771 BK, CLI-781 BK, CLI-871 BK, CLI-881 BK, CLI-971 BK, CLI-981 BK



Цяно
Водорозчинне

Canon CLI-171 C, CLI-181 C, CLI-271 C, CLI-281 C, CLI-371 C, CLI-381 C, CLI-471 C, CLI-481 C, CLI-571 C, CLI-581 C, CLI-671 C, CLI-681 C, CLI-771 C, CLI-781 C, CLI-871 C, CLI-881 C, CLI-971 C, CLI-981 C



Magenta
Водорозчинне

Canon CLI-171 M, CLI-181 M, CLI-271 M, CLI-281 M, CLI-371 M, CLI-381 M, CLI-471 M, CLI-481 M, CLI-571 M, CLI-581 M, CLI-671 M, CLI-681 M, CLI-771 M, CLI-781 M, CLI-871 M, CLI-881 M, CLI-971 M, CLI-981 M



Yellow
Водорозчинне

Canon CLI-171 Y, CLI-181 Y, CLI-271 Y, CLI-281 Y, CLI-371 Y, CLI-381 Y, CLI-471 Y, CLI-481 Y, CLI-571 Y, CLI-581 Y, CLI-671 Y, CLI-681 Y, CLI-771 Y, CLI-781 Y, CLI-871 Y, CLI-881 Y, CLI-971 Y, CLI-981 Y



Gray
Водорозчинне

Canon CLI-171 GY, CLI-271 GY, CLI-371 GY, CLI-471 GY, CLI-571 GY, CLI-671 GY, CLI-771 GY, CLI-871 GY, CLI-971 GY



Photo Blue
Водорозчинне

Canon CLI-181 PB, CLI-281 PB, CLI-381 PB, CLI-481 PB, CLI-581 PB, CLI-681 PB, CLI-781 PB, CLI-881 PB, CLI-981 PB

	90 г	100 мл	1 л
Black	C471-553	—	C471-662
Cyan	C471-554	—	C471-663
Magenta	C471-555	—	C471-664
Yellow	C471-556	—	C471-665
Gray	C471-557	—	C471-666
Photo Blue	C471-557	C481-985	C481-986

Чорнило PFI-120/ PFI-710 BARVA для Canon

 


Canon imagePROGRAF GP-200, GP-300, GP-5200, GP-5300; TA-20, TA-30, TA-5200, TA-5300; TM-200, TM-205, TM-300, TM-305, TM-5200, TM-5205, TM-5300, TM-5305; TX-2000, TX-2100, TX-3000, TX-3100, TX-4000, TX-4100, TX-5200, TX-5210, TX-5300, TX-5310, TX-5400, TX-5410; TZ-5300, TZ-30000



Matte Black
Пігментне

Canon PFI-030MBK, PFI-110MBK, PFI-120MBK, PFI-310MBK, PFI-320MBK, PFI-340MBK, PFI-710MBK, PFI-740MBK, PFI-8030MBK, PFI-8110MBK, PFI-8120MBK, PFI-8310MBK, PFI-8320MBK, PFI-8340MBK, PFI-8710MBK, PFI-8740MBK

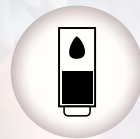

Black
Пігментне

Canon PFI-030BK, PFI-110BK, PFI-120BK, PFI-310BK, PFI-320BK, PFI-340BK, PFI-710BK, PFI-740BK, PFI-8030BK, PFI-8110BK, PFI-8120BK, PFI-8310BK, PFI-8320BK, PFI-8340BK, PFI-8710BK, PFI-8740BK



 
Cyan
Пігментне

Canon PFI-030C, PFI-110C, PFI-120C, PFI-310C, PFI-320C, PFI-340C, PFI-710C, PFI-740C, PFI-8030C, PFI-8110C, PFI-8120C, PFI-8310C, PFI-8320C, PFI-8340C, PFI-8710C, PFI-8740C



Magenta
Пігментне

Canon PFI-030M, PFI-110M, PFI-120M, PFI-310M, PFI-320M, PFI-340M, PFI-710M, PFI-740M, PFI-8030M, PFI-8110M, PFI-8120M, PFI-8310M, PFI-8320M, PFI-8340M, PFI-8710M, PFI-8740M

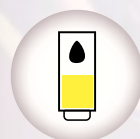

Yellow
Пігментне

Canon PFI-030Y, PFI-110Y, PFI-120Y, PFI-310Y, PFI-320Y, PFI-340Y, PFI-710Y, PFI-740Y, PFI-8030Y, PFI-8110Y, PFI-8120Y, PFI-8310Y, PFI-8320Y, PFI-8340Y, PFI-8710Y, PFI-8740Y

	180 мл	1 л	Service Pack
Matte Black	C120-893	C120-898	C120-ISP-MB
Black	C120-894	C120-899	C120-ISP-B
Cyan	C120-895	C120-900	C120-ISP-C
Magenta	C120-896	C120-901	C120-ISP-M
Yellow	C120-897	C120-902	C120-ISP-Y

Чорнило PFI-102/ PFI-107 BARVA для Canon



Canon imagePROGRAF iPF500, iPF510, iPF600, iPF605, iPF610, iPF650, iPF655, iPF670, iPF670E, iPF680, iPF685, iPF700, iPF710, iPF720, iPF750, iPF755, iPF760, iPF765, iPF770, iPF780, iPF785, iPF810, iPF815, iPF820, iPF825, iPF830, iPF840, iPF850; LP-17, LP-24



 
Matte Black
Пігментне

Canon PFI-007MBK, PFI-102MBK, PFI-107MBK, PFI-207MBK, PFI-303MBK, PFI-307MBK, PFI-703MBK, PFI-707MBK




Black
Водорозчинне

Canon PFI-007BK, PFI-102BK, PFI-107BK, PFI-207BK, PFI-303BK, PFI-307BK, PFI-703BK, PFI-707BK



Циан
Водорозчинне

 Canon PFI-007C, PFI-102C, PFI-107C, PFI-207C, PFI-303C, PFI-307C, PFI-703C, PFI-707C



Magenta
Водорозчинне

Canon PFI-007M, PFI-102M, PFI-104M, PFI-107M, PFI-207M, PFI-303M, PFI-307M, PFI-703M, PFI-707M



Yellow
Водорозчинне

Canon PFI-007Y, PFI-102Y, PFI-107Y, PFI-207Y, PFI-303Y, PFI-307Y, PFI-703Y, PFI-707Y

180 мл

1 л

	180 мл	1 л
Matte Black	C107-883	C107-888
Black	C107-884	C107-889
Циан	C107-885	C107-890
Magenta	C107-886	C107-891
Yellow	C107-887	C107-892

Чорнило PGI-1400/ PGI-2400 BARVA для Canon



Canon MAXIFY IB4010, IB4020, IB4030, IB4040, IB4050, IB4060, IB4070, IB4080, IB4090, IB4110, IB4120, IB4130, IB4140, IB4150, IB4160, IB4170, IB4180, IB4190; MB2000, MB2010, MB2020, MB2030, MB2040, MB2050, MB2060, MB2070, MB2080, MB2090, MB2110, MB2120, MB2130, MB2140, MB2150, MB2155, MB2160, MB2170, MB2180, MB2190, MB2300, MB2310, MB2320, MB2330, MB2340, MB2350, MB2360, MB2370, MB2380, MB2390, MB2710, MB2720, MB2730, MB2740, MB2750, MB2755, MB2760, MB2770, MB2780, MB2790, MB5010, MB5020, MB5030, MB5040, MB5050, MB5060, MB5070, B5080, MB5090, MB5100, MB5110, MB5120, MB5130, MB5140, MB5150, MB5155, MB5160, MB5170, MB5180, MB5190, MB5310, MB5320, MB5330, MB5340, MB5350, MB5360, MB5370, MB5380, MB5390, MB5410, MB5420, MB5430, MB5440, MB5450, MB5455, MB5460, MB5470, MB5480, MB5490



Black
Пігментне

Canon PGI-1100BK, PGI-1200BK, PGI-1300BK, PGI-1400BK, PGI-1500BK, PGI-1600BK, PGI-1700BK, PGI-1800BK, PGI-1900BK, PGI-2100BK, PGI-2200BK, PGI-2300BK, PGI-2400BK, PGI-2500BK, PGI-2600BK, PGI-2700BK, PGI-2800BK, PGI-2900BK



Циан
Пігментне

Canon PGI-1100C, PGI-1200C, PGI-1300C, PGI-1400C, PGI-1500C, PGI-1600C, PGI-1700C, PGI-1800C, PGI-1900C, PGI-2100C, PGI-2200C, PGI-2300C, PGI-2400C, PGI-2500C, PGI-2600C, PGI-2700C, PGI-2800C, PGI-2900C



Magenta
Пігментне

Canon PGI-1100M, PGI-1200M, PGI-1300M, PGI-1400M, PGI-1500M, PGI-1600M, PGI-1700M, PGI-1800M, PGI-1900M, PGI-2100M, PGI-2200M, PGI-2300M, PGI-2400M, PGI-2500M, PGI-2600M, PGI-2700M, PGI-2800M, PGI-2900M



Yellow
Пігментне

Canon PGI-1100Y, PGI-1200Y, PGI-1300Y, PGI-1400Y, PGI-1500Y, PGI-1600Y, PGI-1700Y, PGI-1800Y, PGI-1900Y, PGI-2100Y, PGI-2200Y, PGI-2300Y, PGI-2400Y, PGI-2500Y, PGI-2600Y, PGI-2700Y, PGI-2800Y, PGI-2900Y

100 мл

180 мл

	100 мл	180 мл
Black	C1400-924	C1400-928
Циан	C1400-925	C1400-929
Magenta	C1400-926	C1400-930
Yellow	C1400-927	C1400-931
BK/C/M/Y	C1400-100-MP	C1400-180-MP

Чорнило PG-40 BARVA для Canon



Canon PIXMA BJC-3000, BJC-5000, BJC-6000, BJC-6100, BJC-6200, BJC-6500; iP90, iP90V, iP100, iP110, iP1200, iP1300, iP1600, iP1700, iP1800, iP1880, iP1900, iP1980, iP2200, iP2500, iP2580, iP2600, iP2680, iP3000, iP4000, iP5000, iP6000D, iP6210D, iP6220D; MP100, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP287, MP450, MP460, MP470, MP750, MP760, P780; MX300, MX308, MX310, MX318; S400, S450, S500, S520, S530, S530D, S600, S630, S750, S4500, S5400, S6300; mini320, mini320; TR150; Bubble Jet i70, i80, i850, i560, i850, i865, i6500; SmartBase MP700, MP730; MPC400, MPC600; Fax JX200, JX210P, JX500, JX510; MultiPASS C100



Canon BCI-3e BK, BCI-15 BK, PG-30, PGI-35, PG-37, PG-40, PG-50, PG-810, PG-830

 
90 г 180 г 1 кг

Black C40-293 C40-080 C40-083

Чорнило PG-40/ PG-46 BARVA для Canon



Canon PIXMA BJC-3000, BJC-5000, BJC-6000, BJC-6100, BJC-6200, BJC-6500; Ink Efficiency E204, E304, E404, E410, E414, E417, E464, E470, E474, E477, E484, E500, E510, E514, E560, E600, E610, E3140, E3170, E3340, E3370, E3440, E4240, E4270, E4570; iP90, iP90V, iP100, iP110, iP1000, iP1200, iP1300, iP1500, iP1600, iP1700, iP1800, iP1880, iP1900, iP1980, iP2000, iP2500, iP2580, iP2600, iP2680, iP3000, iP4000, iP5000, iP6000D, iP6210D, iP6220D; MP100, MP110, MP130, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP287, MP450, MP460, MP470; MX300, MX308, MX310, MX318; S400, S450, S500, S520, S530, S530D, S600, S630, S750, S4500, S6300; SmartBase MP360, MP370, MP390, MPC190, MPC200, MPC400, MPC600, MP700, MP730, MP750, MP760, MP780; mini260, mini320; TR150; Fax B215C, B230C, JX200, JX210P, JX500, JX510; Bubble Jet i70, i80, i250, i320, i350, i450, i455, i470, i470D, i475D, i550, i560, i850, i865, i6500; S100, S200, S300, S330; F20; BJC-2000/2010/2100/2110/2120/2125/4000/4100/4200/4300/4400/4550/4650/5100/5500; MultiPASS C20, C30, C50, C70, C75, C80, C530, C545, C555, C560, C635, C2500, C3000, C3500, C5000, C5500; Lexmark i3; X1110, X1130, X1150, X1170, X1180, X1185, X1190, X1250, X1270, X2230, X2240, X2250, X72, X74, X75; Z12, Z13, Z22, Z23, Z24, Z25, Z32, Z33, Z34, Z35, Z513, Z515, Z517, Z601, Z602, Z605, Z611, Z612, Z614, Z615, Z617, Z640, Z645; P3120, P3150, P05, P706, P707, Z703, Z705, Z706, Z707, Z715, JetPrinter-3200, 5000, 5700, 7000, 7200, Z11, 31, 42, 44, 45, 51, 52, 53, 54, F4770, X125, 4250, 4270, 63, 70, 73, 80, 83, 84, 85, P4350, P6250, P6350, P915, X2500, X2510, X2530, X2550, X3300, X3350, X3530, X3550, X4530, X4550, X5070, X5075, X5130, X5150, X5190pro, X5250, X5270, X5470, X5490, X5495, X6150, X6170, X6190pro, X7170, X7310, X7350, X8350, Z1300, Z1310, Z1320, Z1410, Z1420, Z55, Z65, Z810, Z812, Z815, Z816, Z818, Z845

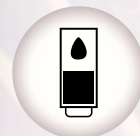

**Black
Пігментне**

Canon BCI-3e BK, BCI-15 BK, PG-30, PGI-35, PG-37, PG-40, PG-46, PG-47, PG-50, PG-84, PG-88, PG-89, PG-810, PG-830, BCI-21BK, BCI-24BK; Lexmark 10N0016 (16), 10N0217 (17), 017G0648E (48), 17G0050 (50), 17G0055 (55), 12A1970 (70), 15M3670E (71), 12A1975 (75), 18C0032 (32), 18C0034 (34), 18L0032 (82)

CPG40-090-MP

Canon PG-37/CL-38, PG-40/CL-41, PG-50/CL-51, PG-810/CL-811, PG-830/CL-831

Canon PIXMA iP1200, iP1300, iP1600, iP1700, iP1800, iP1880, iP1900, iP1980, iP2200, iP2500, iP2580, iP2600, iP2680, iP6210D, iP6220D; MP100, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP287, MP450, MP460, MP470; MX300, MX308, MX310, MX318; Fax JX200, JX210P, JX500, JX510

CPG46-090-MP

Canon PG-46/CL-56, PG-84/CL-94

Canon PIXMA Ink Efficiency E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340, E3440, E4240

90 г 180 г 1 кг

Black C40-294 C40-081 C40-084

BK/C/M/Y CPG40-090-MP — — —

BK/C/M/Y CPG46-090-MP — — —

Чорнило PG-445/ PG-46 BARVA для Canon



Canon PIXMA iP2800, iP2810, iP2820, iP2840, iP2850, iP2870S, iP2880, iP2880S, iP2890, iP2899; MG2400, MG2410, MG2420, MG2440, MG2450, MG2455, MG2460, MG2470, MG2490, MG2500, MG2510, MG2525, MG2530, MG2540, MG2550, MG2555, MG2560, MG2570, MG2570S, MG2577S, MG2580S, MG2590, MG2900, MG2910, MG2920, MG2924, MG2930, MG2932, MG2940, MG2950, MG2960, MG2965, MG2970, MG2980, MG2990, MG3000, MG3010, MG3020, MG3040, MG3050, MG3051, MG3052, MG3053, MG3060, MG3070S, MG3077S, MG3080, MG3090; MX490, MX492, MX493, MX494, MX495, MX496, MX498, MX499; TR4520, TR4530, TR4540, TR4550, TR4551, TR4560, TR4640, TR4650, TR4651; TS202, TS203, TS205, TS207, TS208, TS209, TS302, TS303, TS305, TS307, TS308, TS309, TS3110, TS3120, TS3130, TS3130S, TS3140, TS3150, TS3151, TS3160, TS3165, TS3166, TS3170, TS3180, TS3190, TS3320, TS3340, TS3350, TS3351, TS3360, TS3365, TS3370, TS3380, TS3450, TS3451, TS3465; Ink Efficiency E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340, E3440, E4240



Black
Водорозчинне Canon PG-46, PG-84, PG-145, PG-245, PG-345, G-445, PG-545, PG-645, PG-745, PG-845, PG-945

90 г 180 г 1 л

Black	C445-437	C445-441	C445-623
РВК/С/М/У	CPG445-090-PMP	_____	_____
ВК/С/М/У	CPG445-090-MP	CPG445-180-MP	
ВК/С/М/У комплект (фотопапір, рідина)	CPG445-CMP	_____	_____

Чорнило CL-446/ CL-56 BARVA для Canon



 
Canon PIXMA iP2800, iP2810, iP2820, iP2840, iP2850, iP2870S, iP2880, iP2880S, iP2890, iP2899; MG2400, MG2410, MG2420, MG2440, MG2450, MG2455, MG2460, MG2470, MG2490, MG2500, MG2510, MG2525, MG2530, MG2540, MG2550, MG2555, MG2560, MG2570, MG2570S, MG2577S, MG2580S, MG2590, MG2900, MG2910, MG2920, MG2924, MG2930, MG2932, MG2940, MG2950, MG2960, MG2965, MG2970, MG2980, MG2990, MG3000, MG3010, MG3020, MG3040, MG3050, MG3051, MG3052, MG3053, MG3060, MG3070S, MG3077S, MG3080, MG3090; MX490, MX492, MX493, MX494, MX495, MX496, MX498, MX499; TR4520, TR4530, TR4540, TR4550, TR4551, TR4560, TR4640, TR4650, TR4651; TS202, TS203, TS205, TS207, TS208, TS209, TS302, TS303, TS305, TS307, TS308, TS309, TS3110, TS3120, TS3130, TS3130S, TS3140, TS3150, TS3151, TS3160, TS3165, TS3166, TS3170, TS3180, TS3190, TS3320, TS3340, TS3350, TS3351, TS3360, TS3365, TS3370, TS3380, TS3450, TS3451, TS3465; Ink Efficiency E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340, E3440, E4240



Cyan
Водорозчинне



Magenta
Водорозчинне

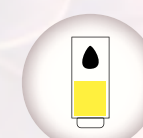

Yellow
Водорозчинне


Canon CL-56, CL-94, CL-146, CL-246, CL-346, CL-446, CL-546, CL-646, CL-746, CL-846, CL-946

90 г 180 г 1 л

Cyan	C446-438	C446-442	C446-624
Magenta	C446-439	C446-443	C446-625
Yellow	C446-440	C446-444	C446-626

Чорнило PG-440/ PG-510 BARVA для Canon

 Canon PIXMA iP1800, iP2500, iP2700, iP2702, iP2800, iP2810, iP2820, iP2840, iP2850, iP2870S, iP2880, iP2880S, iP2890, iP2899, iP3300, iP3500, iP3600, iP3680, iP4200, iP4300, iP4500, iP4600, iP4680, iP4700, iP4760, iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910, iP4920, iP4930, iP4940, iP4950, iP4970, iP4980, iP5200, iP5300, iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280, iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780; iX4000, iX5000, iX6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580, iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880; MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230, MG2240, MG2250, MG2260, MG2270, MG2400, MG2410, MG2420, MG2440, MG2450, MG2455, MG2460, MG2470, MG2490, MG2500, MG2510, MG2525, MG2530, MG2540, MG2550, MG2550S, MG2555, MG2560, MG2570, MG2570S, MG2577S, MG2580, MG2580S, MG2590, MG2900, MG2910, MG2920, MG2924, MG2930, MG2932, MG2940, MG2950, MG2960, MG2965, MG2970, MG2980, MG2990, MG3000, MG3010, MG3020, MG3040, MG3050, MG3051, MG3052, MG3053, MG3060, MG3070S, MG3077S, MG3080, MG3090, MG3100, MG3110, MG3120, MG3130, MG3140, MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3500, MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640, MG3640, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160, MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280, MG5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620, MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310, MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG6400, MG6410, MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660, MG6670, MG6680, MG6730, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280; MP210, MP220, MP230, MP235, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP470, MP480, MP490, MP492, MP495, MP499, MP500, MP510, MP520, MP530, MP540, MP545, MP550, MP558, MP560, MP568, MP600, MP610, MP620, MP628, MP630, MP638, MP640, MP648, MP800, MP810, MP830, MP900, MP950, MP960, MP970, MP980, MP988, MP990, MP996; MX300, MX310, MX320, MX330, MX340, MX350, MX360, MX371, MX372, MX374, MX375, MX376, MX377, MX378, MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX410, MX420, MX431, MX432, MX434, MX435, MX436, MX437, MX438, MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX490, MX492, MX493, MX494, MX495, MX496, MX498, MX499, MX511, MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528, MX531, MX532, MX534, MX535, MX536, MX537, MX538, MX700, MX714, MX715, MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX800, MX850, MX860, MX868, MX870, MX876, MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898, MX920, MX921, MX922, MX923, MX924, MX925, MX926, MX927, MX928; TR4520, TR4530, TR4540, TR4550, TR4551, TR4560, TR4640, TR4650, TR4651; TS202, TS203, TS205, TS207, TS208, TS209, TS302, TS303, TS305, TS307, TS308, TS309, TS3110, TS3120, TS3130, TS3130S, TS3140, TS3150, TS3151, TS3160, TS3165, TS3166, TS3170, TS3180, TS3190, TS3320, TS3340, TS3350, TS3351, TS3360, TS3365, TS3370, TS3380, TS3450, TS3451, TS3465, TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180

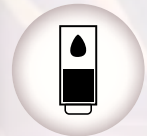

Black
Водорозчинне



Black
Пігментне

Canon PGI-5 PGBK, PGI-125/ PGI-225/ PGI-325/ PGI-425/ PGI-525/ PGI-725/ PGI-825 PGBK, PGI-150/ PGI-250/ PGI-350/ PGI-450/ PGI-550/ PGI-555/ PGI-650/ PGI-750/ PGI-850 PGBK, PGI-220/ PGI-520/ PGI-820 PGBK, PG-140/ PG-240/ PG-340/ PG-440/ PG-540/ PG-640/ PG-740/ PG-840 BK, PG-145/ PG-245/ PG-345/ PG-445/ PG-545/ PG-645/ PG-745/ PG-845/ PG-945 BK, PG-210/ PG-310/ PG-510/ PG-512/ PG-810 BK

Canon PGI-5 PGBK, PGI-125/ PGI-225/ PGI-325/ PGI-425/ PGI-525/ PGI-725/ PGI-825 PGBK, PGI-150/ PGI-250/ PGI-350/ PGI-450/ PGI-550/ PGI-555/ PGI-650/ PGI-750/ PGI-850 PGBK, PGI-220/ PGI-520/ PGI-820 PGBK, PG-140/ PG-240/ PG-340/ PG-440/ PG-540/ PG-640/ PG-740/ PG-840 BK, PG-145/ PG-245/ PG-345/ PG-445/ PG-545/ PG-645/ PG-745/ PG-845/ PG-945 BK, PG-275/ PG-575, PG-210/ PG-310/ PG-510/ PG-512/ PG-810 BK

	90 г	180 г	1 кг/ л	Service Pack
Black водорозчинне	C520-296	C520-250	C520-263	C520-ISP-B
Black пігментне	C520-297	C520-089	C520-627	—

Чорнило CLI-451/ CLI-521 BARVA для Canon

Canon BJC-8200; Bubble Jet I560, I865, I905D, I950, I965, I990, I9950; PIXMA iP3600, iP3680, iP4000, iP4200, iP4300, iP4500, iP4600, iP4680, iP4700, iP4760, iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910, iP4920, iP4930, iP4940, iP4950, iP4970, iP4980, iP5000, iP5200, iP5300, iP6000D, iP6600D, iP6700D, iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280, iP8500, iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780; iX4000, iX5000, iX6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580, iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880; MG5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620, MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310, MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG6400, MG6410, MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660, MG6670, MG6680, MG6730, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280; MP500, MP530, MP540, MP545, MP550, MP558, MP560, MP568, MP600, MP610, MP620, MP628, MP630, MP638, MP640, MP648, MP800, MP810, MP830, MP900, MP950, MP960, MP970, MP980, MP988, MP990, MP996; MX472, MX714, MX715, MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX800, MX850, MX860, MX868, MX870, MX876, MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898, MX920, MX921, MX922, MX923, MX924, MX925, MX926, MX927, MX928; S800, S820D, S830D, S900, S9000; Pro-9000



Black
Водорозчинне

Canon BCI-6BK, CLI-8BK, CLI-126/ CLI-226/ CLI-326/
CLI-426/ CLI-526/ CLI-726/ CLI-826 BK, CLI-151/ CLI-251/
CLI-351/ CLI-451/ CLI-551/ CLI-651/ CLI-751/ CLI-851 BK,
CLI-221/ CLI-521/ CLI-821 BK

90 г

180 г

1 кг

Service Pack

Black

C521-285

C521-056

C521-064

C521-ISP-B



Gray
Водорозчинне

Canon LI-126/ CLI-226/ CLI-326/ CLI-426/ CLI-526/
CLI-726/ CLI-826 GY, CLI-151/ CLI-251/ CLI-351/ CLI-451/
CLI-551/ CLI-651/ CLI-751/ CLI-851 GY, CLI-221/ CLI-521/
CLI-821 GY

90 г

180 г

1 кг

Service Pack

Gray

C521-469

C521-377

C521-634

 
C521-ISP-GY



Canon PIXMA iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780;
MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200,
MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310,
MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG7100, MG7110,
MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510,
MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120,
MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240,
MG8250, MG8270, MG8280; MP980, MP988, MP990, MP996

Чорнило CLI-441/ CLI-511 BARVA для Canon

Canon BJC-8200; Bubble Jet i70, i80, i560, i865, i905D, i950, i965, i990, i9950; PIXMA iP90, iP90V, iP100, iP110, iP1200, iP1300, iP1600, iP1700, iP1800, iP1880, iP1900, iP1980, iP2200, iP2500, iP2580, iP2600, iP2680, iP2700, iP2702, iP3000, iP3300, iP3500, iP3600, iP3680, iP4000, iP4200, iP4300, iP4500, iP4600, iP4680, iP4700, iP4760, iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910, iP4920, iP4930, iP4940, iP4950, iP4970, iP4980, iP5000, iP5200, iP5300, iP6000D, iP6210D, iP6220D, iP6600D, iP6700D, iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280, iP8500, iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780; iX4000, iX5000, iX6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580, iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880; MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230, MG2240, MG2250, MG2260, MG2270, MG2400, MG2500, MG2580, MG3100, MG3110, MG3120, MG3130, MG3140, MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3500, MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640, MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160, MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280, MG5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620, MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310, MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG6400, MG6410, MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660, MG6670, MG6680, MG6730, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280; MP100, MP140, MP145, MP150, MP160, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP230, MP235, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP287, MP450, MP460, MP470, MP480, MP490, MP492, MP495, MP499, MP500, MP510, MP520, MP530, MP540, MP545, MP550, MP558, MP560, MP568, MP600, MP610, MP620, MP628, MP630, MP638, MP640, MP648, MP800, MP810, MP830, MP900, MP950, MP960, MP970, MP980, MP988, MP990, MP996; MX300, MX308, MX310, MX318, MX320, MX330, MX340, MX350, MX360, MX371, MX372, MX374, MX375, MX376, MX377, MX378, MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX410, MX420, MX431, MX432, MX434, MX435, MX436, MX437, MX438, MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX511, MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528, MX531, MX532, MX534, MX535, MX536, MX537, MX538, MX700, MX714, MX715, MX715, MX721, MX722, MX725, MX726, MX727, MX728, MX800, MX850, MX860, MX868, MX870, MX876, MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898, MX920, MX921, MX922, MX923, MX924, MX925, MX926, MX927, MX928; S800, S820D, S830D, S900, S9000; mini260, mini320; TR150; Selphy DS700, DS810; Pro-9000; TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180; Fax JX200, JX210P, JX500, JX510

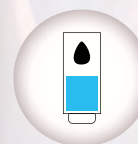


Сяан
Водорозчинне

Canon BCI-3C, BCI-6C, CLI-8C, BCI-15/ BCI-16, CLI-36C, CLI-126/ CLI-226/ CLI-326/ CLI-426/ CLI-526/ CLI-726/ CLI-826 C, CLI-151/ CLI-251/ CLI-351/ CLI-451/ CLI-551/ CLI-651/ CLI-751/ CLI-851 C, CLI-221/ CLI-521/ CLI-821 C, CL-31, CL-38/ CL-41/ CL-51, CL-141/ CL-241/ CL-341/ CL-441/ CL-541/ CL-641/ CL-741/ CL-841, CL-211/ CL-311/ CL-511/ CL-513/ CL-811



Маганта
Водорозчинне

 Canon BCI-3M, BCI-6M, CLI-8M, BCI-15/ BCI-16, CLI-36M, CLI-126/ CLI-226/ CLI-326/ CLI-426/ CLI-526/ CLI-726/ CLI-826 M, CLI-151/ CLI-251/ CLI-351/ CLI-451/ CLI-551/ CLI-651/ CLI-751/ CLI-851 M, CLI-221/ CLI-521/ CLI-821 M, CL-31, CL-38/ CL-41/ CL-51, CL-141/ CL-241/ CL-341/ CL-441/ CL-541/ CL-641/ CL-741/ CL-841, CL-211/ CL-311/ CL-511/ CL-513/ CL-811

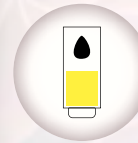

Жовтий
Водорозчинне

Canon BCI-3Y, BCI-6Y, CLI-8Y, BCI-15/ BCI-16, CLI-36Y, CLI-126/ CLI-226/ CLI-326/ CLI-426/ CLI-526/ CLI-726/ CLI-826 Y, CLI-151/ CLI-251/ CLI-351/ CLI-451/ CLI-551/ CLI-651/ CLI-751/ CLI-851 Y, CLI-221/ CLI-521/ CLI-821 Y, CL-31, CL-38/ CL-41/ CL-51, CL-141/ CL-241/ CL-341/ CL-441/ CL-541/ CL-641/ CL-741/ CL-841, CL-211/ CL-311/ CL-511/ CL-513/ CL-811

90 г

180 г

1 кг

Service Pack

Cyan

C521-286

C521-057

C521-065

C521-ISP-C

Magenta

C521-287

C521-058

C521-066

C521-ISP-M

Yellow

C521-288

C521-059

C521-067

C521-ISP-Y

Чорнило PFI-050 BARVA для Canon



Canon imagePROGRAF TC-20, TC-20M, TC-5200, TC-5200M



Black
Пігментне

Canon PFI-050BK,
PFI-8150BK



Цяно
Пігментне

Canon PFI-050C,
PFI-8150C



Магента
Пігментне

Canon PFI-050M,
PFI-8150M



Жовтий
Пігментне

Canon PFI-050Y,
PFI-8150Y

1К 100 мл

Black	C050-963-1K
Cyan	C050-964-1K
Magenta	C050-965-1K
Yellow	C050-966-1K
BK/C/M/Y	C050-1K-MP



Black
Водорозчинне

Epson T0481, T0771, T0781, T0791,
T0801, T0811, T0821, T0851, T2421,
T2431, T3121, T3781, T3791, T5591



Цяно
Водорозчинне

Epson T0482, T0772, T0782, T0792,
T0802, T0812, T0822, T0852, T2422,
T2432, T3122, T3782, T3792, T5592



Магента
Водорозчинне

Epson T0483, T0773, T0783, T0793,
T0803, T0813, T0823, T0853, T2423,
T2433, T3123, T3783, T3793, T5593



Жовтий
Водорозчинне

Epson T0484, T0774, T0784, T0794,
T0804, T0814, T0824, T0854, T2424,
T2434, T3124, T3784, T3794, T5594



Light Cyan
Водорозчинне

Epson T0485, T0775, T0785, T0795,
T0805, T0815, T0825, T0855, T2425,
T2435, T3125, T3785, T3795, T5595



Light Magenta
Водорозчинне

Epson T0486, T0776, T0786, T0796,
T0806, T0816, T0826, T0856, T2426,
T2436, T3126, T3786, T3796, T5596

100 мл

Photo Black	E059-445
Cyan	E059-450
Magenta	E059-449
Yellow	E059-452
Light Cyan	E059-451
Light Magenta	E059-448
Light Black	E059-446
Matte Black	E059-480
Light Light Black	E059-447
Light Black	E059-446
Matte Black	E059-480
Light Light Black	E059-447

Чорнило PFI-1000/ PFI-1700 BARVA для Canon



Canon imagePROGRAF iPF5000, iPF5100, iPF6000S, iPF6100, iPF6200, iPF6300, iPF6300S, iPF6350, iPF6400, iPF6400S, iPF6450, iPF8000, iPF8000S, iPF8100, iPF8300, iPF8300S, iPF9000, iPF9000S, iPF9100; imagePROGRAF PRO-520, PRO-521, PRO-540, PRO-540s, PRO-560, PRO-560s, PRO-561, PRO-1000, PRO-2000, PRO-2100, PRO-4000, PRO-4000S, PRO-4100, PRO-4100S, PRO-6000, PRO-6000S, PRO-6100, PRO-6100S

Photo Gray Пігментне

Canon PFI-51PGY, PFI-53PGY, PFI-57PGY, PFI-101PGY, PFI-103PGY, PFI-105PGY, PFI-106PGY, PFI-205PGY, PFI-206PGY, PFI-301PGY, PFI-304PGY, PFI-701PGY, PFI-702PGY, PFI-704PGY, PFI-706PGY, PFI-1000PGY, PFI-1100PGY, PFI-1300PGY, PFI-1700PGY

Canon imagePROGRAF iPF5000, iPF5100, iPF6000S, iPF6100, iPF6200, iPF6300, iPF6300S, iPF6350, iPF6400, iPF6400S, iPF6450, iPF8000, iPF8000S, iPF8100, iPF8300, iPF8300S, iPF9000, iPF9000S, iPF9100; imagePROGRAF PRO-300, PRO-520, PRO-521, PRO-540, PRO-540s, PRO-560, PRO-560s, PRO-561, PRO-1000, PRO-2000, PRO-2100, PRO-4000, PRO-4000S, PRO-4100, PRO-4100S, PRO-6000, PRO-6000S, PRO-6100, PRO-6100S

Red Пігментне

Canon PFI-51R, PFI-53R, PFI-57R, PFI-101R, PFI-105R, PFI-106R, PFI-205R, PFI-206R, PFI-300R, PFI-301R, PFI-304R, PFI-701R, PFI-704R, PFI-706R, PFI-1000R, PFI-1100R, PFI-1300R, PFI-1700R

Canon imagePROGRAF iPF5000, iPF5100, iPF6000S, iPF6100, iPF6200, iPF6300, iPF6300S, iPF6350, iPF6400, iPF6400S, iPF6450, iPF8000, iPF8000S, iPF8100, iPF8300, iPF8300S, iPF9000, iPF9000S, iPF9100; imagePROGRAF PRO-520, PRO-521, PRO-540, PRO-540s, PRO-560, PRO-560s, PRO-561, PRO-1000, PRO-2000, PRO-2100, PRO-4000, PRO-4000S, PRO-4100, PRO-4100S, PRO-6000, PRO-6000S, PRO-6100, PRO-6100S

Blue Пігментне

Canon PFI-51B, PFI-53B, PFI-57B, PFI-101B, PFI-105B, PFI-106B, PFI-205B, PFI-206B, PFI-301B, PFI-304B, PFI-701B, PFI-704B, PFI-706B, PFI-1000B, PFI-1100B, PFI-1300B, PFI-1700B

Canon imagePROGRAF PRO-300, PRO-520, PRO-521, PRO-540, PRO-540s, PRO-560, PRO-560s, PRO-561, PRO-1000, PRO-2000, PRO-2100, PRO-4000, PRO-4000S, PRO-4100, PRO-4100S, PRO-6000, PRO-6000S, PRO-6100, PRO-6100S

CO Пігментне

Canon PFI-51CO, PFI-53CO, PFI-57CO, PFI-300CO, PFI-1000CO, PFI-1100CO, PFI-1300CO, PFI-1700CO

100 мл

Photo Gray

E059-446

Red

E059-480

Blue

E059-447

CO

E059-448

Canon imagePROGRAF iPF5000, iPF5100, iPF6000S, iPF6100, iPF6200, iPF6300, iPF6300S, iPF6350, iPF6400, iPF6400S, iPF6450, iPF8000, iPF8000S, iPF8100, iPF8300, iPF8300S, iPF9000, iPF9000S, iPF9100; imagePROGRAF PRO-300, PRO-520, PRO-521, PRO-540, PRO-540s, PRO-560, PRO-560s, PRO-561, PRO-1000, PRO-2000, PRO-2100, PRO-4000, PRO-4000S, PRO-4100, PRO-4100S, PRO-6000, PRO-6000S, PRO-6100, PRO-6100S

Matte Black Пігментне

Canon PFI-51MBK, PFI-53MBK, PFI-57MBK, PFI-101MBK, PFI-103MBK, PFI-105MBK, PFI-106MBK, PFI-205MBK, PFI-206MBK, PFI-300MBK, PFI-301MBK, PFI-304MBK, PFI-701MBK, PFI-702MBK, PFI-704MBK, PFI-706MBK, PFI-1000MBK, PFI-1100MBK, PFI-1300MBK, PFI-1700MBK

Photo Black Пігментне

Canon PFI-51PBK, PFI-53PBK, PFI-57PBK, PFI-101PBK, PFI-103PBK, PFI-105PBK, PFI-106PBK, PFI-205PBK, PFI-206PBK, PFI-300PBK, PFI-301PBK, PFI-304PBK, PFI-701PBK, PFI-702PBK, PFI-704PBK, PFI-706PBK, PFI-1000PBK, PFI-1100PBK, PFI-1300PBK, PFI-1700PBK

Cyan Пігментне

Canon PFI-51C, PFI-53C, PFI-57C, PFI-101C, PFI-105C, PFI-106C, PFI-205C, PFI-206C, PFI-300C, PFI-301C, PFI-304C, PFI-701C, PFI-704C, PFI-706C, PFI-1000C, PFI-1100C, PFI-1300C, PFI-1700C

Magenta Пігментне

Canon PFI-51M, PFI-53M, PFI-57M, PFI-101M, PFI-105M, PFI-106M, PFI-205M, PFI-206M, PFI-300M, PFI-301M, PFI-304M, PFI-701M, PFI-704M, PFI-706M, PFI-1000M, PFI-1100M, PFI-1300M, PFI-1700M

Yellow Пігментне

Canon PFI-51Y, PFI-53Y, PFI-57Y, PFI-101Y, PFI-105Y, PFI-106Y, PFI-205Y, PFI-206Y, PFI-300Y, PFI-301Y, PFI-304Y, PFI-701Y, PFI-704Y, PFI-706Y, PFI-1000Y, PFI-1100Y, PFI-1300Y, PFI-1700Y

Photo Cyan Пігментне

Canon PFI-51PC, PFI-53PC, PFI-57PC, PFI-101PC, PFI-105PC, PFI-106PC, PFI-205PC, PFI-206PC, PFI-300PC, PFI-301PC, PFI-304PC, PFI-701PC, PFI-704PC, PFI-706PC, PFI-1000PC, PFI-1100PC, PFI-1300PC, PFI-1700PC

Photo Magenta Пігментне

Canon PFI-51PM, PFI-53PM, PFI-57PM, PFI-101PM, PFI-105PM, PFI-106PM, PFI-205PM, PFI-206PM, PFI-300PM, PFI-301PM, PFI-304PM, PFI-701PM, PFI-704PM, PFI-706PM, PFI-1000PM, PFI-1100PM, PFI-1300PM, PFI-1700PM

Gray Пігментне

Canon PFI-51GY, PFI-53GY, PFI-57GY, PFI-101GY, PFI-103GY, PFI-105GY, PFI-106GY, PFI-205GY, PFI-206GY, PFI-300GY, PFI-301GY, PFI-304GY, PFI-701GY, PFI-702GY, PFI-704GY, PFI-706GY, PFI-1000GY, PFI-1100GY, PFI-1300GY, PFI-1700GY

100 мл

Matte Black

E059-445

Photo Black

E059-450

Cyan

E059-449

Magenta

E059-452

Yellow

E059-451

Photo Cyan

E059-446

Photo Magenta

E059-480

Gray

E059-447

Чорнило універсальне №4 BARVA для Canon/ HP/ Lexmark



Canon PIXMA E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340; iP1200, iP1300, iP1600, iP1700, iP1800, iP1900, iP2500, iP2600, iP2200, iP2700, iP2702, iP2840, iP3000, iP3300, iP3500, iP3600, iP4000, iP4000R, iP4200, iP4200x, iP4300, iP4500, iP4500x, iP4600, iP4600x, iP4700, iP4840, iP4940, iP5000, iP5200, iP5200R, iP5300, iP7240; X4000, iX5000, iX6540, iX6840; MG2140, MG2240, MG2440, MG2540, MG2540S, MG2545S, MG2940, MG3040, MG3140, MG3240, MG3540, MG3640, MG4140, MG4240, MG5140, MG5240, MG5340, MG5440, MG5540, MG5640, MG6440, MG6640, MG6840; MP140, MP150, MP160, MP170, MP180, MP190, MP210, MP220, MP230, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP450, MP450x, MP460, MP470, P480, MP490, MP492, MP495, MP499, MP500, MP510, MP520, MP520x, MP530, MP540, P540x, MP550, MP560, MP600, MP600R, MP610, MP620, MP620B, MP630, MP640, MP800, P800R, MP810, MP830; MX320, MX330, MX340, MX350, MX360, MX374, MX394, MX410, MX420, MX434, MX454, MX474, MX494, MX514, MX524, MX534, MX700, MX714, MX850, MX860, MX870, MX884, MX894, MX924; TR7540, TR8540; TS204, TS304, TS3140, TS5040, TS5140, TS6040, TS6140



Black
Водорозчинне

Canon BCI-3eBK, PGI-5BK, BCI-6BK, CLI-8BK, PGI-520PGBK, CLI-521BK, PGI-425PGBK, CLI-426BK, PGI-450PGBK, CLI-451BK, PGI-470PGBK, CLI-471BK, PGI-480PGBK, CLI-481BK, PG-37, PG-40, PG-50, PG-510, PG-512, PG-445, PG-46, PG-84, PG-440; HP C6615DE (15), C9351AE (21), 51645AE (45), CC640HE (121), CH561HE (122); Lexmark 10N0016 (16), 10N0217 (17), 10NX217E (17X)



 
Cyan
Водорозчинне

Canon BCI-6C, CLI-8C, CLI-521C, CLI-426C, CLI-451C, CLI-471C, CLI-481C, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56, CL-94, CL-441; HP C9352AE (22), CC643HE (121), CH562HE (122); Lexmark 10N0026 (26), 10N0227 (27)



Magenta
Водорозчинне

Canon BCI-6M, CLI-8M, CLI-521M, CLI-426M, CLI-451M, CLI-471M, CLI-481M, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56, CL-94, CL-441; HP C9352AE (22), CC643HE (121), CH562HE (122); Lexmark 10N0026 (26), 10N0227 (27)

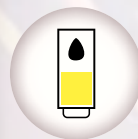

Yellow
Водорозчинне

Canon BCI-6Y, CLI-8Y, CLI-521Y, CLI-426Y, CLI-451Y, CLI-471Y, CLI-481Y, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56, CL-94, CL-441; HP C9352AE (22), CC643HE (121), CH562HE (122); Lexmark 10N0026 (26), 10N0227 (27)

	90 г	180 г	1 кг	Service Pack
Black	CU4-471	CU4-475	CU4-495	CU4-ISP-B
Cyan	CU4-472	CU4-476	CU4-500	CU4-ISP-C
Magenta	CU4-473	CU4-477	CU4-501	CU4-ISP-M
Yellow	CU4-474	CU4-478	CU4-502	CU4-ISP-Y
BK/C/M/Y	CU4-090-MP	CU4-180-MP	_____	_____

Чорнило ВСІ-21/ ВСІ-24 BARVA для Canon



Canon BJ-5, BJ-10e, BJ-10ex, BJ-10sx, BJ-20, BJ-30, BJ-100, BJ-200 series; BJC-50, BJC-70, BJC-80, BJC-85, BJC-200 series, BJC-1000 series, BJC-2000 series, BJC-4000 series, BJC-5100, BJC-5500 series, BJC-7000 series, BJC-8000 series; Fax B120, B190, B200, B220, B310, B320, B320F, B340, B340F, B360, B400; Faxphone B40, B45, B60, B70, B75, B95, B140, B150, B160, B170, B540, B550, B640; MultiPASS 800, 1000, C20, C30, C50, C70, C75, C80, C500 series, C635, C2500, C3000 series, C5000 series, C6000 series; CFX-B380IF; BN700 series; StarWriter Jet 300, 350C, 500, 550C, 4000; Bubble Jet i250, i320, i350, i450, i455, i470D, i475D; PIXMA iP1000, iP1500, iP2000; MP110, MP130, MP410; S100, S200, S200x, S300; SmartBase MP360, MP370, MP390; MPC190, MPC200

Цян, Magenta, Yellow

Canon BJC-50, BJC-70, BJC-80, BJC-85, BJC-200 series, BJC-1000 series, BJC-2000 series, BJC-4000 series, BJC-5100, BJC-5500, BJC-7000 series, BJC-8000 series; BN750; StarWriter Jet 350C, 550C; MP-C2500; S450 series; MultiPASS C20, C30, C50, C70, C75, C80, C530, C545, C555, C560, C635, C2500, C3000, C3500, C5000, C5500, C6000 series; Bubble Jet i250, i320, i350, i450, i455, i470D, i475D; S100, S200, S200x, S300; PIXMA iP1000, iP1500, iP2000; MP110, MP130, MP410; SmartBase MP360, MP370, MP390; MPC190, MPC200



Black

Водорозчинне



Цян

Водорозчинне



Magenta

Водорозчинне



Yellow

Водорозчинне

Canon BC-01, BC-02, BC-03, BC-10, BC-11, BC-12, BC-20, BC-22, BC-23, BC-29, BC-30, BC-33, BC-40, BC-60, BC-80, BCI-10, BCI-21, BCI-24, BX-3, BX-20

Canon BC-05, BC-06, BC-09F, BC-11, BC-12, BC-22, BC-29, BC-31, BC-40, BC-61, BC-81, BCI-11, BCI-21, BCI-24

Canon BC-05, BC-06, BC-09F, BC-11, BC-12, BC-22, BC-29, BC-31, BC-40, BC-61, BC-81, BCI-11, BCI-21, BCI-24

Canon BC-05, BC-06, BC-09F, BC-11, BC-12, BC-22, BC-29, BC-31, BC-40, BC-61, BC-81, BCI-11, BCI-21, BCI-24

Комплект:

Canon BCI-21BK, BCI-21C, BCI-24BK, BCI-24C

Canon BJC-2000, BJC-2010, BJC-2100, BJC-2110, BJC-2115, BJC-2120, BJC-2125, BJC-4000, BJC-4100, BJC-4200, BJC-4300, BJC-4400, BJC-4550, BJC-4650, BJC-5100, BJC-5500; MultiPass C20, C30, C50, C70, C75, C80, C530, C545, C555, C560, C635, C2500, C3000, C3500, C5000, C5500; Bubble Jet i250, i320, i350, i450, i455, i470D, i475D; S100, S200, S200x, S300; PIXMA iP1000, iP1500, iP2000; MP110, MP130, MP410; SmartBase MP360, MP370, MP390; MPC190, MPC200


100 мл

Black	C24-280
Cyan	C24-282
Magenta	C24-283
Yellow	C24-284
BK/C/M/Y	C24-090-MP

Комплект чорнил PG-510/ CL-511 BARVA для Canon



 Canon PIXMA iP1800, iP2500, iP2700, iP2702, iP3600, iP4600, iP4700; MP210, MP220, MP230, MP235, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP470, MP480, MP490, MP492, MP495, MP499, MP550, MP560, MP620, MP630, MP640, MP980, MP990; MX300, MX310, MX320, MX330, MX340, MX350, MX360, MX410, MX420, MX860, MX870



Canon PG-210/ CL-211, PG-310/ CL-311, PG-510/ CL-511, PG-512/ CL-513, PG-810/ CL-811

90 г


ВК/С/М/У

CPG510-090-MP

Комплект чорнил PG-510/ CL-511 «Комфортний перехід» BARVA для Canon



 Canon PIXMA iP1800, iP2500, iP2700, iP2702, iP3600, iP4600, iP4700; MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230, MG2240, MG2250, MG2260, MG2270, MG2400, MG2500, MG2580, MG3100, MG3110, MG3120, MG3130, MG3140, MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3500, MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640, MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160, MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280; MP210, MP220, MP230, MP235, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MX410, MX420, MP470, MP480, MP490, MP492, MP495, MP499, MP550, MP560, MP620, MP630, MP640, MP980, MP990; MX300, MX310, MX320, MX330, MX340, MX350, MX360, MX371, MX372, MX374, MX375, MX376, MX377, MX378, MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX431, MX432, MX434, MX435, MX436, MX437, MX438, MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX511, MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528, MX531, MX532, MX534, MX535, MX536, MX537, MX538, MX860, MX870; TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180



Canon PG-140/CL-141, PG-210/CL-211, PG-240/CL-241, PG-310/CL-311, PG-340/CL-341, PG-440/CL-441, PG-510/CL-511, PG-512/CL-513, PG-540/CL-541, PG-640/CL-641, PG-740/CL-741, PG-810/CL-811, PG-840/CL-841

90 г

ВК/С/М/У

КОМПЛЕКТ
(фотопапір, рідина)

CPGI520-CMP

Комплект чорнил PG-440/ CL-441 BARVA для Canon



Canon PIXMA MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230, MG2240, MG2250, MG2260, MG2270, MG2400, MG2500, MG2580, MG3100, MG3110, MG3120, MG3130, MG3140, MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3500, MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640, MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160, MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280; MX371, MX372, MX374, MX375, MX376, MX377, MX378, MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX431, MX432, MX434, MX435, MX436, MX437, MX438, MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX511, MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528, MX531, MX532, MX534, MX535, MX536, MX537, MX538; TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180



 
Canon PG-140/ CL-141, PG-240/ CL-241, PG-340/ CL-341, PG-440/ CL-441, PG-540/ CL-541, PG-640/ CL-641, PG-740/ CL-741, PG-840/ CL-841

БК/С/М/У 90 г **СРG440-090-МР**

Комплект чорнил PGI-450/ CLI-451 BARVA для Canon




Canon PIXMA iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280; iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880; MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620, MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6400, MG6410, MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660, MG6670, MG6680, MG6730; MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX920, MX921, MX922, MX923, MX924, MX925, MX926, MX927, MX928

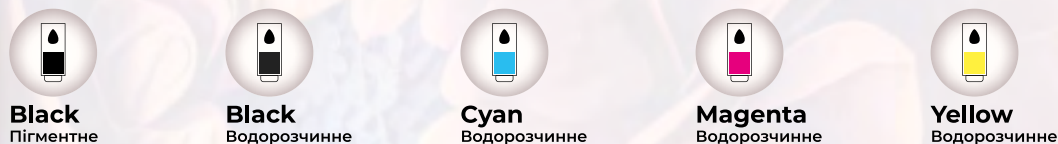

Canon PGI-150/CLI-151 PGBK/BK/C/M/Y, PGI-250/CLI-251 PGBK/BK/C/M/Y, PGI-350/CLI-351 PGBK/BK/C/M/Y, PGI-450/CLI-451 PGBK/BK/C/M/Y, PGI-550/CLI-551 PGBK/BK/C/M/Y, PGI-650/CLI-651 PGBK/BK/C/M/Y, PGI-750/CLI-751 PGBK/BK/C/M/Y, PGI-850/CLI-851 PGBK/BK/C/M/Y

РГВК/ВК/С/М/У 90 г **СРG1450-5-090-МР**

 Canon PIXMA iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780; MG6300, MG6310, G6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580

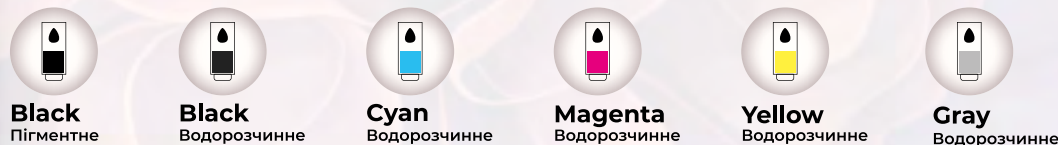


Canon PGI-150/CLI-151 PGBK/BK/C/M/Y/GY, PGI-250/CLI-251 PGBK/BK/C/M/Y/GY, PGI-350/CLI-351 PGBK/BK/C/M/Y/GY, PGI-450/CLI-451 PGBK/BK/C/M/Y/GY, PGI-550/CLI-551 PGBK/BK/C/M/Y/GY, PGI-650/CLI-651 PGBK/BK/C/M/Y/GY, PGI-750/CLI-751 PGBK/BK/C/M/Y/GY, PGI-850/CLI-851 PGBK/BK/C/M/Y/GY

РГВК/ВК/С/М/У/У 90 г **СРG1450-6-090-МР**

Комплект чорнил PGI-425/ CLI-426 BARVA для Canon



 
Canon PIXMA iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910, iP4920, iP4930, iP4940, iP4950, iP4970, iP4980; X6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580; G5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5520; MX472, MX714, MX715, MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898

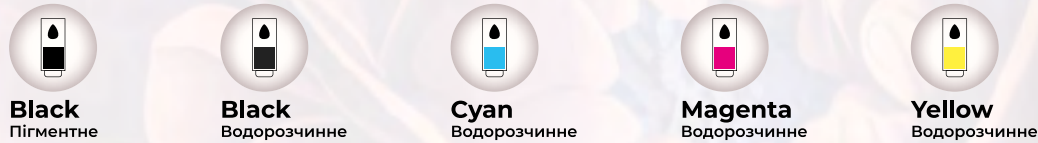

Canon PGI-125/CLI-126 PGBK/BK/C/M/Y, PGI-225/CLI-226 PGBK/BK/C/M/Y, PGI-325/CLI-326 PGBK/BK/C/M/Y, PGI-425/CLI-426 PGBK/BK/C/M/Y, PGI-525/CLI-526 PGBK/BK/C/M/Y, PGI-725/CLI-726 PGBK/BK/C/M/Y, PGI-825/CLI-826 PGBK/BK/C/M/Y

PGBK/BK/C/M/Y 90 г CPGI425-5-090-MP

 Canon PIXMA MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280

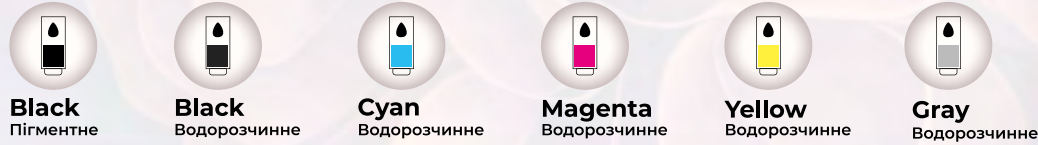

Canon PGI-125/CLI-126 PGBK/BK/C/M/Y/GY, PGI-225/CLI-226 PGBK/BK/C/M/Y/GY, PGI-325/CLI-326 PGBK/BK/C/M/Y/GY, PGI-425/CLI-426 PGBK/BK/C/M/Y/GY, PGI-525/CLI-526 PGBK/BK/C/M/Y/GY, PGI-725/CLI-726 PGBK/BK/C/M/Y/GY, PGI-825/CLI-826 PGBK/BK/C/M/Y/GY

PGBK/BK/C/M/Y/GY 90 г CPGI425-6-090-MP

Комплект чорнил Canon PGI-5/ CLI-8 BARVA для Canon



 
Canon PIXMA iP3300, iP3500, iP4200, iP4300, iP4500, iP5200, iP5300; iX4000, iX5000; MP500, MP510, MP520, MP530, MP600, MP610, MP800, MP810, MP830, MP900, MP950, MP960, MP970; MX700, MX800, MX850



Canon PGI-5/CLI-8 PGBK/C/M/Y

PGBK/C/M/Y 90 г CPGI5-4-090-MP

Canon PIXMA iP4200, iP4300, iP4500, iP5200, iP5300; iX4000, iX5000; MP500, MP530, MP600, MP610, MP800, MP810, MP830, MP900, MP950, MP960, MP970; X800, MX850

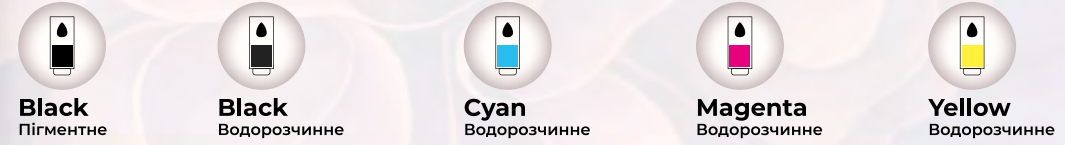


Canon PGI-5/CLI-8 PGBK/BK/C/M/Y

PGBK/BK/C/M/Y 90 г CPGI450-5-090-MP

Чорнило універсальне №4 BARVA для Canon/HP/Lexmark



 Canon PIXMA E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340; iP1200, iP1300, iP1600, iP1700, iP1800, iP1900, iP2500, iP2600, iP2200, iP2700, iP2702, iP2840, iP3000, iP3300, iP3500, iP3600, iP4000, iP4000R, iP4200, iP4200x, iP4300, iP4500, iP4500x, iP4600, iP4600x, iP4700, iP4840, iP4940, iP5000, iP5200, iP5200R, iP5300, iP7240; iX4000, iX5000, iX6540, iX6840; MG2140, MG2240, MG2440, MG2540, MG2540S, MG2545S, MG2940, MG3040, MG3140, MG3240, MG3540, MG3640, MG4140, MG4240, MG5140, MG5240, MG5340, MG5440, MG5540, MG5640, MG6440, MG6640, MG6840; MP140, MP150, MP160, MP170, MP180, MP190, MP210, MP220, MP230, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP450, MP450x, MP460, MP470, MP480, MP490, MP492, MP495, MP499, MP500, MP510, MP520, MP520x, MP530, MP540, MP540x, MP550, MP560, MP600, MP600R, MP610, MP620, MP620B, MP630, MP640, MP800, MP800R, MP810, MP830; MX320, MX330, MX340, MX350, MX360, MX374, MX394, MX410, MX420, MX434, MX454, MX474, MX494, MX514, MX524, MX534, MX700, MX714, MX850, MX860, MX870, MX884, MX894, MX924; TR7540, TR8540; TS204, TS304, TS3140, TS5040, TS5140, TS6040, TS6140

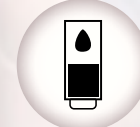

Black Водорозчинне

Canon BCI-3eBK, PGI-5BK, BCI-6BK, CLI-8BK, PGI-520PGBK, CLI-521BK, PGI-425PGBK, CLI-426BK, PGI-450PGBK, CLI-451BK, PGI-470PGBK, CLI-471BK, PGI-480PGBK, CLI-481BK, PG-37, PG-40, PG-50, PG-512, PG-445, PG-46, PG-84, PG-440; HP C6615DE (15), C9351AE (21), 51645AE (45), CC640HE (121), CH561HE (122); Lexmark 10N0016 (16), 10N0217 (17), 10NX217E (17X)



Cyan Водорозчинне

Canon BCI-6C, CLI-8C, CLI-521C, CLI-426C, CLI-451C, CLI-471C, CLI-481C, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56, CL-94, CL-441; HP C9352AE (22), CC643HE (121), CH562HE (122); Lexmark 10N0026 (26), 10N0227 (27)



Magenta Водорозчинне

Canon BCI-6M, CLI-8M, CLI-521M, CLI-426M, CLI-451M, CLI-471M, CLI-481M, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56, CL-94, CL-441; HP C9352AE (22), CC643HE (121), CH562HE (122); Lexmark 10N0026 (26), 10N0227 (27)



Yellow Водорозчинне

Canon BCI-6Y, CLI-8Y, CLI-521Y, CLI-426Y, CLI-451Y, CLI-471Y, CLI-481Y, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56, CL-94, CL-441; HP C9352AE (22), CC643HE (121), CH562HE (122); Lexmark 10N0026 (26), 10N0227 (27)

	90 г	180 г	1 кг	Service Pack
Black	CU4-471	CU4-475	CU4-495	CU4-1SP-B
Cyan	CU4-472	CU4-476	CU4-500	CU4-1SP-C
Magenta	CU4-473	CU4-477	CU4-501	CU4-1SP-M
Yellow	CU4-474	CU4-478	CU4-502	CU4-1SP-Y
BK/C/M/Y	CU4-090-MP	CU4-180-MP	—	—