

ЧОРНИЛО
ДЛЯ CANON

Чорнило GI-46 Barva для Canon



Canon MAXIFY GX3010, GX3020, GX3030, GX3040, GX3050, GX3060, GX3070, GX4010, GX4020, GX4030, GX4040, GX4050, GX4060, GX4070, GX5010, GX5020, GX5030, GX5040, GX5050, GX5060, GX5070, GX5540, GX6010, GX6020, GX6030, GX6040, GX6050, GX6060, GX6070, GX6550, GX7010, GX7020, GX7021, GX7030, GX7040, GX7050, GX7055, GX7060, GX7070



Black
Пігментне

Canon GI-16 BK, GI-26 BK, GI-36 BK, GI-46 BK, GI-56 BK, GI-66 BK, GI-76 BK



Cyan
Пігментне

Canon GI-16 C, GI-26 C, GI-36 C, GI-46 C, GI-56 C, GI-66 C, GI-76 C

135 мл



Magenta
Пігментне

Canon GI-16 M, GI-26 M, GI-36 M, GI-46 M, GI-56 M, GI-66 M, GI-76 M

170 мл



Yellow
Пігментне

Canon GI-16 Y, GI-26 Y, GI-36 Y, GI-46 Y, GI-56 Y, GI-66 Y, GI-76 Y

1 л

Black	CGI46-903e	CGI46-907e	CGI46-1024
Cyan	CGI46-904e	—	CGI46-1025
Magenta	CGI46-905e	—	CGI46-1026
Yellow	CGI46-906e	—	CGI46-1027
BK/C/M/Y	CGI46-135-MP	—	—

Чорнило GI-43 Barva для Canon



Canon PIXMA G510, G540, G550, G570, G580, G590, G595, G610, G620, G640, G650, G670, G680, G690, G695



Black
Водорозчинне

Canon GI-13 BK, GI-23 BK, GI-43 BK, GI-53 BK, GI-73 BK, GI-83 BK, GI-93 BK



Cyan
Водорозчинне

Canon GI-13 C, GI-23 C, GI-43 C, GI-53 C, GI-73 C, GI-83 C, GI-93 C



Magenta
Водорозчинне

Canon GI-13 M, GI-23 M, GI-43 M, GI-53 M, GI-73 M, GI-83 M, GI-93 M



Yellow
Водорозчинне

Canon GI-13 Y, GI-23 Y, GI-43 Y, GI-53 Y, GI-73 Y, GI-83 Y, GI-93 Y



Red
Водорозчинне

Canon GI-13 R, GI-23 R, GI-43 R, GI-53 R, GI-73 R, GI-83 R, GI-93 R



Gray
Водорозчинне

Canon GI-13 GY, GI-23 GY, GI-43 GY, GI-53 GY, GI-73 GY, GI-83 GY, GI-93 GY

70 мл

1 л

Black	CGI43-841e	CGI43-1028
Cyan	CGI43-842e	CGI43-1029
Magenta	CGI43-843e	CGI43-1030
Yellow	CGI43-844e	CGI43-1031
Red	CGI43-845e	CGI43-1032
Gray	CGI43-846e	CGI43-1033
BK/C/M/Y/R/GY	CGI43-070-MP	—

Чорнило GI-41 Barva для Canon



Canon PIXMA G1020, G1220, G1420, G1430, G1460, G1520, G1530, G1560, G1820, G1920, G1922, G2020, G2021, G2060, G2160, G2260, G2420, G2430, G2460, G2470, G2520, G2560, G2570, G2820, G2860, G2920, G2923, G2960, G2962, G3020, G3060, G3160, G3260, G3420, G3430, G3460, G3470, G3520, G3560, G3570, G3571, G3572, G3620, G3630, G3660, G3670, G3675, G3820, G3821, G3860, G3920, G3923, G3960, G3962, G3963, G4470, G4570, G4670



Black
Пігментне

Canon GI-11 PGBK, GI-21 PGBK, GI-41 PGBK, GI-51 PGBK, GI-61 PGBK, GI-71 PGBK, GI-81 PGBK, GI-91 PGBK



Циан
Водорозчинне

Canon GI-11 C, GI-21 C, GI-41 C, GI-51 C, GI-61 C, GI-71 C, GI-81 C, GI-91 C



Мagenta
Водорозчинне

Canon GI-11 M, GI-21 M, GI-41 M, GI-51 M, GI-61 M, GI-71 M, GI-81 M, GI-91 M



Yellow
Водорозчинне

Canon GI-11 Y, GI-21 Y, GI-41 Y, GI-51 Y, GI-61 Y, GI-71 Y, GI-81 Y, GI-91 Y

70 мл

135 мл

1 л

Black	CGI41-805e	CGI41-809e	CGI41-813
Cyan	CGI41-806e	CGI41-810e	CGI41-814
Magenta	CGI41-807e	CGI41-811e	CGI41-815
Yellow	CGI41-808e	CGI41-812e	CGI41-816
PGBK/C/M/Y	CGI41-070-MP	CGI41-135-MP	—

Чорнило GI-40 Barva для Canon



Black

Canon PIXMA G5010, G5011, G5020, G5030, G5040, G5050, G5070, G5090, G5092, G6010, G6011, G6020, G6030, G6040, G6050, G6060, G6065, G6070, G6090, G6091, G6092, G7010, G7011, G7020, G7030, G7040, G7050, G7060, G7070, G7090; GM2010, GM2011, GM2030, GM2040, GM2050, GM2070, GM2090, GM2092, GM2400, GM4010, GM4011, GM4030, GM4040, GM4050, GM4070, GM4090

Циан, Magenta, Yellow

Canon PIXMA G5010, G5011, G5020, G5030, G5040, G5050, G5070, G5090, G5092, G6010, G6011, G6020, G6030, G6040, G6050, G6060, G6065, G6070, G6090, G6091, G6092, G7010, G7011, G7020, G7030, G7040, G7050, G7060, G7070, G7090



Black
Пігментне

Canon GI-10 PGBK, GI-20 PGBK, GI-30 PGBK, GI-40 PGBK, GI-50 PGBK, GI-60 PGBK, GI-70 PGBK, GI-90 PGBK



Циан
Водорозчинне

Canon GI-10 C, GI-20 C, GI-30 C, GI-40 C, GI-50 C, GI-60 C, GI-70 C, GI-90 C



Мagenta
Водорозчинне

Canon GI-10 M, GI-20 M, GI-30 M, GI-40 M, GI-50 M, GI-60 M, GI-70 M, GI-90 M



Yellow
Водорозчинне

Canon GI-10 Y, GI-20 Y, GI-30 Y, GI-40 Y, GI-50 Y, GI-60 Y, GI-70 Y, GI-90 Y

70 мл

135 мл

1 л

Black	CGI40-837e	CGI40-747e	CGI40-1034
Cyan	CGI40-838e	CGI40-748e	CGI40-1035
Magenta	CGI40-839e	CGI40-749e	CGI40-1036
Yellow	CGI40-840e	CGI40-750e	CGI40-1037
PGBK/C/M/Y	CGI40-070-MP	CGI40-135-MP	—

Чорнило GI-490 Barva для Canon



Canon PIXMA G1000, G1010, G1100, G1110, G1200, G1210, G1300, G1310, G1400, G1410, G1411, G1500, G1501, G1510, G1600, G1700, G1800, G1810, G1900, G1910, G2000, G2002, G2010, G2012, G2100, G2101, G2110, G2200, G2210, G2300, G2400, G2410, G2411, G2415, G2416, G2500, G2501, G2510, G2600, G2700, G2800, G2900, G3000, G3010, G3012, G3100, G3102, G3110, G3200, G3202, G3300, G3310, G3400, G3410, G3411, G3415, G3416, G3500, G3501, G3510, G3600, G3610, G3700, G3800, G3900, G4000, G4010, G4085, G4100, G4110, G4200, G4210, G4300, G4400, G4410, G4411, G4500, G4510, G4511, G4600, G4610, G4700, G4800, G4900



Black
Пігментне

Canon GI-190 BK, GI-290 BK, GI-390 BK, GI-490 BK, GI-590 BK, GI-690 BK, GI-790 BK, GI-890 BK, GI-990 BK



Циан
Водорозчинне

Canon GI-190 BK, GI-290 BK, GI-390 BK, GI-490 BK, GI-590 BK, GI-690 BK, GI-790 BK, GI-890 BK, GI-990 BK



Magenta
Водорозчинне

Canon GI-190 M, GI-290 M, GI-390 M, GI-490 M, GI-590 M, GI-690 M, GI-790 M, GI-890 M, GI-990 M



Yellow
Водорозчинне

Canon GI-190 Y, GI-290 Y, GI-390 Y, GI-490 Y, GI-590 Y, GI-690 Y, GI-790 Y, GI-890 Y, GI-990 Y

70 мл

1 л

Black	G490-507e	G490-615
Cyan	G490-508e	G490-616
Magenta	G490-509e	G490-617
Yellow	G490-510e	G490-618
BK/C/M/Y	CG490-070-MP	—

Чорнило PG-460 Barva для Canon



Canon PIXUS TS5330, TS5430; PIXMA TS5300, TS5320, TS5340, TS5350, TS5351, TS5352, TS5353, TS5360, TS5365, TS5370, TS5380, TS5391, TS5392, TS6420, TS7440, TS7450, TS7451; TR7020, TR7060



Black
Пігментне

Canon BC-360, PG-260, PG-460, PG-560, PG-660, PG-760, PG-860, PG-960

100 мл

1 л

Black

C460-727

C460-1038

БК/С/М/У

СРG460-100-МР

Чорнило CL-461 Barva для Canon



Canon PIXUS TS5330, TS5430; PIXMA TS5300, TS5320, TS5340, TS5350, TS5351, TS5352, TS5353, TS5360, TS5365, TS5370, TS5380, TS5391, TS5392, TS6420, TS7440, TS7450, TS7451; TR7020, TR7060



 
Сяан
Водорозчинне

Canon BC-361, CL-261, CL-461, CL-561, CL-661, CL-761, CL-861, CL-961



Magenta
Водорозчинне

Canon BC-361, CL-261, CL-461, CL-561, CL-661, CL-761, CL-861, CL-961

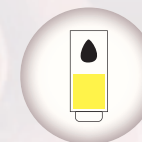

Yellow
Водорозчинне

Canon BC-361, CL-261, CL-461, CL-561, CL-661, CL-761, CL-861, CL-961

100 мл

1 л

Сяан

C461-728

C461-1039

Magenta

C461-729

C461-1040

Yellow

C461-730

C461-1041

Чорнило PGI-470/ PGI-480 Barva для Canon



Black
Пігментне

Canon PGI-170 PGBK, PGI-180 PGBK, PGI-270 PGBK, PGI-280 PGBK, PGI-370 PGBK, PGI-380 PGBK, PGI-470 PGBK, PGI-480 PGBK, PGI-570 PGBK, PGI-580 PGBK, PGI-670 PGBK, PGI-680 PGBK, PGI-770 PGBK, PGI-780 PGBK, PGI-870 PGBK, PGI-880 PGBK, PGI-970 PGBK, PGI-980 PGBK

100 мл

1 л

Black	C470-552e	C470-661
PGBK/BK/C/M/Y	CPGI470-100-MP	—
PGBK/BK/C/M/Y/GY	CPGI470-100-2MP	—
PGBK/BK/C/M/Y	CPGI480-100-MP	—
PGBK/BK/C/M/Y/PB	CPGI480-100-2MP	—

Чорнило CLI-471/ CLI-481 Barva для Canon

Black, Cyan, Magenta, Yellow

Canon PIXUS MG5730/ MG6930/ MG7730; TR7530/ TR8530; TS703/ TS5030/ TS6030/ TS6130/ TS6230/ TS6330/ TS8030/ TS8130/ TS8230/ TS8330/ TS9030/ TS9130/ TS9530; PIXMA MG5700/ MG5710/ MG5720/ MG5722/ MG5740/ MG5750/ MG5751/ MG5752/ MG5753/ MG5760/ MG5770/ MG5780/ MG5790/ MG6800/ MG6810/ MG6820/ MG6840/ MG6850/ MG6851/ MG6852/ MG6853/ MG6860/ MG6870/ MG6880/ MG6890/ MG7700/ MG7710/ MG7720/ MG7740/ MG7750/ MG7751/ MG7752/ MG7753/ MG7760/ MG7770/ MG7780/ MG7790; TR7500/ TR7510/ TR7520/ TR7540/ TR7550/ TR7560/ TR7570/ TR7580/ TR7590/ TR8500/ TR8510/ TR8520/ TR8540/ TR8550/ TR8560/ TR8570/ TR8580/ TR8590/ TR8620; TS701/ TS702/ TS704/ TS705/ TS706/ TS707/ TS708/ TS709/ TS5010/ TS5020/ TS5040/ TS5050/ TS5051/ TS5053/ TS5055/ TS5060/ TS5070/ TS5080/ TS5090/ TS6000/ TS6010/ TS6020/ TS6040/ TS6050/ TS6051/ TS6052/ TS6060/ TS6070/ TS6080/ TS6090/ TS6100/ TS6110/ TS6120/ TS6140/ TS6150/ TS6151/ TS6160/ TS6170/ TS6180/ TS6190/ TS6210/ TS6220/ TS6240/ TS6241/ TS6250/ TS6251/ TS6260/ TS6270/ TS6280/ TS6290/ TS6310/ TS6320/ TS6340/ TS6350/ TS6351/ TS6360/ TS6370/ TS6380/ TS6390/ TS8010/ TS8020/ TS8040/ TS8050/ TS8051/ TS8052/ TS8053/ TS8060/ TS8070/ TS8080/ TS8090/ TS8110/ TS8120/ TS8140/ TS8150/ TS8151/ TS8152/ TS8160/ TS8170/ TS8180/ TS8190/ TS8210/ TS8220/ TS8240/ TS8241/ TS8242/ TS8250/ TS8251/ TS8260/ TS8270/ TS8280/ TS8290/ TS8310/ TS8320/ TS8340/ TS8350/ TS8351/ TS8352/ TS8360/ TS8370/ TS8380/ TS8390/ TS9010/ TS9020/ TS9040/ TS9050/ TS9055/ TS9060/ TS9070/ TS9080/ TS9090/ TS9110/ TS9120/ TS9140/ TS9150/ TS9155/ TS9160/ TS9170/ TS9180/ TS9190/ TS9510/ TS9520/ TS9540/ TS9541/ TS9550/ TS9551/ TS9560/ TS9570/ TS9580/ TS9590

Gray

Canon PIXUS MG7730; TS8030/ TS9030; PIXMA MG7700/ MG7710/ MG7720/ MG7740/ MG7750/ MG7751/ MG7752/ MG7753/ MG7760/ MG7770/ MG7780/ MG7790; TS8010/ TS8020/ TS8040/ TS8050/ TS8051/ TS8052/ TS8053/ TS8060/ TS8070/ TS8080/ TS8090/ TS9010/ TS9020/ TS9040/ TS9050/ TS9055/ TS9060/ TS9070/ TS9080/ TS9090

Photo Blue

Canon PIXMA TR7500/ TR7550/ TR8500/ TR8550; TS6100/ TS6150/ TS6151/ TS6240/ TS6241/ TS6250/ TS6251/ TS6251/ TS6290/ TS6320/ TS6350/ TS6350a/ TS6351/ TS705/ TS705a/ TS8120/ TS8140/ TS8150/ TS8151/ TS8152/ TS8160/ TS8170/ TS8180/ TS8190/ TS8195/ TS8220/ TS8240/ TS8241/ TS8242/ TS8250/ TS8251/ TS8260/ TS8280/ TS8290/ TS8320/ TS8340/ TS8350/ TS8351/ TS8352/ TS8360/ TS8370/ TS9120/ TS9140/ TS9150/ TS9155/ TS9160/ TS9170/ TS9180/ TS9540/ TS9541C/ TS9550/ TS9551C/ TS9590



Black
Водорозчинне

Canon CLI-171 BK, CLI-181 BK, CLI-271 BK, CLI-281 BK, CLI-371 BK, CLI-381 BK, CLI-471 BK, CLI-481 BK, CLI-571 BK, CLI-581 BK, CLI-671 BK, CLI-681 BK, CLI-771 BK, CLI-781 BK, CLI-871 BK, CLI-881 BK, CLI-971 BK, CLI-981 BK



Yellow
Водорозчинне

Canon CLI-171 Y, CLI-181 Y, CLI-271 Y, CLI-281 Y, CLI-371 Y, CLI-381 Y, CLI-471 Y, CLI-481 Y, CLI-571 Y, CLI-581 Y, CLI-671 Y, CLI-681 Y, CLI-771 Y, CLI-781 Y, CLI-871 Y, CLI-881 Y, CLI-971 Y, CLI-981 Y



Cyan
Водорозчинне

Canon CLI-171 C, CLI-181 C, CLI-271 C, CLI-281 C, CLI-371 C, CLI-381 C, CLI-471 C, CLI-481 C, CLI-571 C, CLI-581 C, CLI-671 C, CLI-681 C, CLI-771 C, CLI-781 C, CLI-871 C, CLI-881 C, CLI-971 C, CLI-981 C



Gray
Водорозчинне

Canon CLI-171 GY, CLI-271 GY, CLI-371 GY, CLI-471 GY, CLI-571 GY, CLI-671 GY, CLI-771 GY, CLI-871 GY, CLI-971 GY



Magenta
Водорозчинне

Canon CLI-171 M, CLI-181 M, CLI-271 M, CLI-281 M, CLI-371 M, CLI-381 M, CLI-471 M, CLI-481 M, CLI-571 M, CLI-581 M, CLI-671 M, CLI-681 M, CLI-771 M, CLI-781 M, CLI-871 M, CLI-881 M, CLI-971 M, CLI-981 M



Photo Blue
Водорозчинне

Canon CLI-181 PB, CLI-281 PB, CLI-381 PB, CLI-481 PB, CLI-581 PB, CLI-681 PB, CLI-781 PB, CLI-881 PB, CLI-981 PB

100 мл

1 л

Black	C471-553e	C471-662
Cyan	C471-554e	C471-663
Magenta	C471-555e	C471-664
Yellow	C471-556e	C471-665
Gray	C471-557e	C471-666
Photo Blue	C471-985	C481-986

Чорнило PFI-120/ PFI-710 Barva для Canon



Canon imagePROGRAF GP-200, GP-300, GP-5200, GP-5300; TA-20, TA-30, TA-5200, TA-5300; TM-200, TM-205, TM-300, TM-305, TM-5200, TM-5205, TM-5300, TM-5305; TX-2000, TX-2100, TX-3000, TX-3100, TX-4000, TX-4100, TX-5200, TX-5210, TX-5300, TX-5310, TX-5400, TX-5410; TZ-5300, TZ-30000



Matte Black
Пігментне

Canon PFI-030MBK, PFI-110MBK, PFI-120MBK, PFI-310MBK, PFI-320MBK, PFI-340MBK, PFI-710MBK, PFI-740MBK, PFI-8030MBK, PFI-8110MBK, PFI-8120MBK, PFI-8310MBK, PFI-8320MBK, PFI-8340MBK, PFI-8710MBK, PFI-8740MBK



Black
Пігментне

Canon PFI-030BK, PFI-110BK, PFI-120BK, PFI-310BK, PFI-320BK, PFI-340BK, PFI-710BK, PFI-740BK, PFI-8030BK, PFI-8110BK, PFI-8120BK, PFI-8310BK, PFI-8320BK, PFI-8340BK, PFI-8710BK, PFI-8740BK



Циан
Пігментне

Canon PFI-030C, PFI-110C, PFI-120C, PFI-310C, PFI-320C, PFI-340C, PFI-710C, PFI-740C, PFI-8030C, PFI-8110C, PFI-8120C, PFI-8310C, PFI-8320C, PFI-8340C, PFI-8710C, PFI-8740C



Magenta
Пігментне

Canon PFI-030M, PFI-110M, PFI-120M, PFI-310M, PFI-320M, PFI-340M, PFI-710M, PFI-740M, PFI-8030M, PFI-8110M, PFI-8120M, PFI-8310M, PFI-8320M, PFI-8340M, PFI-8710M, PFI-8740M



Yellow
Пігментне

Canon PFI-030Y, PFI-110Y, PFI-120Y, PFI-310Y, PFI-320Y, PFI-340Y, PFI-710Y, PFI-740Y, PFI-8030Y, PFI-8110Y, PFI-8120Y, PFI-8310Y, PFI-8320Y, PFI-8340Y, PFI-8710Y, PFI-8740Y

	100 мл	1 л
Matte Black	C120-893e	C120-898
Black	C120-894e	C120-899
Cyan	C120-895e	C120-900
Magenta	C120-896e	C120-901
Yellow	C120-897e	C120-902

Чорнило PFI-102/ PFI-107 Barva для Canon



Canon imagePROGRAF iPF500, iPF510, iPF600, iPF605, iPF610, iPF650, iPF655, iPF670, iPF670E, iPF680, iPF685, iPF700, iPF710, iPF720, iPF750, iPF755, iPF760, iPF765, iPF770, iPF780, iPF785, iPF810, iPF815, iPF820, iPF825, iPF830, iPF840, iPF850; LP-17, LP-24



Matte Black
Пігментне

Canon PFI-007MBK, PFI-102MBK, PFI-107MBK, PFI-207MBK, PFI-303MBK, PFI-307MBK, PFI-703MBK, PFI-707MBK



Black
Водорозчинне

Canon PFI-007BK, PFI-102BK, PFI-107BK, PFI-207BK, PFI-303BK, PFI-307BK, PFI-703BK, PFI-707BK



Циан
Водорозчинне

Canon PFI-007C, PFI-102C, PFI-107C, PFI-207C, PFI-303C, PFI-307C, PFI-703C, PFI-707C



Magenta
Водорозчинне

Canon PFI-007M, PFI-102M, PFI-104M, PFI-107M, PFI-207M, PFI-303M, PFI-307M, PFI-703M, PFI-707M



Yellow
Водорозчинне

Canon PFI-007Y, PFI-102Y, PFI-107Y, PFI-207Y, PFI-303Y, PFI-307Y, PFI-703Y, PFI-707Y

100 мл

1 л

Matte Black	C107-883e	C107-888
Black	C107-884e	C107-889
Cyan	C107-885e	C107-890
Magenta	C107-886e	C107-891
Yellow	C107-887e	C107-892

Чорнило PGI-1400/ PGI-2400 Barva для Canon



Canon MAXIFY IB4010, IB4020, IB4030, IB4040, IB4050, IB4060, IB4070, IB4080, IB4090, IB4110, IB4120, IB4130, IB4140, IB4150, IB4160, IB4170, IB4180, IB4190; MB2000, MB2010, MB2020, MB2030, MB2040, MB2050, MB2060, MB2070, MB2080, MB2090, MB2110, MB2120, MB2130, MB2140, MB2150, MB2155, MB2160, MB2170, MB2180, MB2190, MB2300, MB2310, MB2320, MB2330, MB2340, MB2350, MB2360, MB2370, MB2380, MB2390, MB2710, MB2720, MB2730, MB2740, MB2750, MB2755, MB2760, MB2770, MB2780, MB2790, MB5010, MB5020, MB5030, MB5040, MB5050, MB5060, MB5070, B5080, MB5090, MB5100, MB5110, MB5120, MB5130, MB5140, MB5150, MB5155, MB5160, MB5170, MB5180, MB5190, MB5310, MB5320, MB5330, MB5340, MB5350, MB5360, MB5370, MB5380, MB5390, MB5410, MB5420, MB5430, MB5440, MB5450, MB5455, MB5460, MB5470, MB5480, MB5490



Black
Пігментне

Canon PGI-1100BK, PGI-1200BK, PGI-1300BK, PGI-1400BK, PGI-1500BK, PGI-1600BK, PGI-1700BK, PGI-1800BK, PGI-1900BK, PGI-2100BK, PGI-2200BK, PGI-2300BK, PGI-2400BK, PGI-2500BK, PGI-2600BK, PGI-2700BK, PGI-2800BK, PGI-2900BK



Циан
Пігментне

Canon PGI-1100C, PGI-1200C, PGI-1300C, PGI-1400C, PGI-1500C, PGI-1600C, PGI-1700C, PGI-1800C, PGI-1900C, PGI-2100C, PGI-2200C, PGI-2300C, PGI-2400C, PGI-2500C, PGI-2600C, PGI-2700C, PGI-2800C, PGI-2900C



Magenta
Пігментне

Canon PGI-1100M, PGI-1200M, PGI-1300M, PGI-1400M, PGI-1500M, PGI-1600M, PGI-1700M, PGI-1800M, PGI-1900M, PGI-2100M, PGI-2200M, PGI-2300M, PGI-2400M, PGI-2500M, PGI-2600M, PGI-2700M, PGI-2800M, PGI-2900M



Yellow
Пігментне

Canon PGI-1100Y, PGI-1200Y, PGI-1300Y, PGI-1400Y, PGI-1500Y, PGI-1600Y, PGI-1700Y, PGI-1800Y, PGI-1900Y, PGI-2100Y, PGI-2200Y, PGI-2300Y, PGI-2400Y, PGI-2500Y, PGI-2600Y, PGI-2700Y, PGI-2800Y, PGI-2900Y

100 мл


1 л

Black	C1400-924	C1400-1042
Cyan	C1400-925	C1400-1043
Magenta	C1400-926	C1400-1044
Yellow	C1400-927	C1400-1045
BK/C/M/Y	C1400-100-MP	—

Чорнило PG-40 Barva для Canon



 Canon PIXMA BJC-3000, BJC-5000, BJC-6000, BJC-6100, BJC-6200, BJC-6500; iP90, iP90V, iP100, iP110, iP1200, iP1300, iP1600, iP1700, iP1800, iP1880, iP1900, iP1980, iP2200, iP2500, iP2580, iP2600, iP2680, iP3000, iP4000, iP5000, iP6000D, iP6210D, iP6220D; MP100, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP287, MP450, MP460, MP470, MP750, MP760, P780; MX300, MX308, MX310, MX318; S400, S450, S500, S520, S530, S530D, S600, S630, S750, S4500, S5400, S6300; mini260, mini320; TR150; Bubble Jet i70, i80, i550, i560, i850, i865, i6500; SmartBase MP700, MP730; MPC400, MPC600; Fax JX200, JX210P, JX500, JX510; MultiPASS C100



Black
Водорозчинне

Canon BCI-3e BK, BCI-15 BK, PG-30, PGI-35, PG-37, PG-40, PG-50, PG-810, PG-830

100 мл

1 л

Black

C40-293e

C40-083

Чорнило PG-40/ PG-46 Barva для Canon



Canon PIXMA BJC-3000, BJC-5000, BJC-6000, BJC-6100, BJC-6200, BJC-6500; Ink Efficiency E204, E304, E404, E410, E414, E417, E464, E470, E474, E477, E484, E500, E510, E514, E560, E600, E610, E3140, E3170, E3340, E3370, E3440, E4240, E4270, E4570; iP90, iP90V, iP100, iP110, iP1000, iP1200, iP1300, iP1500, iP1600, iP1700, iP1800, iP1880, iP1900, iP1980, iP2000, iP2200, iP2500, iP2580, iP2600, iP2680, iP3000, iP4000, iP5000, iP6000D, iP6210D, iP6220D; MP100, MP110, MP130, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP287, MP450, MP460, MP470; MX300, MX308, MX310, MX318; S400, S450, S500, S520, S530, S530D, S600, S630, S750, S4500, S6300; SmartBase MP360, MP370, MP390, MPC190, MPC200, MPC400, MPC600, MP700, MP730, MP750, MP760, MP780; mini260, mini320; TR150; Fax B215C, B230C, JX200, JX210P, JX500, JX510; Bubble Jet i70, i80, i250, i320, i350, i450, i455, i470, i470D, i475D, i550, i560, i850, i865, i6500; S100, S200, S300, S330; F20; BJC-2000/2010/2100/2110/2115/2120/2125/4000/4100/4200/4300/4400/4500/4600/5100/5500; MultiPASS C20, C30, C50, C70, C75, C80, C530, C545, C555, C560, C635, C2500, C3000, C3500, C5000, C5500; Lexmark i3; X1110, X1130, X1150, X1170, X1180, X1185, X1190, X1250, X1270, X2250, X2240, X2250, X72, X74, X75; Z12, Z13, Z22, Z23, Z24, Z25, Z32, Z33, Z34, Z35, Z513, Z515, Z517, Z601, Z602, Z605, Z611, Z612, Z614, Z615, Z617, Z640, Z645; P3120, P3150, P05, P706, P707, Z703, Z705, Z706, Z707, Z715, JetPrinter-3200, 5000, 5700, 7000, 7200, Z11, 31, 42, 44, 45, 51, 52, 53, 54, F4770, X125, 4250, 4270, 63, 70, 73, 80, 83, 84, 85, P4350, P6250, P6350, P915, X2500, X2510, X2530, X2550, X3300, X3330, X3350, X3530, X3550, X4530, X4550, X5070, X5075, X5130, X5150, X5190pro, X5250, X5270, X5470, X5490, X5495, X6150, X6170, X6190pro, X7170, X7310, X7350, X8350, Z1300, Z1310, Z1320, Z1410, Z1420, Z55, Z65, Z810, Z812, Z815, Z816, Z818, Z845



Black
Пігментне

Canon BCI-3e BK, BCI-15 BK, PG-30, PGI-35, PG-37, PG-40, PG-46, PG-47, PG-50, PG-84, PG-88, PG-89, PG-810, PG-830, BCI-21BK, BCI-24BK; Lexmark 10N0016 (16), 10N0217 (17), 017G0648E (48), 17G0050 (50), 17G0055 (55), 12A1970 (70), 15M3670E (71), 12A1975 (75), 18C0032 (32), 18C0034 (34), 18L0032 (82)

CPG40-100-MP

Canon PG-37/CL-38, PG-40/CL-41, PG-50/CL-51, PG-810/CL-811, PG-830/CL-831

Canon PIXMA iP1200, iP1300, iP1600, iP1700, iP1800, iP1880, iP1900, iP1980, iP2200, iP2500, iP2580, iP2600, iP2680, iP6210D, iP6220D; MP100, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP287, MP450, MP460, MP470; MX300, MX308, MX310, MX318; Fax JX200, JX210P, JX500, JX510

CPG46-100-MP

Canon PG-46/CL-56, PG-84/CL-94

Canon PIXMA Ink Efficiency E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340, E3440, E4240

100 мл

1 л

Black

C40-294e

C40-084

BK/C/M/Y

CPG40-100-MP

BK/C/M/Y

CPG46-100-MP

Чорнило PG-445/ PG-46 Barva для Canon



Black
Водорозчинне

Canon PG-46, PG-84, PG-145, PG-245, PG-345, G-445, PG-545,
PG-645, PG-745, PG-845, PG-945

100 мл

1 л

Black C445-437e C445-623

РВК/С/М/У CPG445-100-2MP —

ВК/С/М/У CPG445-100-MP

 
Чорнило CL-446/ CL-56 Barva для Canon



Canon PIXMA iP2800, iP2810, iP2820, iP2840, iP2850, iP2870S, iP2880, iP2880S, iP2890, iP2899;
MG2400, MG2410, MG2420, MG2440, MG2450, MG2455, MG2460, MG2470, MG2490, MG2500,
MG2510, MG2525, MG2530, MG2540, MG2550, MG2550S, MG2555, MG2560, MG2570, MG2570S,
MG2577S, MG2580S, MG2590, MG2900, MG2910, MG2920, MG2924, MG2930, MG2932, MG2940,
MG2950, MG2960, MG2965, MG2970, MG2980, MG2990, MG3000, MG3010, MG3020, MG3040,
MG3050, MG3051, MG3052, MG3053, MG3060, MG3070S, MG3077S, MG3080, MG3090; MX490,
MX492, MX493, MX494, MX495, MX496, MX498, MX499; TR4520, TR4530, TR4540, TR4550, TR4551,
TR4560, TR4640, TR4650, TR4651; TS202, TS203, TS205, TS207, TS208, TS209, TS302, TS303, TS305,
TS307, TS308, TS309, TS3110, TS3120, TS3130, TS3130S, TS3140, TS3150, TS3151, TS3160, TS3165, TS3166,
TS3170, TS3180, TS3190, TS3320, TS3340, TS3350, TS3351, TS3360, TS3365, TS3370, TS3380, TS3450,
TS3451, TS3465; Ink Efficiency E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340, E3440,
E4240



Сyan
Водорозчинне

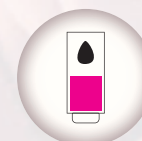

Magenta
Водорозчинне



Yellow
Водорозчинне

Canon CL-56, CL-94, CL-146, CL-246, CL-346, CL-446, CL-546, CL-646, CL-746, CL-846,
CL-946

100 мл

1 л

Cyan C446-438e C446-624

Magenta C446-439e C446-625

Yellow C446-440e C446-626

Чорнило PG-440/ PG-510

Barva для Canon



	100 мл	1 кг/ л
Black водорозчинне	C520-296e	C520-263
Black пігментне	C520-297e	C520-627

Canon PIXMA iP1800, iP2500, iP2700, iP2702, iP2800, iP2810, iP2820, iP2840, iP2850, iP2870S, iP2880, iP2880S, iP2890, iP2899, iP3300, iP3500, iP3600, iP3680, iP4200, iP4300, iP4500, iP4600, iP4680, iP4700, iP4760, iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910, iP4920, iP4930, iP4940, iP4950, iP4970, iP4980, iP5200, iP5300, iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280, iP7280, iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780; iX4000, iX5000, iX6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580, iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880; MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230, MG2240, MG2250, MG2260, MG2270, MG2400, MG2410, MG2420, MG2440, MG2450, MG2455, MG2460, MG2470, MG2490, MG2500, MG2510, MG2525, MG2530, MG2540, MG2550, MG2550S, MG2555, MG2560, MG2570, MG2570S, MG2577S, MG2580, MG2580S, MG2590, MG2900, MG2910, MG2920, MG2930, MG2932, MG2934, MG2940, MG2950, MG2960, MG2965, MG2970, MG2980, MG2990, MG3000, MG3010, MG3020, MG3040, MG3050, MG3051, MG3052, MG3053, MG3060, MG3070S, MG3077S, MG3080, MG3090, MG3100, MG3110, MG3120, MG3130, MG3140, MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3280, MG3290, MG3300, MG3310, MG3320, MG3330, MG3340, MG3350, MG3360, MG3370, MG3380, MG3390, MG3400, MG3410, MG3420, MG3430, MG3440, MG3450, MG3460, MG3470, MG3480, MG3490, MG3500, MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640, MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160, MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280, MG5100, MG5110, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620, MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310, MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG6400, MG6410, MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660, MG6670, MG6680, MG6730, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280; MP210, MP220, MP230, MP235, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP470, MP480, MP490, MP492, MP495, MP499, MP500, MP510, MP520, MP530, MP540, MP545, MP550, MP558, MP560, MP568, MP600, MP610, MP620, MP628, MP630, MP638, MP640, MP648, MP800, MP810, MP830, MP900, MP950, MP960, MP970, MP980, MP988, MP990, MP996; MX300, MX310, MX320, MX330, MX340, MX350, MX360, MX371, MX372, MX374, MX375, MX376, MX377, MX378, MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX410, MX420, MX431, MX432, MX434, MX435, MX436, MX437, MX438, MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX490, MX492, MX493, MX494, MX495, MX496, MX498, MX499, MX511, MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528, MX531, MX532, MX534, MX535, MX536, MX537, MX538, MX700, MX714, MX715, MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX800, MX850, MX860, MX868, MX870, MX876, MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898, MX920, MX921, MX922, MX923, MX924, MX925, MX926, MX927, MX928; TR4520, TR4530, TR4540, TR4550, TR4551, TR4560, TR4640, TR4650, TR4651; TS202, TS203, TS205, TS207, TS208, TS209, TS302, TS303, TS305, TS307, TS308, TS309, TS310, TS3120, TS3130, TS3130S, TS3140, TS3150, TS3151, TS3160, TS3165, TS3166, TS3170, TS3180, TS3190, TS3320, TS3340, TS3350, TS3351, TS3360, TS3365, TS3370, TS3380, TS3450, TS3451, TS3465, TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180



Black
Водорозчинне



Black
Пігментне

Canon PGI-5 PGBK, PGI-125/ PGI-225/ PGI-325/ PGI-425/ PGI-525/ PGI-725/ PGI-825 PGBK, PGI-150/ PGI-250/ PGI-350/ PGI-450/ PGI-550/ PGI-555/ PGI-650/ PGI-750/ PGI-850 PGBK, PGI-220/ PGI-520/ PGI-820 PGBK, PG-140/ PG-240/ PG-340/ PG-440/ PG-540/ PG-640/ PG-740/ PG-840 BK, PG-145/ PG-245/ PG-345/ PG-445/ PG-545/ PG-645/ PG-745/ PG-845/ PG-945 BK, PG-210/ PG-310/ PG-510/ PG-512/ PG-810 BK

Canon PGI-5 PGBK, PGI-125/ PGI-225/ PGI-325/ PGI-425/ PGI-525/ PGI-725/ PGI-825 PGBK, PGI-150/ PGI-250/ PGI-350/ PGI-450/ PGI-550/ PGI-555/ PGI-650/ PGI-750/ PGI-850 PGBK, PGI-220/ PGI-520/ PGI-820 PGBK, PG-140/ PG-240/ PG-340/ PG-440/ PG-540/ PG-640/ PG-740/ PG-840 BK, PG-145/ PG-245/ PG-345/ PG-445/ PG-545/ PG-645/ PG-745/ PG-845/ PG-945 BK, PG-275/ PG-575, PG-210/ PG-310/ PG-510/ PG-512/ PG-810 BK

	100 мл
ВК/С/М/У	C520-100-MP
PGBK/ВК/С/М/У	C520-100-2MP
PGBK/ВК/С/М/У/С/У	C520-100-3MP

Чорнило CLI-451/ CLI-521

Barva для Canon



Canon BJC-8200; Bubble Jet I560, I865, I905D, I950, I965, I990, I9950; PIXMA iP3600, iP3680, iP4000, iP4200, iP4300, iP4500, iP4600, iP4680, iP4700, iP4760, iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910, iP4920, iP4930, iP4940, iP4950, iP4970, iP4980, iP5000, iP5200, iP5300, iP6000D, iP6600D, iP6700D, iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280, iP8500, iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780; iX4000, iX5000, iX6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580, iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880; MG5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620, MG5630, MG5640, MG5650, MG5660, MG5670, MG5680, MG6100, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310, MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG6400, MG6410, MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660, MG6670, MG6680, MG6730, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280; MP500, MP530, MP540, MP545, MP550, MP558, MP560, MP568, MP600, MP610, MP620, MP628, MP630, MP638, MP640, MP648, MP800, MP810, MP830, MP900, MP950, MP960, MP970, MP980, MP988, MP990, MP996; MX472, MX714, MX715, MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX800, MX850, MX860, MX868, MX870, MX876, MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898, MX920, MX921, MX922, MX923, MX924, MX925, MX926, MX927, MX928; S800, S820D, S830D, S900, S9000; Pro-9000



Black
Водорозчинне

Canon BCI-6BK, CLI-8BK, CLI-126/ CLI-226/ CLI-326/ CLI-426/ CLI-526/ CLI-726/ CLI-826 BK, CLI-151/ CLI-251/ CLI-351/ CLI-451/ CLI-551/ CLI-651/ CLI-751/ CLI-851 BK, CLI-221/ CLI-521/ CLI-821 BK

100 мл

1 л

Black

C521-285e

C521-064

Canon PIXMA iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780; MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310, MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280; MP980, MP988, MP990, MP996



Gray
Водорозчинне

Canon LI-126/ CLI-226/ CLI-326/ CLI-426/ CLI-526/ CLI-726/ CLI-826 GY, CLI-151/ CLI-251/ CLI-351/ CLI-451/ CLI-551/ CLI-651/ CLI-751/ CLI-851 GY, CLI-221/ CLI-521/ CLI-821 GY

100 мл

1 л

Gray

C521-469e

C521-634

Чорнило CLI-441/ CLI-511

Barva для Canon



Canon BJC-B200; Bubble Jet i70, i80, i560, i865, i905D, i950, i965, i990, i9950; PIXMA iP90, iP90V, iP100, iP110, iP1200, iP1300, iP1600, iP1700, iP1800, iP1880, iP1900, iP1980, iP2200, iP2500, iP2580, iP2600, iP2680, iP2700, iP2702, iP3000, iP3300, iP3500, iP3600, iP3680, iP4000, iP4200, iP4300, iP4500, iP4600, iP4680, iP4700, iP4760, iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4920, iP4930, iP4940, iP4950, iP4970, iP4980, iP5000, iP5200, iP5300, iP6000D, iP6210D, iP6220D, iP6600D, iP6700D, iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280, iP8500, iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780; iX4000, iX5000, iX6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580, iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880; MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230, MG2240, MG2250, MG2260, MG2270, MG2400, MG2500, MG2580, MG3100, MG3110, MG3120, MG3130, MG3140, MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3500, MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640, MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160, MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280, MG5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620, MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310, MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG6400, MG6410, MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660, MG6670, MG6680, MG6730, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280; MP100, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP230, MP235, MP240, MP252, MP258, MP260, MP270, MP272, MP280, MP282, MP287, MP450, MP460, MP470, MP480, MP490, MP492, MP495, MP499, MP500, MP510, MP520, MP530, MP540, MP545, MP550, MP558, MP560, MP568, MP600, MP610, MP620, MP628, MP630, MP638, MP640, MP648, MP800, MP810, MP830, MP900, MP950, MP960, MP970, MP980, MP988, MP990, MP996; MX300, MX308, MX310, MX318, MX320, MX330, MX340, MX350, MX360, MX371, MX372, MX374, MX375, MX376, MX377, MX378, MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX410, MX420, MX431, MX432, MX434, MX435, MX436, MX437, MX438, MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX511, MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528, MX531, MX532, MX534, MX535, MX536, MX537, MX538, MX700, MX714, MX715, MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX800, MX850, MX860, MX868, MX870, MX876, MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898, MX920, MX921, MX922, MX923, MX924, MX925, MX926, MX927, MX928; S800, S820D, S830D, S900, S9000; mini260, mini320; TR150; Selphy DS700, DS810; Pro-9000; TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180; Fax JX200, JX210P, JX500, JX510



Cyan
Водорозчинне



Magenta
Водорозчинне



Yellow
Водорозчинне

Canon BCI-3C, BCI-6C, CLI-8C, BCI-15/ BCI-16, CLI-36C, CLI-126/ CLI-226/ CLI-326/ CLI-426/ CLI-526/ CLI-726/ CLI-826 C, CLI-151/ CLI-251/ CLI-351/ CLI-451/ CLI-551/ CLI-651/ CLI-751/ CLI-851 C, CLI-221/ CLI-521/ CLI-821 C, CL-31, CL-38/ CL-41/ CL-51, CL-141/ CL-241/ CL-341/ CL-441/ CL-541/ CL-641/ CL-741/ CL-841, CL-211/ CL-311/ CL-511/ CL-513/ CL-811

Canon BCI-3M, BCI-6M, CLI-8M, BCI-15/ BCI-16, CLI-36M, CLI-126/ CLI-226/ CLI-326/ CLI-426/ CLI-526/ CLI-726/ CLI-826 M, CLI-151/ CLI-251/ CLI-351/ CLI-451/ CLI-551/ CLI-651/ CLI-751/ CLI-851 M, CLI-221/ CLI-521/ CLI-821 M, CL-31, CL-38/ CL-41/ CL-51, CL-141/ CL-241/ CL-341/ CL-441/ CL-541/ CL-641/ CL-741/ CL-841, CL-211/ CL-311/ CL-511/ CL-513/ CL-811

Canon BCI-3Y, BCI-6Y, CLI-8Y, BCI-15/ BCI-16, CLI-36Y, CLI-126/ CLI-226/ CLI-326/ CLI-426/ CLI-526/ CLI-726/ CLI-826 Y, CLI-151/ CLI-251/ CLI-351/ CLI-451/ CLI-551/ CLI-651/ CLI-751/ CLI-851 Y, CLI-221/ CLI-521/ CLI-821 Y, CL-31, CL-38/ CL-41/ CL-51, CL-141/ CL-241/ CL-341/ CL-441/ CL-541/ CL-641/ CL-741/ CL-841, CL-211/ CL-311/ CL-511/ CL-513/ CL-811

	100 мл	1 л
Cyan	C521-286e	C521-065
Magenta	C521-287e	C521-066
Yellow	C521-288e	C521-067

Комплект чорнил PG-510/ CL-511 Barva для Canon



Canon PIXMA iP1800, iP2500, iP2700, iP2702, iP3600, iP4600, iP4700; MP210, MP220, MP230, MP235, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP470, MP480, MP490, MP492, MP495, MP499, MP550, MP560, MP620, MP630, MP640, MP980, MP990; MX300, MX310, MX320, MX330, MX340, MX350, MX360, MX410, MX420, MX860, MX870



Black
Пігментне



Циан
Водорозчинне



Magenta
Водорозчинне



Жовтий
Водорозчинне

Canon PG-210/ CL-211, PG-310/ CL-311, PG-510/ CL-511, PG-512/ CL-513, PG-810/ CL-811

100 мл

БК/С/М/Ж

CPG510-100-MP

Комплект чорнил PG-440/ CL-441 Barva для Canon



Canon PIXMA MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230, MG2240, MG2250, MG2260, MG2270, MG2400, MG2500, MG2580, MG3100, MG3110, MG3120, MG3130, MG3140, MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3500, MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640, MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160, MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280; MX371, MX372, MX374, MX375, MX376, MX377, MX378, MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX431, MX432, MX434, MX435, MX436, MX437, MX438, MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX511, MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528, MX531, MX532, MX534, MX535, MX536, MX537, MX538; TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180



Black
Пігментне



Циан
Водорозчинне



Magenta
Водорозчинне



Жовтий
Водорозчинне

Canon PG-140/ CL-141, PG-240/ CL-241, PG-340/ CL-341, PG-440/ CL-441, PG-540/ CL-541, PG-640/ CL-641, PG-740/ CL-741, PG-840/ CL-841

100 мл

БК/С/М/Ж

CPG440-100-MP

Комплекти чорнил PGI-450/ CLI-451 Barva для Canon



Canon PIXMA iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280; iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880; MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620, MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6400, MG6410, MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660, MG6670, MG6680, MG6730; MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX920, MX921, MX922, MX923, MX924, MX925, MX926, MX927, MX928



Black
Пігментне



Black
Водорозчинне



Циан
Водорозчинне



Magenta
Водорозчинне



Yellow
Водорозчинне

Canon PGI-150/CLI-151 PGBK/BK/C/M/Y, PGI-250/CLI-251 PGBK/BK/C/M/Y, PGI-350/CLI-351 PGBK/BK/C/M/Y, PGI-450/CLI-451 PGBK/BK/C/M/Y, PGI-550/CLI-551 PGBK/BK/C/M/Y, PGI-650/CLI-651 PGBK/BK/C/M/Y, PGI-750/CLI-751 PGBK/BK/C/M/Y, PGI-850/CLI-851 PGBK/BK/C/M/Y

100 мл

PGBK/BK/C/M/Y

CPGI450-100-MP



Canon PIXMA iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780; MG6300, MG6310, G6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580



Black
Пігментне



Black
Водорозчинне



Циан
Водорозчинне



Magenta
Водорозчинне



Yellow
Водорозчинне



Gray
Водорозчинне

Canon PGI-150/CLI-151 PGBK/BK/C/M/Y/GY, PGI-250/CLI-251 PGBK/BK/C/M/Y/GY, PGI-350/CLI-351 PGBK/BK/C/M/Y/GY, PGI-450/CLI-451 PGBK/BK/C/M/Y/GY, PGI-550/CLI-551 PGBK/BK/C/M/Y/GY, PGI-650/CLI-651 PGBK/BK/C/M/Y/GY, PGI-750/CLI-751 PGBK/BK/C/M/Y/GY, PGI-850/CLI-851 PGBK/BK/C/M/Y/GY

100 мл

PGBK/BK/C/M/Y/GY

CPGI450-100-2MP

Комплекти чорнил PGI-425/ CLI-426 Barva для Canon



Canon PIXMA iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910, iP4920, iP4930, iP4940, iP4950, iP4970, iP4980; iX6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580; MG5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5520; MX472, MX714, MX715, MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898



Black
Пігментне



Black
Водорозчинне



Циан
Водорозчинне



Magenta
Водорозчинне



Yellow
Водорозчинне

Canon PGI-125/CLI-126 PGBK/BK/C/M/Y, PGI-225/CLI-226 PGBK/BK/C/M/Y, PGI-325/CLI-326 PGBK/BK/C/M/Y,
PGI-425/CLI-426 PGBK/BK/C/M/Y, PGI-525/CLI-526 PGBK/BK/C/M/Y, PGI-725/CLI-726 PGBK/BK/C/M/Y,
PGI-825/CLI-826 PGBK/BK/C/M/Y

100 мл

PGBK/BK/C/M/Y

CPGI425-100-MP



Canon PIXMA MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280



Black
Пігментне



Black
Водорозчинне



Циан
Водорозчинне



Magenta
Водорозчинне



Yellow
Водорозчинне



Gray
Водорозчинне

Canon PGI-125/CLI-126 PGBK/BK/C/M/Y/GY, PGI-225/CLI-226 PGBK/BK/C/M/Y/GY, PGI-325/CLI-326 PGBK/BK/C/M/Y/GY,
PGI-425/CLI-426 PGBK/BK/C/M/Y/GY, PGI-525/CLI-526 PGBK/BK/C/M/Y/GY, PGI-725/CLI-726 PGBK/BK/C/M/Y/GY,
PGI-825/CLI-826 PGBK/BK/C/M/Y/GY

100 мл

PGBK/BK/C/M/Y/GY

CPGI425-100-2MP

Комплекти чорнил Canon PGI-5/ CLI-8

Barva для Canon



Canon PIXMA iP3300, iP3500, iP4200, iP4300, iP4500, iP5200, iP5300; iX4000, iX5000; MP500, MP510, MP520, MP530, MP600, MP610, MP800, MP810, MP830, MP900, MP950, MP960, MP970; MX700, MX800, MX850



Black
Пігментне



Циан
Водорозчинне



Мagenta
Водорозчинне



Yellow
Водорозчинне

Canon PGI-5/CLI-8 PGBK/C/M/Y

100 мл

PGBK/C/M/Y

CPGI5-100-MP



Canon PIXMA iP4200, iP4300, iP4500, iP5200, iP5300; iX4000, iX5000; MP500, MP530, MP600, MP610, MP800, MP810, MP830, MP900, MP950, MP960, MP970; MX800, MX850



Black
Пігментне



Black
Водорозчинне



Циан
Водорозчинне



Мagenta
Водорозчинне



Yellow
Водорозчинне

Canon PGI-5/CLI-8 PGBK/BK/C/M/Y

100 мл

PGBK/BK/C/M/Y

CPGI5-100-2MP

Чорнило PFI-050 Barva для Canon



Canon imagePROGRAF TC-20, TC-20M, TC-5200, TC-5200M



Black
Пігментне



Cyan
Пігментне



Magenta
Пігментне



Yellow
Пігментне

Canon PFI-050BK,
PFI-8150BK

Canon PFI-050C,
PFI-8150C

Canon PFI-050M,
PFI-8150M

Canon PFI-050Y,
PFI-8150Y

	70 мл	1 л
Black	C050-963e	C050-995
Cyan	C050-964e	C050-996
Magenta	C050-965e	C050-997
Yellow	C050-966e	C050-998
BK/C/M/Y	C050-070-MP	

Чорнило PFI-1000/ PFI-1700 Barva для Canon



Canon imagePROGRAF iPF5000, iPF5100, iPF6000S, iPF6100, iPF6200, iPF6300, iPF6300S, iPF6350, iPF6400, iPF6400S, iPF6450, iPF8000, iPF8000S, iPF8100, iPF8300, iPF8300S, iPF9000, iPF9000S, iPF9100; imagePROGRAF PRO-300, PRO-520, PRO-521, PRO-540, PRO-540S, PRO-560, PRO-560S, PRO-561, PRO-1000, PRO-2000, PRO-2100, PRO-4000, PRO-4000S, PRO-4100, PRO-4100S, PRO-6000, PRO-6000S, PRO-6100, PRO-6100S



Canon PFI-51PGY, PFI-53PGY, PFI-57PGY, PFI-101PGY, PFI-103PGY, PFI-105PGY, PFI-106PGY, PFI-205PGY, PFI-206PGY, PFI-301PGY, PFI-304PGY, PFI-701PGY, PFI-702PGY, PFI-704PGY, PFI-706PGY, PFI-1000PGY, PFI-1100PGY, PFI-1300PGY, PFI-1700PGY

Canon imagePROGRAF iPF5000, iPF5100, iPF6000S, iPF6100, iPF6200, iPF6300, iPF6300S, iPF6350, iPF6400, iPF6400S, iPF6450, iPF8000, iPF8000S, iPF8100, iPF8300, iPF8300S, iPF9000, iPF9000S, iPF9100; imagePROGRAF PRO-300, PRO-520, PRO-521, PRO-540, PRO-540S, PRO-560, PRO-560S, PRO-561, PRO-1000, PRO-2000, PRO-2100, PRO-4000, PRO-4000S, PRO-4100, PRO-4100S, PRO-6000, PRO-6000S, PRO-6100, PRO-6100S



Canon PFI-51R, PFI-53R, PFI-57R, PFI-101R, PFI-105R, PFI-106R, PFI-205R, PFI-206R, PFI-300R, PFI-301R, PFI-304R, PFI-701R, PFI-704R, PFI-706R, PFI-1000R, PFI-1100R, PFI-1300R, PFI-1700R

Canon imagePROGRAF iPF5000, iPF5100, iPF6000S, iPF6100, iPF6200, iPF6300, iPF6300S, iPF6350, iPF6400, iPF6400S, iPF6450, iPF8000, iPF8000S, iPF8100, iPF8300, iPF8300S, iPF9000, iPF9000S, iPF9100; imagePROGRAF PRO-520, PRO-521, PRO-540, PRO-540S, PRO-560, PRO-560S, PRO-561, PRO-1000, PRO-2000, PRO-2100, PRO-4000, PRO-4000S, PRO-4100, PRO-4100S, PRO-6000, PRO-6000S, PRO-6100, PRO-6100S



Canon PFI-51B, PFI-53B, PFI-57B, PFI-101B, PFI-105B, PFI-106B, PFI-205B, PFI-206B, PFI-301B, PFI-304B, PFI-701B, PFI-704B, PFI-706B, PFI-1000B, PFI-1100B, PFI-1300B, PFI-1700B

Canon imagePROGRAF PRO-300, PRO-520, PRO-521, PRO-540, PRO-540S, PRO-560, PRO-560S, PRO-561, PRO-1000, PRO-2000, PRO-2100, PRO-4000, PRO-4000S, PRO-4100, PRO-4100S, PRO-6000, PRO-6000S, PRO-6100, PRO-6100S




Canon PFI-51CO, PFI-53CO, PFI-57CO, PFI-300CO, PFI-1000CO, PFI-1100CO, PFI-1300CO, PFI-1700CO

	100 мл	1 л
Photo Gray	C1700-981	C1700-1054
Red	C1700-982	C1700-1055
Blue	C1700-983	C1700-1056
CO	C1700-984	C1700-1057

Canon imagePROGRAF iPF5000, iPF5100, iPF6000S, iPF6100, iPF6200, iPF6300, iPF6300S, iPF6350, iPF6400, iPF6400S, iPF6450, iPF8000, iPF8000S, iPF8100, iPF8300, iPF8300S, iPF9000, iPF9000S, iPF9100; imagePROGRAF PRO-300, PRO-520, PRO-521, PRO-540, PRO-540S, PRO-560, PRO-560S, PRO-561, PRO-1000, PRO-2000, PRO-2100, PRO-4000, PRO-4000S, PRO-4100, PRO-4100S, PRO-6000, PRO-6000S, PRO-6100, PRO-6100S



 Canon PFI-51MBK, PFI-53MBK, PFI-57MBK, PFI-101MBK, PFI-103MBK, PFI-105MBK, PFI-106MBK, PFI-205MBK, PFI-206MBK, PFI-300MBK, PFI-301MBK, PFI-304MBK, PFI-701MBK, PFI-702MBK, PFI-704MBK, PFI-706MBK, PFI-1000MBK, PFI-1100MBK, PFI-1300MBK, PFI-1700MBK



Canon PFI-51PBK, PFI-53PBK, PFI-57PBK, PFI-101PBK, PFI-103PBK, PFI-105PBK, PFI-106PBK, PFI-205PBK, PFI-206PBK, PFI-300PBK, PFI-301PBK, PFI-304PBK, PFI-701PBK, PFI-702PBK, PFI-704PBK, PFI-706PBK, PFI-1000PBK, PFI-1100PBK, PFI-1300PBK, PFI-1700PBK



Canon PFI-51C, PFI-53C, PFI-57C, PFI-101C, PFI-105C, PFI-106C, PFI-205C, PFI-206C, PFI-300C, PFI-301C, PFI-304C, PFI-701C, PFI-704C, PFI-706C, PFI-1000C, PFI-1100C, PFI-1300C, PFI-1700C



Canon PFI-51M, PFI-53M, PFI-57M, PFI-101M, PFI-105M, PFI-106M, PFI-205M, PFI-206M, PFI-300M, PFI-301M, PFI-304M, PFI-701M, PFI-704M, PFI-706M, PFI-1000M, PFI-1100M, PFI-1300M, PFI-1700M



Canon PFI-51Y, PFI-53Y, PFI-57Y, PFI-101Y, PFI-105Y, PFI-106Y, PFI-205Y, PFI-206Y, PFI-300Y, PFI-301Y, PFI-304Y, PFI-701Y, PFI-704Y, PFI-706Y, PFI-1000Y, PFI-1100Y, PFI-1300Y, PFI-1700Y



Canon PFI-51PC, PFI-53PC, PFI-57PC, PFI-101PC, PFI-105PC, PFI-106PC, PFI-205PC, PFI-206PC, PFI-300PC, PFI-301PC, PFI-304PC, PFI-701PC, PFI-704PC, PFI-706PC, PFI-1000PC, PFI-1100PC, PFI-1300PC, PFI-1700PC



Canon PFI-51PM, PFI-53PM, PFI-57PM, PFI-101PM, PFI-105PM, PFI-106PM, PFI-205PM, PFI-206PM, PFI-300PM, PFI-301PM, PFI-304PM, PFI-701PM, PFI-704PM, PFI-706PM, PFI-1000PM, PFI-1100PM, PFI-1300PM, PFI-1700PM



Canon PFI-51GY, PFI-53GY, PFI-57GY, PFI-101GY, PFI-103GY, PFI-105GY, PFI-106GY, PFI-205GY, PFI-206GY, PFI-300GY, PFI-301GY, PFI-304GY, PFI-701GY, PFI-702GY, PFI-704GY, PFI-706GY, PFI-1000GY, PFI-1100GY, PFI-1300GY, PFI-1700GY

	100 мл	1 л
Matte Black	C1700-973	C1700-1046
Photo Black	C1700-974	C1700-1047
Cyan	C1700-975	C1700-1048
Magenta	C1700-976	C1700-1049
Yellow	C1700-977	C1700-1050
Photo Cyan	C1700-978	C1700-1051
Photo Magenta	C1700-979	C1700-1052
Gray	C1700-980	C1700-1053

Чорнило BCI-21/ BCI-24

Barva для Canon



Canon BJC-2000, BJC-2010, BJC-2100, BJC-2110, BJC-2115, BJC-2120, BJC-2125, BJC-4000, BJC-4100, BJC-4200, BJC-4300, BJC-4400, BJC-4550, BJC-4650, BJC-5100, BJC-5500; MultiPass C20, C30, C50, C70, C75, C80, C530, C545, C555, C560, C635, C2500, C3000, C3500, C5000, C5500; Bubble Jet i250, i320, i350, i450, i455, i470D, i475D; S100, S200, S200x, S300; PIXMA iP1000, iP1500, iP2000; MP110, MP130, MP410; SmartBase MP360, MP370, MP390; MPC190, MPC200



Canon BCI-21BK, BCI-21C, BCI-24BK, BCI-24C

100 мл

ВК/С/М/У C24-090-МР

Black

Canon BJ-5, BJ-10e, BJ-10ex, BJ-10sx, BJ-20, BJ-30, BJ-100, BJ-200 series; BJC-50, BJC-70, BJC-80, BJC-85, BJC-200 series, BJC-1000 series, BJC-2000 series, BJC-4000 series, BJC-5100, BJC-5500 series, BJC-7000 series, BJC-8000 series; Fax B120, B190, B200, B220, B310, B320, B320F, B340, B340F, B360, B400; Faxphone B40, B45, B60, B70, B75, B95, B140, B150, B160, B170, B540, B550, B640; MultiPASS 800, 1000, C20, C30, C50, C70, C75, C80, C500 series, C635, C2500, C3000 series, C 5000 series, C6000 series; CFX-B380IF; BN700 series; StarWriter Jet 300, 350C, 500, 550C, 4000; Bubble Jet i250, i320, i350, i450, i455, i470D, i475D; PIXMA iP1000, iP1500, iP2000; MP110, MP130, MP410; S100, S200, S200x, S300; SmartBase MP360, MP370, MP390; MPC190, MPC200

Сyan, Magenta, Yellow

Canon BJC-50, BJC-70, BJC-80, BJC-85, BJC-200 series, BJC-1000 series, BJC-2000 series, BJC-4000 series, BJC-5100, BJC-5500, BJC-7000 series, BJC-8000 series; BN750; StarWriter Jet 350C, 550C; MP-C2500; S450 series; MultiPASS C20, C30, C50, C70, C75, C80, C530, C545, C555, C560, C635, C2500, C3000, C3500, C5000, C5500, C6000 series; Bubble Jet i250, i320, i350, i450, i455, i470D, i475D; S100, S200, S200x, S300; PIXMA iP1000, iP1500, iP2000; MP110, MP130, MP410; SmartBase MP360, MP370, MP390; MPC190, MPC200



Black
Водорозчинне

Canon BC-01, BC-02, Canon BC-01, BC-02, BC-03, BC-10, BC-11, BC-12, BC-20, BC-22, BC-23, BC-29, BC-30, BC-33, BC-40, BC-60, BC-80, BCI-10, BCI-12, BCI-21, BCI-24, BX-2, BX-3, BX-20



Cyan
Водорозчинне

Canon BC-05, BC-06, BC-09F, BC-11, BC-12, BC-22, BC-29, BC-31, BC-40, BC-61, BC-81, BCI-11, BCI-21, BCI-24



Magenta
Водорозчинне

Canon BC-05, BC-06, BC-09F, BC-11, BC-12, BC-22, BC-29, BC-31, BC-40, BC-61, BC-81, BCI-11, BCI-21, BCI-24



Yellow
Водорозчинне

Canon BC-05, BC-06, BC-09F, BC-11, BC-12, BC-22, BC-29, BC-31, BC-40, BC-61, BC-81, BCI-11, BCI-21, BCI-24

	100 мл	1 л
Black	C24-280	C1700-1046
Cyan	C24-282	_____
Magenta	C24-283	_____
Yellow	C24-284	_____

Чорнило універсальне №4 BARVA для Canon/ HP/ Lexmark



Canon PIXMA E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340; iP1200, iP1300, iP1600, iP1700, iP1800, iP1900, iP2500, iP2600, iP2200, iP2700, iP2702, iP2840, iP3000, iP3300, iP3500, iP3600, iP4000, iP4000R, iP4200, iP4200x, iP4300, iP4500, iP4500x, iP4600, iP4600x, iP4700, iP4840, iP4940, iP5000, iP5200, iP5200R, iP5300, iP7240; iX4000, iX5000, iX6540, iX6840; MG2140, MG2240, MG2440, MG2540, MG2540S, MG2545S, MG2940, MG3040, MG3140, MG3240, MG3540, MG3640, MG4140, MG4240, MG5140, MG5240, MG5340, MG5440, MG5540, MG5640, MG6440, MG6640, MG6840; MP140, MP150, MP160, MP170, MP180, MP190, MP210, MP220, MP230, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP450, MP450x, MP460, MP470, MP480, MP490, MP492, MP495, MP499, MP500, MP510, MP520, MP520x, MP530, MP540, MP540x, MP550, MP560, MP600, MP600R, MP610, MP620, MP620B, MP630, MP640, MP800, MP800R, MP810, MP830; MX320, MX330, MX340, MX350, MX360, MX374, MX394, MX410, MX420, MX434, MX454, MX474, MX494, MX514, MX524, MX534, MX700, MX714, MX850, MX860, MX870, MX884, MX894, MX924; TR7540, TR8540; TS204, TS304, TS3140, TS5040, TS5140, TS6040, TS6140



Black
Водорозчинне

Canon BCI-3eBK, PGI-5BK, BCI-6BK, CLI-8BK, PGI-520PGBK, CLI-521BK, PGI-425PGBK, CLI-426BK, PGI-450PGBK, CLI-451BK, PGI-470PGBK, CLI-471BK, PGI-480PGBK, CLI-481BK, PG-37, PG-40, PG-50, PG-510, PG-512, PG-445, PG-46, PG-84, PG-440; HP C6615DE (15), C9351AE (21), 51645AE (45), CC640HE (121), CH561HE (122); Lexmark 10N0016 (16), 10N0217 (17), 10NX217E (17X)



Cyan
Водорозчинне

Canon BCI-6C, CLI-8C, CLI-521C, CLI-426C, CLI-451C, CLI-471C, CLI-481C, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56, CL-94, CL-441; HP C9352AE (22), CC643HE (121), CH562HE (122); Lexmark 10N0026 (26), 10N0227 (27)



Magenta
Водорозчинне

Canon BCI-6M, CLI-8M, CLI-521M, CLI-426M, CLI-451M, CLI-471M, CLI-481M, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56, CL-94, CL-441; HP C9352AE (22), CC643HE (121), CH562HE (122); Lexmark 10N0026 (26), 10N0227 (27)



Yellow
Водорозчинне

Canon BCI-6Y, CLI-8Y, CLI-521Y, CLI-426Y, CLI-451Y, CLI-471Y, CLI-481Y, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56, CL-94, CL-441; HP C9352AE (22), CC643HE (121), CH562HE (122); Lexmark 10N0026 (26), 10N0227 (27)

	100 мл	1 л
Black	CU4-471e	CU4-495
Cyan	CU4-472e	CU4-500
Magenta	CU4-473e	CU4-501
Yellow	CU4-474e	CU4-502
BK/C/M/Y	CU4-100-MP	—