

# Чорнило GI-46 BARVA для Canon



Canon MAXIFY GX3010, GX3020, GX3030, GX3040, GX3050, GX3060, GX3070, GX4010, GX4020, GX4030, GX4040, GX4050, GX4060, GX4070, GX5010, GX5020, GX5030, GX5040, GX5050, GX5060, GX5070, GX5540, GX6010, GX6020, GX6030, GX6040, X6050, GX6060, GX6070, GX6550, GX7010, GX7020, GX7021, GX7030, GX7040, GX7050, GX7055, GX7060, GX7070

- 

**Black**  
Пігментне
- 

**Циан**  
Пігментне
- 

**Magenta**  
Пігментне
- 

**Yellow**  
Пігментне

Canon GI-16 BK, GI-26 BK, GI-36 BK, GI-46 BK, GI-56 BK, GI-66 BK, GI-76 BK

Canon GI-16 C, GI-26 C, GI-36 C, GI-46 C, GI-56 C, GI-66 C, GI-76 C

Canon GI-16 M, GI-26 M, GI-36 M, GI-46 M, GI-56 M, GI-66 M, GI-76 M

Canon GI-16 Y, GI-26 Y, GI-36 Y, GI-46 Y, GI-56 Y, GI-66 Y, GI-76 Y

1K 100 мл


180 мл

<b>Black</b>	CGI46-903-1K	CGI46-907
<b>Cyan</b>	CGI46-904-1K	CGI46-908
<b>Magenta</b>	CGI46-905-1K	CGI46-909
<b>Yellow</b>	CGI46-906-1K	CGI46-910
<b>BK/C/M/Y</b>	CGI46-1K-MP	


# Чорнило GI-43 BARVA для Canon




Canon PIXMA G510, G540, G550, G570, G580, G590, G595, G610, G620, G640, G650, G670, G680, G690, G695

- 


**Black**  
Водорозчинне

Canon GI-13 BK, GI-23 BK, GI-43 BK, GI-53 BK, GI-73 BK, GI-83 BK, GI-93 BK
- 


**Циан**  
Водорозчинне

Canon GI-13 C, GI-23 C, GI-43 C, GI-53 C, GI-73 C, GI-83 C, GI-93 C
- 


**Magenta**  
Водорозчинне

Canon GI-13 M, GI-23 M, GI-43 M, GI-53 M, GI-73 M, GI-83 M, GI-93 M
- 

**Yellow**  
Водорозчинне

Canon GI-13 Y, GI-23 Y, GI-43 Y, GI-53 Y, GI-73 Y, GI-83 Y, GI-93 Y
- 

**Red**  
Водорозчинне

Canon GI-13 R, GI-23 R, GI-43 R, GI-53 R, GI-73 R, GI-83 R, GI-93 R
- 

**Gray**  
Водорозчинне

Canon GI-13 GY, GI-23 GY, GI-43 GY, GI-53 GY, GI-73 GY, GI-83 GY, GI-93 GY

1K 100 мл

180 мл





<b>Black</b>	CGI43-841-1K	CGI43-847
<b>Cyan</b>	CGI43-842-1K	CGI43-848
<b>Magenta</b>	CGI43-843-1K	CGI43-849
<b>Yellow</b>	CGI43-844-1K	CGI43-850
<b>Red</b>	CGI43-845-1K	CGI43-851
<b>Gray</b>	CGI43-846-1K	CGI43-852
<b>BK/C/M/Y/R/GY</b>	CGI43-1K-MP	



# Чорнило GI-41 BARVA для Canon



Canon PIXMA G1020, G1220, G1420, G1430, G1460, G1520, G1530, G1560, G1820, G1920, G1922, G2020, G2021, G2060, G2160, G2260, G2420, G2430, G2460, G2470, G2520, G2560, G2570, G2820, G2860, G2920, G2923, G2960, G2962, G3020, G3060, G3160, G3260, G3420, G3430, G3460, G3470, G3520, G3560, G3570, G3571, G3572, G3620, G3630, G3660, G3670, G3675, G3820, G3821, G3860, G3920, G3923, G3960, G3962, G3963, G4470, G4570, G4670

 <b>Black</b> Пігментне	 <b>Циан</b> Водорозчинне	 <b>Magenta</b> Водорозчинне	 <b>Yellow</b> Водорозчинне
Canon GI-11 PGBK, GI-21 PGBK, GI-41 PGBK, GI-51 PGBK, GI-61 PGBK, GI-71 PGBK, GI-81 PGBK, GI-91 PGBK	Canon GI-11 C, GI-21 C, GI-41 C, GI-51 C, GI-61 C, GI-71 C, GI-81 C, GI-91 C	Canon GI-11 M, GI-21 M, GI-41 M, GI-51 M, GI-61 M, GI-71 M, GI-81 M, GI-91 M	Canon GI-11 Y, GI-21 Y, GI-41 Y, GI-51 Y, GI-61 Y, GI-71 Y, GI-81 Y, GI-91 Y

1К 100 мл

180 мл





1 л

<b>Black</b>	CGI41-805-1K	4x100 мл CGI41-1K-MP	<b>Black</b>	CGI41-809	4x180 мл CGI41-180-MP	<b>Black</b>	CGI41-813
<b>Cyan</b>	CGI41-806-1K		<b>Cyan</b>	CGI41-810		<b>Cyan</b>	CGI41-814
<b>Magenta</b>	CGI41-807-1K		<b>Magenta</b>	CGI41-811		<b>Magenta</b>	CGI41-815
<b>Yellow</b>	CGI41-808-1K		<b>Yellow</b>	CGI41-812		<b>Yellow</b>	CGI41-816

# Чорнило GI-40 BARVA для Canon



Canon PIXMA G5010, G5011, G5020, G5030, G5040, G5050, G5070, G5090, G5092, G6010, G6011, G6020, G6030, G6040, G6050, G6060, G6065, G6070, G6090, G6091, G6092, G7010, G7011, G7020, G7030, G7040, G7050, G7060, G7070, G7090

 <b>Black</b> Пігментне	 <b>Циан</b> Водорозчинне	 <b>Magenta</b> Водорозчинне	 <b>Yellow</b> Водорозчинне
Canon GI-10 PGBK, GI-20 PGBK, GI-30 PGBK, GI-40 PGBK, GI-50 PGBK, GI-60 PGBK, GI-70 PGBK, GI-90 PGBK	Canon GI-10 C, GI-20 C, GI-30 C, GI-40 C, GI-50 C, GI-60 C, GI-70 C, GI-90 C	Canon GI-10 M, GI-20 M, GI-30 M, GI-40 M, GI-50 M, GI-60 M, GI-70 M, GI-90 M	Canon GI-10 Y, GI-20 Y, GI-30 Y, GI-40 Y, GI-50 Y, GI-60 Y, GI-70 Y, GI-90 Y

100 мл

1К 100 мл

180 мл

<b>Black</b>	CGI40-743	4x100 мл CGI40-100-MP	<b>Black</b>	CGI40-837-1K	4x180 мл CGI40-180-MP	<b>Black</b>	CGI40-747
<b>Cyan</b>	CGI40-744		<b>Cyan</b>	CGI40-838-1K		<b>Cyan</b>	CGI40-748
<b>Magenta</b>	CGI40-745		<b>Magenta</b>	CGI40-839-1K		<b>Magenta</b>	CGI40-749
<b>Yellow</b>	CGI40-746		<b>Yellow</b>	CGI40-840-1K		<b>Yellow</b>	CGI40-750



# Чорнило PG-40 BARVA для Canon

Canon PIXMA BJC-3000, BJC-5000, BJC-6000, BJC-6100, BJC-6200, BJC-6500; iP90, iP90V, iP100, iP110, iP1200, iP1300, iP1600, iP1700, iP1800, iP1880, iP1900, iP1980, iP2200, iP2500, iP2580, iP2600, iP2680, iP3000, iP4000, iP5000, iP6000D, iP6210D, iP6220D; MP100, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP287, MP450, MP460, MP470, MP750, MP760, P780; MX300, MX308, MX310, MX318; S400, S450, S500, S520, S530, S530D, S600, S630, S750, S4500, S5400, S6300; mini260, mini320; TR150; Bubble Jet i70, i80, i550, i560, i850, i865, i6500; SmartBase MP700, MP730; MPC400, MPC600; Fax JX200, JX210P, JX500, JX510; MultiPASS C100



**Black**  
Водорозчинне

90 г C40-293

 
180 г C40-080

1 кг C40-083



Canon BCI-3e BK, BCI-15 BK, PG-30, PGI-35, PG-37, PG-40, PG-50, PG-810, PG-830

# Чорнило PG-40/ PG-46 BARVA для Canon

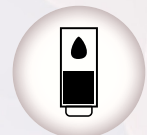

**Black**  
Пігментне

Canon BCI-3e BK, BCI-15 BK, PG-30, PGI-35, PG-37, PG-40, PG-46, PG-47, PG-50, PG-84, PG-88, PG-89, PG-810, PG-830, BCI-21BK, BCI-24BK; Lexmark 10N0016 (16), 10N0217 (17), 017G0648E (48), 17G0050 (50), 17G0055 (55), 12A1970 (70), 15M3670E (71), 12A1975 (75), 18C0032 (32), 18C0034 (34), 18L0032 (82)

90 г

180 г

1 кг

**Black**

C40-294

C40-081

C40-084

**BK/C/M/Y**

CPG40-090-MP

**BK/C/M/Y**

CPG46-090-MP

# Чорнило GI-490 BARVA для Canon



Canon PIXMA G1000, G1010, G1100, G1110, G1200, G1210, G1300, G1310, G1400, G1410, G1411, G1500, G1501, G1510, G1600, G1700, G1800, G1810, G1900, G1910, G2000, G2002, G2010, G2012, G2100, G2101, G2110, G2200, G2210, G2300, G2400, G2410, G2411, G2415, G2416, G2500, G2501, G2510, G2600, G2700, G2800, G2900, G3000, G3010, G3012, G3100, G3102, G3110, G3200, G3202, G3300, G3310, G3400, G3410, G3411, G3415, G3416, G3500, G3501, G3510, G3600, G3610, G3700, G3800, G3900, G4000, G4010, G4085, G4100, G4110, G4200, G4210, G4300, G4400, G4410, G4411, G4500, G4510, G4511, G4600, G4610, G4700, G4800, G4900



**Black**  
Пігментне

Canon GI-190 BK, GI-290 BK, GI-390 BK, GI-490 BK, GI-590 BK, GI-690 BK, GI-790 BK, GI-890 BK, GI-990 BK



**Циан**  
Водорозчинне

Canon GI-190 BK, GI-290 BK, GI-390 BK, GI-490 BK, GI-590 BK, GI-690 BK, GI-790 BK, GI-890 BK, GI-990 BK



**Magenta**  
Водорозчинне

Canon GI-190 M, GI-290 M, GI-390 M, GI-490 M, GI-590 M, GI-690 M, GI-790 M, GI-890 M, GI-990 M



**Жовтий**  
Водорозчинне

Canon GI-190 Y, GI-290 Y, GI-390 Y, GI-490 Y, GI-590 Y, GI-690 Y, GI-790 Y, GI-890 Y, GI-990 Y

90 г

180 г

1 л

**Black** G490-507

**Циан** G490-508

**Magenta** G490-509

**Yellow** G490-510

4x90 г CG490-090-MP

G490-503

G490-504

G490-505

G490-506

4x180 г CG490-180-MP

CGI41-813

CGI41-814

CGI41-815

CGI41-816



# Чорнило PG-460 BARVA для Canon



Canon PIXUS TS5330, TS5430;  
PIXMA TS5300, TS5320, TS5340, TS5350, TS5351, TS5352, TS5353, TS5360, TS5365, TS5370,  
TS5380, TS5391, TS5392, TS6420, TS7440, TS7450, TS7451;  
TR7020, TR7060



**Black**  
Пігментне

Canon BC-360, PG-260, PG-460, PG-560, PG-660, PG-760,  
PG-860, PG-960

100 мл

180 мл

Black

C460-727

C460-731

БК/С/М/У

CPG460-100-MP

CPG460-180-MP

# Чорнило CL-461 BARVA для Canon



Canon PIXUS TS5330, TS5430;  
PIXMA TS5300, TS5320, TS5340, TS5350, TS5351, TS5352, TS5353, TS5360, TS5365, TS5370,  
TS5380, TS5391, TS5392, TS6420, TS7440, TS7450, TS7451;  
TR7020, TR7060



**Сяан**  
Водорозчинне

 
Canon BC-361, CL-261, CL-461,  
CL-561, CL-661, CL-761, CL-861,  
CL-961



**Magenta**  
Водорозчинне

Canon BC-361, CL-261, CL-461,  
CL-561, CL-661, CL-761, CL-861,  
CL-961

100 мл

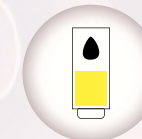

**Yellow**  
Водорозчинне

Canon BC-361, CL-261,  
CL-461, CL-561, CL-661,  
CL-761, CL-861, CL-961

180 мл

Сяан

C461-728

C461-732

Magenta

C461-729

C461-733

Yellow

C461-730

C461-734



# Чорнило PGI-470/PGI-480 BARVA для Canon

Canon PIXUS MG5730/MG6930/MG7730; TR7530/TR8530;  
TS703/TS5030/TS6030/TS6130/TS6230/TS6330/TS8030/TS8130/  
TS8230/TS8330/TS9030/TS9130/TS9530;  
PIXMA MG5700/MG5710/MG5720/MG5722/MG5740/MG5750/MG5751/  
MG5752/MG5753/MG5760/MG5770/MG5780/MG5790/MG6800/  
MG6810/MG6820/MG6840/MG6850/MG6851/MG6852/MG6853/  
MG6860/MG6870/MG6880/MG6890/MG7700/MG7710/MG7720/  
MG7740/MG7750/MG7751/MG7752/MG7753/MG7760/MG7770/  
MG7780/MG7790;  
TR7500/TR7510/TR7520/TR7540/TR7550/TR7560/TR7570/TR7580/  
TR7590/TR8500/TR8510/TR8520/TR8540/TR8550/TR8560/TR8570/  
TR8580/TR8590/TR8620;  
TS701/TS702/TS704/TS705/TS706/TS707/TS708/TS709/TS5010/  
TS5020/TS5040/TS5050/TS5051/TS5053/TS5055/TS5060/TS5070/  
TS5080/TS5090/TS6000/TS6010/TS6020/TS6040/TS6050/TS6051/  
TS6052/TS6060/TS6070/TS6080/TS6090/TS6100/TS6110/TS6120/  
TS6140/TS6150/TS6151/TS6160/TS6170/TS6180/TS6190/TS6210/TS6220/  
TS6240/TS6241/TS6250/TS6251/TS6260/TS6270/TS6280/TS6290/  
TS6310/TS6320/TS6340/TS6350/TS6351/TS6360/TS6370/TS6380/  
TS6390/TS8010/TS8020/TS8040/TS8050/TS8051/TS8052/TS8053/  
TS8060/TS8070/TS8080/TS8090/TS8110/TS8120/TS8140/TS8150/  
TS8151/TS8152/TS8160/TS8170/TS8180/TS8190/TS8210/TS8220/TS8240/  
TS8241/TS8242/TS8250/TS8251/TS8260/TS8270/TS8280/TS8290/  
TS8310/TS8320/TS8340/TS8350/TS8351/TS8352/TS8360/TS8370/  
TS8380/TS8390/TS9010/TS9020/TS9040/TS9050/TS9055/TS9060/  
TS9070/TS9080/TS9090/TS9110/TS9120/TS9140/TS9150/TS9155/TS9160/  
TS9170/TS9180/TS9190/TS9510/TS9520/TS9540/TS9541/TS9550/TS9551/  
TS9560/TS9570/TS9580/TS9590



Canon PGI-170 PGBK, PGI-180 PGBK,  
PGI-270 PGBK, PGI-280 PGBK, PGI-370 PGBK, PGI-380 PGBK, PGI-470  
PGBK, PGI-480 PGBK, PGI-570 PGBK, PGI-580 PGBK, PGI-670 PGBK,  
PGI-680 PGBK, PGI-770 PGBK, PGI-780 PGBK, PGI-870 PGBK, PGI-880  
PGBK, PGI-970 PGBK, PGI-980 PGBK

90 г

1 л

Black	C470-552	C470-661
PGBK/BK/C/M/Y	CPGI470-090-MP	
PGBK/BK/C/M/Y/GY	CPGI470-090-2MP	
PGBK/BK/C/M/Y	CPGI480-5-090-MP	

# Чорнило CLI-471/CLI-481 BARVA для Canon

Canon PIXUS MG5730/MG6930/MG7730;  
TR7530/TR8530;  
TS703/TS5030/TS6030/TS6130/TS6230/TS6330/TS8030/TS8130/TS8230/  
TS8330/TS9030/TS9130/TS9530;  
PIXMA MG5700/MG5710/MG5720/MG5722/MG5740/MG5750/MG5751/  
MG5752/MG5753/MG5760/MG5770/MG5780/MG5790/MG6800/MG6810/  
MG6820/MG6840/MG6850/MG6851/MG6852/MG6853/MG6860/MG6870/  
MG6880/MG6890/MG7700/MG7710/MG7720/MG7740/MG7750/MG7751/  
MG7752/MG7753/MG7760/MG7770/MG7780/MG7790;  
TR7500/TR7510/TR7520/TR7540/TR7550/TR7560/TR7570/TR7580/TR7590/  
TR8500/TR8510/TR8520/TR8540/TR8550/TR8560/  
TR8570/TR8580/TR8590/TR8620;  
TS701/TS702/TS704/TS705/TS706/TS707/TS708/TS709/TS5010/TS5020/  
TS5040/TS5050/TS5051/TS5053/TS5055/TS5060/TS5070/TS5080/TS5090/  
TS6000/TS6010/TS6020/TS6040/TS6050/TS6051/TS6052/TS6060/TS6070/  
TS6080/TS6090/TS6100/TS6110/TS6120/TS6140/TS6150/TS6151/TS6160/TS6170/  
TS6180/TS6190/TS6210/TS6220/TS6240/TS6241/TS6250/TS6251/TS6260/  
TS6270/TS6280/TS6290/TS6310/TS6320/TS6340/TS6350/TS6351/TS6360/  
TS6370/TS6380/TS6390/TS8010/TS8020/TS8040/TS8050/TS8051/TS8052/  
TS8053/TS8060/TS8070/TS8080/TS8090/TS8110/TS8120/TS8140/TS8150/  
TS8151/TS8152/TS8160/TS8170/TS8180/TS8190/TS8210/TS8220/TS8240/  
TS8241/TS8242/TS8250/TS8251/TS8260/TS8270/TS8280/TS8290/TS8310/TS8320/  
TS8340/TS8350/TS8351/TS8352/TS8360/TS8370/TS8380/TS8390/TS9010/  
TS9020/TS9040/TS9050/TS9055/TS9060/TS9070/TS9080/TS9090/TS9110/  
TS9120/TS9140/TS9150/TS9155/TS9160/TS9170/TS9180/TS9190/TS9510/TS9520/  
TS9540/TS9541/TS9550/TS9551/TS9560/TS9570/TS9580/TS9590



Canon CLI-171 BK, CLI-181 BK, CLI-271  
BK, CLI-281 BK, CLI-371 BK, CLI-381 BK,  
CLI-471 BK, CLI-481 BK, CLI-571 BK,  
CLI-581 BK, CLI-671 BK, CLI-681 BK,  
CLI-771 BK, CLI-781 BK, CLI-871 BK,  
CLI-881 BK, CLI-971 BK, CLI-981 BK



Canon CLI-171 C, CLI-181 C, CLI-271 C,  
CLI-281 C, CLI-371 C, CLI-381 C,  
CLI-471 C, CLI-481 C, CLI-571 C,  
CLI-581 C, CLI-671 C, CLI-681 C,  
CLI-771 C, CLI-781 C, CLI-871 C,  
CLI-881 C, CLI-971 C, CLI-981 C



Canon CLI-171 M, CLI-181 M, CLI-271  
M, CLI-281 M, CLI-371 M, CLI-381 M,  
CLI-471 M, CLI-481 M, CLI-571 M,  
CLI-581 M, CLI-671 M, CLI-681 M,  
CLI-771 M, CLI-781 M, CLI-871 M,  
CLI-881 M, CLI-971 M, CLI-981 M



Canon CLI-171 Y, CLI-181 Y, CLI-271 Y,  
CLI-281 Y, CLI-371 Y, CLI-381 Y, CLI-471 Y,  
CLI-481 Y, CLI-571 Y, CLI-581 Y, CLI-671  
Y, CLI-681 Y, CLI-771 Y, CLI-781 Y,  
CLI-871 Y, CLI-881 Y, CLI-971 Y, CLI-981 Y



Canon CLI-171 GY, CLI-271 GY,  
CLI-371 GY, CLI-471 GY, CLI-571 GY,  
CLI-671 GY, CLI-771 GY, CLI-871 GY,  
CLI-971 GY

90 г

1 л

 
Black	C471-553	C471-662
Cyan	C471-554	C471-663
Magenta	C471-555	C471-664
Yellow	C471-556	C471-665
Gray	C471-557	C471-666



# Чорнило PFI-120/ PFI-710 BARVA для Canon




Canon imagePROGRAF GP-200, GP-300, GP-5200, GP-5300;  
TA-20, TA-30, TA-5200, TA-5300;  
TM-200, TM-205, TM-300, TM-305, TM-5200, TM-5205, TM-5300, TM-5305;  
TX-2000, TX-2100, TX-3000, TX-3100, TX-4000, TX-4100, TX-5200, TX-5210, TX-5300,  
TX-5310, TX-5400, TX-5410;  
TZ-5300, TZ-30000

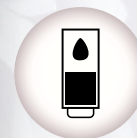


**Matte Black**  
Пігментне

 Canon PFI-030MBK, PFI-110MBK, PFI-120MBK, PFI-310MBK,  
PFI-320MBK, PFI-340MBK, PFI-710MBK, PFI-740MBK,  
PFI-8030MBK, PFI-8110MBK, PFI-8120MBK, PFI-8310MBK,  
PFI-8320MBK, PFI-8340MBK, PFI-870MBK, PFI-8740MBK

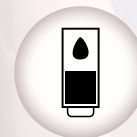

**Black**  
Пігментне

 Canon PFI-030BK, PFI-110BK, PFI-120BK, PFI-310BK,  
PFI-320BK, PFI-340BK, PFI-710BK, PFI-740BK, PFI-8030BK,  
PFI-8110BK, PFI-8120BK, PFI-8310BK, PFI-8320BK,  
PFI-8340BK, PFI-870BK, PFI-8740BK

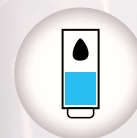

**Циан**  
Пігментне

Canon PFI-030C, PFI-110C, PFI-120C, PFI-310C, PFI-320C,  
PFI-340C, PFI-710C, PFI-740C, PFI-8030C, PFI-8110C,  
PFI-8120C, PFI-8310C, PFI-8320C, PFI-8340C, PFI-8710C,  
PFI-8740C



**Magenta**  
Пігментне

Canon PFI-030M, PFI-110M, PFI-120M, PFI-310M, PFI-320M,  
PFI-340M, PFI-710M, PFI-740M, PFI-8030M, PFI-8110M,  
PFI-8120M, PFI-8310M, PFI-8320M, PFI-8340M, PFI-870M,  
PFI-8740M



**Yellow**  
Пігментне

Canon PFI-030Y, PFI-110Y, PFI-120Y, PFI-310Y, PFI-320Y,  
PFI-340Y, PFI-710Y, PFI-740Y, PFI-8030Y, PFI-8110Y,  
PFI-8120Y, PFI-8310Y, PFI-8320Y, PFI-8340Y, PFI-8710Y,  
PFI-8740Y

	180 мл	1 л	Service Pack
<b>Matte Black</b>	C120-893	C120-898	C120-ISP-MB
<b>Black</b>	C120-894	C120-899	C120-ISP-B
<b>Cyan</b>	C120-895	C120-900	C120-ISP-C
<b>Magenta</b>	C120-896	C120-901	C120-ISP-M
<b>Yellow</b>	C120-897	C120-902	C120-ISP-Y



# Чорнило PFI-102/ PFI-107 BARVA для Canon



Canon imagePROGRAF iPF500, iPF510, iPF600, iPF605, iPF610, iPF650, iPF655, iPF670, iPF670E, iPF680, iPF685, iPF700, iPF710, iPF720, iPF750, iPF755, iPF760, iPF765, iPF770, iPF780, iPF785, iPF810, iPF815, iPF820, iPF825, iPF830, iPF840, iPF850; LP-17, LP-24

**Matte Black**  
Пігментне

Canon PFI-007MBK, PFI-102MBK, PFI-107MBK, PFI-207MBK, PFI-303MBK, PFI-307MBK, PFI-703MBK, PFI-707MBK

**Magenta**  
Водорозчинне

Canon PFI-007M, PFI-102M, PFI-104M, PFI-107M, PFI-207M, PFI-303M, PFI-307M, PFI-703M, PFI-707M

**Black**  
Водорозчинне

Canon PFI-007BK, PFI-102BK, PFI-107BK, PFI-207BK, PFI-303BK, PFI-307BK, PFI-703BK, PFI-707BK

**Yellow**  
Водорозчинне

Canon PFI-007Y, PFI-102Y, PFI-107Y, PFI-207Y, PFI-303Y, PFI-307Y, PFI-703Y, PFI-707Y

**Cyan**  
Водорозчинне

Canon PFI-007C, PFI-102C, PFI-107C, PFI-207C, PFI-303C, PFI-307C, PFI-703C, PFI-707C

180 мл

1 л

	180 мл	1 л
<b>Matte Black</b>	C107-883	C107-888
<b>Black</b>	C107-884	C107-889
<b>Cyan</b>	C107-885	C107-890
<b>Magenta</b>	C107-886	C107-891
<b>Yellow</b>	C107-887	C107-892

# Чорнило PGI-1400/ PGI-2400 BARVA для Canon



Canon MAXIFY IB4010, IB4020, IB4030, IB4040, IB4050, IB4060, IB4070, IB4080, IB4090, IB4110, IB4120, IB4130, IB4140, IB4150, IB4160, IB4170, IB4180, IB4190; MB2000, MB2010, MB2020, MB2030, MB2040, MB2050, MB2060, MB2070, MB2080, MB2090, MB2110, MB2120, MB2130, MB2140, MB2150, MB2155, MB2160, MB2170, MB2180, MB2190, MB2300, MB2310, MB2320, MB2330, MB2340, MB2350, MB2360, MB2370, MB2380, MB2390, MB2710, MB2720, MB2730, MB2740, MB2750, MB2755, MB2760, MB2770, MB2780, MB2790, MB5010, MB5020, MB5030, MB5040, MB5050, MB5060, MB5070, B5080, MB5090, MB5100, MB5110, MB5120, MB5130, MB5140, MB5150, MB5155, MB5160, MB5170, MB5180, MB5190, MB5310, MB5320, MB5330, MB5340, MB5350, MB5360, MB5370, MB5380, MB5390, MB5410, MB5420, MB5430, MB5440, MB5450, MB5455, MB5460, MB5470, MB5480, MB5490

**Black**  
Пігментне

Canon PGI-1100BK, PGI-1200BK, PGI-1300BK, PGI-1400BK, PGI-1500BK, PGI-1600BK, PGI-1700BK, PGI-1800BK, PGI-1900BK, PGI-2100BK, PGI-2200BK, PGI-2300BK, PGI-2400BK, PGI-2500BK, PGI-2600BK, PGI-2700BK, PGI-2800BK, PGI-2900BK

**Cyan**  
Пігментне

Canon PGI-1100C, PGI-1200C, PGI-1300C, PGI-1400C, PGI-1500C, PGI-1600C, PGI-1700C, PGI-1800C, PGI-1900C, PGI-2100C, PGI-2200C, PGI-2300C, PGI-2400C, PGI-2500C, PGI-2600C, PGI-2700C, PGI-2800C, PGI-2900C

**Magenta**  
Пігментне

Canon PGI-1100M, PGI-1200M, PGI-1300M, PGI-1400M, PGI-1500M, PGI-1600M, PGI-1700M, PGI-1800M, PGI-1900M, PGI-2100M, PGI-2200M, PGI-2300M, PGI-2400M, PGI-2500M, PGI-2600M, PGI-2700M, PGI-2800M, PGI-2900M

**Yellow**  
Пігментне

Canon PGI-1100Y, PGI-1200Y, PGI-1300Y, PGI-1400Y, PGI-1500Y, PGI-1600Y, PGI-1700Y, PGI-1800Y, PGI-1900Y, PGI-2100Y, PGI-2200Y, PGI-2300Y, PGI-2400Y, PGI-2500Y, PGI-2600Y, PGI-2700Y, PGI-2800Y, PGI-2900Y

100 мл

180 мл

	100 мл	180 мл
<b>Black</b>	C1400-924	C1400-928
<b>Cyan</b>	C1400-925	C1400-929
<b>Magenta</b>	C1400-926	C1400-930
<b>Yellow</b>	C1400-927	C1400-931

4x100 мл C1400-100-MP

 
4x180 мл C1400-180-MP



# Чорнило PG-445/PG-46 BARVA для Canon



Canon PIXMA iP2800, iP2810, iP2820, iP2840, iP2850, iP2870S, iP2880, iP2880S, iP2890, iP2899;  
 MG2400, MG2410, MG2420, MG2440, MG2450, MG2455, MG2460, MG2470, MG2490, MG2500,  
 MG2510, MG2525, MG2530, MG2540, MG2550, MG2550S, MG2555, MG2560, MG2570, MG2570S,  
 MG2577S, MG2580S, MG2590, MG2900, MG2910, MG2920, MG2924, MG2930, MG2932, MG2940,  
 MG2950, MG2960, MG2965, MG2970, MG2980, MG2990, MG3000, MG3010, MG3020, MG3040,  
 MG3050, MG3051, MG3052, MG3053, MG3060, MG3070S, MG3077S, MG3080, MG3090;  
 MX490, MX492, MX493, MX494, MX495, MX496, MX498, MX499;  
 TR4520, TR4530, TR4540, TR4550, TR4551, TR4560, TR4640, TR4650, TR4651;  
 TS202, TS203, TS205, TS207, TS208, TS209, TS302, TS303, TS305, TS307, TS308, TS309, TS310, TS3120,  
 TS3130, TS3130S, TS3140, TS3150, TS3151, TS3160, TS3165, TS3166, TS3170, TS3180, TS3190, TS3320,  
 TS3340, TS3350, TS3351, TS3360, TS3365, TS3370, TS3380, TS3450, TS3451, TS3465;  
 Ink Efficiency E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340, E3440, E4240

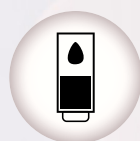

**Black**  
Водорозчинне

Canon PG-46, PG-84, PG-145, PG-245, PG-345, G-445,  
 PG-545, PG-645, PG-745, PG-845, PG-945

90 г                      180 г                      1 л

<b>Black</b>	C445-437	C445-441	C445-623
<b>РВК/С/М/У</b>	CPG445-090-PMP		
<b>ВК/С/М/У</b>	CPG445-090-MP		
<b>ВК/С/М/У</b> комплект (фотопапір, рідина)	CPG445-CMP		

# Чорнило CL-446/CL-56 BARVA для Canon



 
Canon PIXMA iP2800, iP2810, iP2820, iP2840, iP2850, iP2870S, iP2880, iP2880S, iP2890, iP2899;  
 MG2400, MG2410, MG2420, MG2440, MG2450, MG2455, MG2460, MG2470, MG2490, MG2500,  
 MG2510, MG2525, MG2530, MG2540, MG2550, MG2550S, MG2555, MG2560, MG2570, MG2570S,  
 MG2577S, MG2580S, MG2590, MG2900, MG2910, MG2920, MG2924, MG2930, MG2932, MG2940,  
 MG2950, MG2960, MG2965, MG2970, MG2980, MG2990, MG3000, MG3010, MG3020, MG3040,  
 MG3050, MG3051, MG3052, MG3053, MG3060, MG3070S, MG3077S, MG3080, MG3090;  
 MX490, MX492, MX493, MX494, MX495, MX496, MX498, MX499;  
 TR4520, TR4530, TR4540, TR4550, TR4551, TR4560, TR4640, TR4650, TR4651;  
 TS202, TS203, TS205, TS207, TS208, TS209, TS302, TS303, TS305, TS307, TS308, TS309, TS310,  
 TS3120, TS3130, TS3130S, TS3140, TS3150, TS3151, TS3160, TS3165, TS3166, TS3170, TS3180, TS3190,  
 TS3320, TS3340, TS3350, TS3351, TS3360, TS3365, TS3370, TS3380, TS3450, TS3451, TS3465;  
 Ink Efficiency E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340, E3440, E4240



**Сяан**  
Водорозчинне



**Маганта**  
Водорозчинне

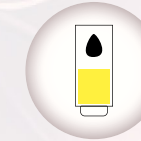

**Yellow**  
Водорозчинне

Canon CL-56, CL-94, CL-146, CL-246, CL-346, CL-446, CL-546, CL-646, CL-746, CL-846,  
 CL-946

90 г                      180 г                      1 л

<b>Cяан</b>	C446-438	C446-442	C446-624
<b>Маганта</b>	C446-439	C446-443	C446-625
<b>Yellow</b>	C446-440	C446-444	C446-626



# Чорнило PG-440/PG-510 BARVA для Canon

 
Canon PIXMA iP1800, iP2500, iP2700, iP2702, iP2800, iP2810, iP2820, iP2840, iP2850, iP2870S, iP2880, iP2880S, iP2890, iP2899, iP3300, iP3500, iP3600, iP3680, iP4200, iP4300, iP4500, iP4600, iP4680, iP4700, iP4760, iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910, iP4920, iP4930, iP4940, iP4950, iP4970, iP4980, iP5200, iP5300, iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280, iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780;

iX4000, iX5000, iX6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580, iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880;


MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230, MG2240, MG2250, MG2260, MG2270, MG2400, MG2410, MG2420, MG2440, MG2450, MG2455, MG2460, MG2470, MG2490, MG2500, MG2510, MG2525, MG2530, MG2540, MG2550, MG2550S, MG2555, MG2560, MG2570, MG2570S, MG2577S, MG2580, MG2580S, MG2590, MG2900, MG2910, MG2920, MG2924, MG2930, MG2932, MG2940, MG2950, MG2960, MG2965, MG2970, MG2980, MG2990, MG3000, MG3010, MG3020, MG3040, MG3050, MG3051, MG3052, MG3053, MG3060, MG3070S, MG3077S, MG3080, MG3090, MG3100, MG3110, MG3120, MG3130, MG3140, MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3500, MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640, MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160, MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280, MG5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620, MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310, MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG6400, MG6410, MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660, MG6670, MG6680, MG6730, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280; MP210, MP220, MP230, MP235, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP470, MP480, MP490, MP492, MP495, MP499, MP500, MP510, MP520, MP530, MP540, MP545, MP550, MP558, MP560, MP568, MP600, MP610, MP620, MP628, MP630, MP638, MP640, MP648, MP800, MP810, MP830, MP900, MP950, MP960, MP970, MP980, MP988, MP990, MP996;

MX300, MX310, MX320, MX330, MX340, MX350, MX360, MX371, MX372, MX374, MX375, MX376, MX377, MX378, MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX410, MX420, MX431, MX432, MX434, MX435, MX436, MX437, MX438, MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX490, MX492, MX493, MX494, MX495, MX496, MX498, MX499, MX511, MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528, MX531, MX532, MX534, MX535, MX536, MX537, MX538, MX700, MX714, MX715, MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX800, MX850, MX860, MX868, MX870, MX876, MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898, MX920, MX921, MX922, MX923, MX924, MX925, MX926, MX927, MX928;

TR4520, TR4530, TR4540, TR4550, TR4551, TR4560, TR4640, TR4650, TR4651; TS202, TS203, TS205, TS207, TS208, TS209, TS302, TS303, TS305, TS307, TS308, TS309, TS3110, TS3120, TS3130, TS3130S, TS3140, TS3150, TS3151, TS3160, TS3165, TS3166, TS3170, TS3180, TS3190, TS3320, TS3340, TS3350, TS3351, TS3360, TS3365, TS3370, TS3380, TS3450, TS3451, TS3465, TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180

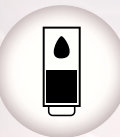

Black  
Пігментне

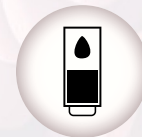 

Black  
Водорозчинне



Canon PGI-5 PGBK, PGI-125/PGI-225/PGI-325/PGI-425/PGI-525/PGI-725/PGI-825 PGBK, PGI-150/PGI-250/PGI-350/PGI-450/PGI-550/PGI-650/PGI-750/PGI-850 PGBK, PG-140/PG-240/PG-340/PG-440/PG-540/PG-640/PG-740/PG-840 BK, PG-145/PG-245/PG-345/PG-445/PG-545/PG-645/PG-745/PG-845/PG-945 BK, PG-210/PG-310/PG-510/PG-512/PG-810 BK

	90 г	180 г	1 кг/л	Service Pack
<b>Black</b> водорозчинне	C520-296	C520-250	C520-263	C520-ISP-B
<b>Black</b> пігментне	C520-297	C520-089	C520-627	



# Чорнило CLI-451/CLI-521 BARVA для Canon

Canon BJC-8200;  
Bubble Jet I560, I865, I905D, I950, I965, I990, I9950;  
PIXMA iP3600, iP3680, iP4000, iP4200, iP4300, iP4500, iP4600, iP4680, iP4700, iP4760,  
iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910, iP4920,  
iP4930, iP4940, iP4950, iP4970, iP4980, iP5000, iP5200, iP5300, iP6000D, iP6600D,  
iP6700D, iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280,  
iP8500, iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780;  
iX4000, iX5000, iX6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570,  
iX6580, iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880;  
MG5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220,  
MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320,  
MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5400, MG5410, MG5420,  
MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520,  
MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620,  
MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6100, MG6110,  
MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220,  
MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310, MG6320, MG6330,  
MG6340, MG6350, MG6360, MG6370, MG6380, MG6400, MG6410, MG6420, MG6440,  
MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650,  
MG6660, MG6670, MG6680, MG6730, MG7100, MG7110, MG7120, MG7130, MG7140,  
MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540,  
MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130, MG8140, MG8150,  
MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280;  
MP500, MP530, MP540, MP545, MP550, MP558, MP560, MP568, MP600, MP610, MP620,  
MP628, MP630, MP638, MP640, MP648, MP800, MP810, MP830, MP900, MP950, MP960,  
MP970, MP980, MP988, MP990, MP996;  
MX472, MX714, MX715, MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX800,  
MX850, MX860, MX868, MX870, MX876, MX880, MX882, MX884, MX885, MX886, MX888,  
MX892, MX893, MX894, MX895, MX897, MX898, MX920, MX921, MX922, MX923, MX924,  
MX925, MX926, MX927, MX928;  
S800, S820D, S830D, S900, S9000;  
Pro-9000



**Black**  
Водорозчинне

Canon BCI-6BK, CLI-8BK, CLI-126/CLI-226/CLI-326/  
CLI-426/CLI-526/CLI-726/CLI-826 BK, CLI-151/CLI-251/  
CLI-351/CLI-451/CLI-551/CLI-651/CLI-751/CLI-851 BK,  
CLI-221/CLI-521/CLI-821 BK



Canon PIXMA iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780;  
MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210,  
MG6220, MG6230, MG6240, MG6250, MG6270, MG6280, MG6300, MG6310, MG6320,  
MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG7100, MG7110, MG7120,  
MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520,  
MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130,  
MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250,  
MG8270, MG8280;  
MP980, MP988, MP990, MP996



**Gray**  
Водорозчинне

Canon LI-126/CLI-226/CLI-326/CLI-426/CLI-526/CLI-726/  
CLI-826 GY, CLI-151/CLI-251/CLI-351/CLI-451/CLI-551/  
CLI-651/CLI-751/CLI-851 GY, CLI-221/CLI-521/CLI-821 GY

	90 г	180 г	1 кг	Service Pack
<b>Black</b>	C521-285	C521-056	C521-064	C521-1SP-B
<b>Gray</b>	C521-469	C521-377	C521-634	C521-1SP-GY



# Чорнило CLI-441/CLI-511 BARVA для Canon

Canon BJC-8200; Bubble Jet i70, i80, i560, i865, i905D, i950, i965, i990, i9950;  
PIXMA iP90, iP90V, iP100, iP110, iP1200, iP1300, iP1600, iP1700, iP1800, iP1880, iP1900, iP1980, iP2200, iP2500,  
iP2580, iP2600, iP2680, iP2700, iP2702, iP3000, iP3300, iP3500, iP3600, iP3680, iP4000, iP4200, iP4300, iP4500,  
iP4600, iP4680, iP4700, iP4760, iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910,  
iP4920, iP4930, iP4940, iP4950, iP4970, iP4980, iP5000, iP5200, iP5300, iP6000D, iP6210D, iP6220D, iP6600D,  
iP6700D, iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280, iP8500, iP8700, iP8710,  
iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780;  
iX4000, iX5000, iX6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580, iX6770, iX6780, iX6810,  
iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880; MG2110, MG2120, MG2130, MG2140, MG2150, MG2160,  
MG2170, MG2180, MG2200, MG2210, MG2220, MG2230, MG2240, MG2250, MG2260, MG2270, MG2400, MG2500,  
MG2580, MG3100, MG3110, MG3120, MG3130, MG3140, MG3150, MG3160, MG3170, MG3180, MG3210, MG3220,  
MG3230, MG3240, MG3250, MG3260, MG3270, MG3500, MG3510, MG3520, MG3530, MG3540, MG3550, MG3560,  
MG3570, MG3580, MG3600, MG3620, MG3610, MG3640, MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100,  
MG4110, MG4120, MG4130, MG4140, MG4150, MG4160, MG4170, MG4180, MG4200, MG4210, MG4220, MG4230,  
MG4240, MG4250, MG4260, MG4270, MG4280, MG5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180,  
MG5200, MG5220, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5320,  
MG5330, MG5340, MG5350, MG5370, MG5380, MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460,  
MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600,  
MG5610, MG5620, MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6100, MG6110, MG6120,  
MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220, MG6230, MG6240, MG6250, MG6270,  
MG6280, MG6300, MG6310, MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG6400, MG6410,  
MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660,  
MG6670, MG6680, MG6730, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180,  
MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580, MG8100, MG8120, MG8130,  
MG8140, MG8150, MG8170, MG8180, MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280;  
MP100, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP230, MP235,  
MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP287, MP450, MP460, MP470, MP480, MP490,  
MP492, MP495, MP499, MP500, MP510, MP520, MP530, MP540, MP545, MP550, MP558, MP560, MP568, MP600,  
MP610, MP620, MP628, MP630, MP638, MP640, MP648, MP800, MP810, MP830, MP900, MP950, MP960, MP970,  
MP980, MP988, MP990, MP996;  
MX300, MX308, MX310, MX318, MX320, MX330, MX340, MX350, MX360, MX371, MX372, MX374, MX375, MX376,  
MX377, MX378, MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX410, MX420, MX431, MX432, MX434,  
MX435, MX436, MX437, MX438, MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474,  
MX475, MX476, MX477, MX478, MX511, MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523,  
MX524, MX525, MX526, MX527, MX528, MX531, MX532, MX534, MX535, MX536, MX537, MX538, MX700, MX714,  
MX715, MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX800, MX850, MX860, MX868, MX870, MX876,  
MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898, MX920, MX921,  
MX922, MX923, MX924, MX925, MX926, MX927, MX928;  
S800, S820D, S830D, S900, S9000;  
mini260, mini320;  
TR150;  
Selphy DS700, DS810;  
Pro-9000;  
TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180;  
Fax JX200, JX210P, JX500, JX510



 
**Циан**  
Водорозчинне

Canon BCI-3C, BCI-6C, CLI-8C, BCI-15/BCI-16, CLI-36C, CLI-126/CLI-226/  
CLI-326/CLI-426/CLI-526/CLI-726/CLI-826 C, CLI-151/CLI-251/CLI-351/CLI-451/  
CLI-551/CLI-651/CLI-751/CLI-851 C, CLI-221/CLI-521/CLI-821 C, CL-31, CL-38/  
CL-41/CL-51, CL-141/CL-241/CL-341/CL-441/CL-541/CL-641/CL-741/CL-841,  
CL-211/CL-311/CL-511/CL-513/CL-811



**Мagenta**  
Водорозчинне

Canon BCI-3M, BCI-6M, CLI-8M, BCI-15/BCI-16, CLI-36M, CLI-126/CLI-226/  
CLI-326/CLI-426/CLI-526/CLI-726/CLI-826 M, CLI-151/CLI-251/CLI-351/CLI-451/  
CLI-551/CLI-651/CLI-751/CLI-851 M, CLI-221/CLI-521/CLI-821 M, CL-31, CL-38/  
CL-41/CL-51, CL-141/CL-241/CL-341/CL-441/CL-541/CL-641/CL-741/CL-841,  
CL-211/CL-311/CL-511/CL-513/CL-811

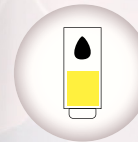

**Yellow**  
Водорозчинне

Canon BCI-3Y, BCI-6Y, CLI-8Y, BCI-15/BCI-16, CLI-36Y, CLI-126/CLI-226/  
CLI-326/CLI-426/CLI-526/CLI-726/CLI-826 Y, CLI-151/CLI-251/CLI-351/CLI-451/  
CLI-551/CLI-651/CLI-751/CLI-851 Y, CLI-221/CLI-521/CLI-821 Y, CL-31, CL-38/  
CL-41/CL-51, CL-141/CL-241/CL-341/CL-441/CL-541/CL-641/CL-741/CL-841,  
CL-211/CL-311/CL-511/CL-513/CL-811

	90 г	180 г	1 кг	Service Pack
<b>Cyan</b>	C521-286	C521-057	C521-065	C521-1SP-C
<b>Magenta</b>	C521-287	C521-058	C521-066	C521-1SP-M
<b>Yellow</b>	C521-288	C521-059	C521-067	C521-1SP-Y



# Комплект чорнил PG-512/CL-513 BARVA для Canon



Canon PIXMA iP1800, iP2500, iP2700, iP2702, iP3600, iP4600, iP4700;  
 MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230,  
 MG2240, MG2250, MG2260, MG2270, MG2400, MG2500, MG2580, MG3100, MG3110, MG3120, MG3130, MG3140,  
 MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3500,  
 MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640,  
 MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160,  
 MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280;  
 MP210, MP220, MP230, MP235, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MX410, MX420,  
 MP470, MP480, MP490, MP492, MP495, MP499, MP550, MP560, MP620, MP630, MP640, MP980, MP990;  
 MX300, MX310, MX320, MX330, MX340, MX350, MX360, MX371, MX372, MX374, MX375, MX376, MX377, MX378,  
 MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX431, MX432, MX434, MX435, MX436, MX437, MX438,  
 MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX511,  
 MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528,  
 MX531, MX532, MX534, MX535, MX536, MX537, MX538, MX860, MX870; TS5110, TS5120, TS5130, TS5140, TS5150,  
 TS5160, TS5170, TS5180



Canon PG-140/CL-141, PG-210/CL-211, PG-240/CL-241, PG-310/CL-311, PG-340/CL-341, PG-440/CL-441, PG-510/  
 CL-511, PG-512/CL-513, PG-540/CL-541, PG-640/CL-641, PG-740/CL-741, PG-810/CL-811, PG-840/CL-841

90 г

180 г

БК/С/М/У


CPGI520-090-MP

CPGI520-180-MP

# Комплект чорнил PGI-520/CLI-521 BARVA для Canon



 Canon PIXMA iP3600, iP3680, iP4600, iP4680, iP4700, iP4760; MP540, MP545, MP550, MP558, MP560, MP568,  
 MP620, MP628, MP630, MP638, MP640, MP648; MX860, MX868, MX870, MX876

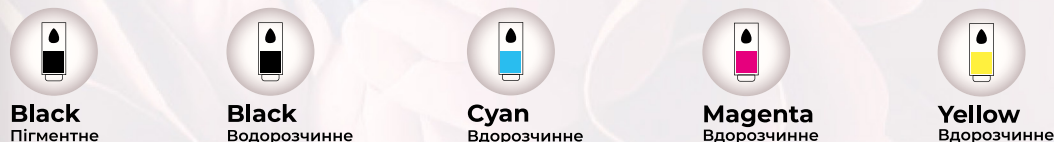


Canon PGI-220/CLI-221 PGBK/BK/C/M/Y, PGI-520/CLI-521 PGBK/BK/C/M/Y, PGI-820/CLI-821 PGBK/BK/C/M/Y

PGBK/BK/C/M/Y 90 г

CPGI520-5-090-MP

 Canon PIXMA MP980, MP988, MP990, MP996

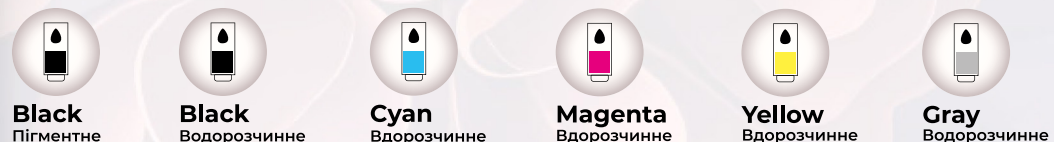

Canon PGI-220/CLI-221 PGBK/BK/C/M/Y/GY, PGI-520/CLI-521 PGBK/BK/C/M/Y/GY, PGI-820/CLI-821 PGBK/  
 BK/C/M/Y/GY

PGBK/BK/C/M/Y/GY 90 г

CPGI520-6-090-MP



# Комплект чорнил PG-510/CL-511 BARVA для Canon



Canon PIXMA iP1800, iP2500, iP2700, iP2702, iP3600, iP4600, iP4700;  
MP210, MP220, MP230, MP235, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MP470, MP480,  
MP490, MP492, MP495, MP499, MP550, MP560, MP620, MP630, MP640, MP980, MP990;  
MX300, MX310, MX320, MX330, MX340, MX350, MX360, MX410, MX420, MX860, MX870



Canon PG-210/ CL-211, PG-310/ CL-311, PG-510/ CL-511, PG-512/ CL-513, PG-810/ CL-811

90 г

ВК/С/М/У

CPG510-090-MP

# Комплект чорнил PG-510/CL-511 «Комфортний перехід» BARVA для Canon



Canon PIXMA iP1800, iP2500, iP2700, iP2702, iP3600, iP4600, iP4700;  
MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230,  
MG2240, MG2250, MG2260, MG2270, MG2400, MG2500, MG2580, MG3100, MG3110, MG3120, MG3130, MG3140,  
MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3500,  
MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640,  
MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160,  
MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280;  
MP210, MP220, MP230, MP235, MP240, MP250, MP252, MP260, MP270, MP272, MP280, MP282, MX410, MX420,  
MP470, MP480, MP490, MP492, MP495, MP499, MP550, MP560, MP620, MP630, MP640, MP980, MP990;  
MX300, MX310, MX320, MX330, MX340, MX350, MX360, MX371, MX372, MX374, MX375, MX376, MX377, MX378,  
MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX431, MX432, MX434, MX435, MX436, MX437, MX438,  
MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX511,  
MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528,  
MX531, MX532, MX534, MX535, MX536, MX537, MX538, MX860, MX870;  
TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180



Canon PG-140/CL-141, PG-210/CL-211, PG-240/CL-241, PG-310/CL-311, PG-340/CL-341, PG-440/CL-441, PG-510/CL-511,  
PG-512/CL-513, PG-540/CL-541, PG-640/CL-641, PG-740/CL-741, PG-810/CL-811, PG-840/CL-841

90 г

ВК/С/М/У комплект  
(фотопапір, рідина)

CPG520-CMP



# Комплект чорнил PG-440/CL-441 BARVA для Canon



Canon PIXMA MG2110, MG2120, MG2130, MG2140, MG2150, MG2160, MG2170, MG2180, MG2200, MG2210, MG2220, MG2230, MG2240, MG2250, MG2260, MG2270, MG2400, MG2500, MG2580, MG3100, MG3110, MG3120, MG3130, MG3140, MG3150, MG3160, MG3170, MG3180, MG3210, MG3220, MG3230, MG3240, MG3250, MG3260, MG3270, MG3500, MG3510, MG3520, MG3530, MG3540, MG3550, MG3560, MG3570, MG3580, MG3600, MG3620, MG3610, MG3640, MG3650, MG3650S, MG3660, MG3670, MG3680, MG4100, MG4110, MG4120, MG4130, MG4140, MG4150, MG4160, MG4170, MG4180, MG4200, MG4210, MG4220, MG4230, MG4240, MG4250, MG4260, MG4270, MG4280; MX371, MX372, MX374, MX375, MX376, MX377, MX378, MX391, MX392, MX394, MX395, MX396, MX397, MX398, MX431, MX432, MX434, MX435, MX436, MX437, MX438, MX451, MX452, MX454, MX455, MX456, MX457, MX458, MX471, MX472, MX474, MX475, MX476, MX477, MX478, MX511, MX512, MX513, MX514, MX515, MX516, MX517, MX518, MX521, MX522, MX523, MX524, MX525, MX526, MX527, MX528, MX531, MX532, MX534, MX535, MX536, MX537, MX538; TS5110, TS5120, TS5130, TS5140, TS5150, TS5160, TS5170, TS5180



Canon PG-140/CL-141, PG-240/CL-241, PG-340/CL-341, PG-440/CL-441, PG-540/CL-541, PG-640/CL-641, PG-740/CL-741, PG-840/CL-841

90 г


БК/С/М/У

CPG440-090-MP

# Комплект чорнил PGI-450/CLI-451 BARVA для Canon



 Canon PIXMA iP7000, iP7200, iP7210, iP7220, iP7230, iP7240, iP7250, iP7260, iP7270, iP7280; iX6770, iX6780, iX6810, iX6820, iX6830, iX6840, iX6850, iX6860, iX6870, iX6880; MG5400, MG5410, MG5420, MG5430, MG5440, MG5450, MG5460, MG5470, MG5480, MG5500, MG5510, MG5520, MG5530, MG5540, MG5550, MG5560, MG5570, MG5580, MG5600, MG5610, MG5620, MG5630, MG5640, MG5650, MG5655, MG5660, MG5670, MG5680, MG6400, MG6410, MG6420, MG6440, MG6450, MG6460, MG6470, MG6530, MG6600, MG6610, MG6620, MG6640, MG6650, MG6660, MG6670, MG6680, MG6730; MX720, MX721, MX722, MX725, MX726, MX727, MX728, MX920, MX921, MX922, MX923, MX924, MX925, MX926, MX927, MX928

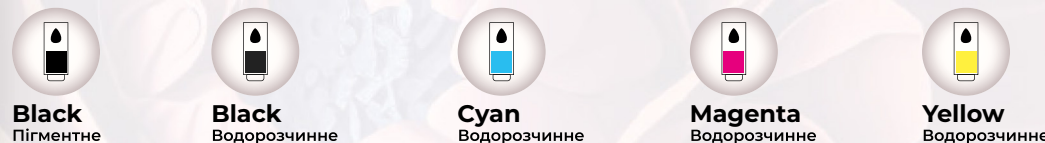


Canon PGI-150/CLI-151 PGBK/БК/С/М/У, PGI-250/CLI-251 PGBK/БК/С/М/У, PGI-350/CLI-351 PGBK/БК/С/М/У, PGI-450/CLI-451 PGBK/БК/С/М/У, PGI-550/PGI-555/CLI-551 PGBK/БК/С/М/У, PGI-650/CLI-651 PGBK/БК/С/М/У, PGI-750/CLI-751 PGBK/БК/С/М/У, PGI-850/CLI-851 PGBK/БК/С/М/У

PGBK/БК/С/М/У 90 г

CPGI450-5-090-MP

 Canon PIXMA iP8700, iP8710, iP8720, iP8730, iP8740, iP8750, iP8760, iP8770, iP8780; MG6300, MG6310, MG6320, MG6330, MG6340, MG6350, MG6360, MG6370, MG6380, MG7100, MG7110, MG7120, MG7130, MG7140, MG7150, MG7160, MG7170, MG7180, MG7500, MG7510, MG7520, MG7530, MG7540, MG7550, MG7560, MG7570, MG7580

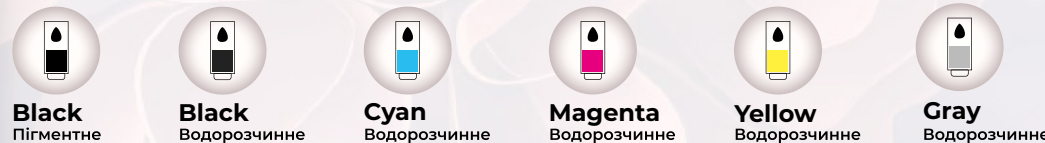

Canon PGI-150/CLI-151 PGBK/БК/С/М/У/У, PGI-250/CLI-251 PGBK/БК/С/М/У/У, PGI-350/CLI-351 PGBK/БК/С/М/У/У, PGI-450/CLI-451 PGBK/БК/С/М/У/У, PGI-550/CLI-551 PGBK/БК/С/М/У/У, PGI-650/CLI-651 PGBK/БК/С/М/У/У, PGI-750/CLI-751 PGBK/БК/С/М/У/У, PGI-850/CLI-851 PGBK/БК/С/М/У/У

PGBK/БК/С/М/У/У 90 г


CPGI450-6-090-MP



# Комплект чорнил PGI-425/CLI-426 BARVA для Canon



 
Canon PIXMA iP4800, iP4810, iP4820, iP4830, iP4840, iP4850, iP4870, iP4880, iP4900, iP4910, iP4920, iP4930, iP4940, iP4950, iP4970, iP4980;  
X6110, iX6250, iX6500, iX6510, iX6520, iX6530, iX6540, iX6550, iX6570, iX6580; MG5210, MG5120, MG5130, MG5140, MG5150, MG5170, MG5180, MG5200, MG5220, MG5220, MG5230, MG5240, MG5250, MG5270, MG5280, MG5300, MG5310, MG5320, MG5320, MG5330, MG5340, MG5350, MG5370, MG5380, MG5520;  
MX472, MX714, MX715, MX880, MX882, MX884, MX885, MX886, MX888, MX892, MX893, MX894, MX895, MX897, MX898

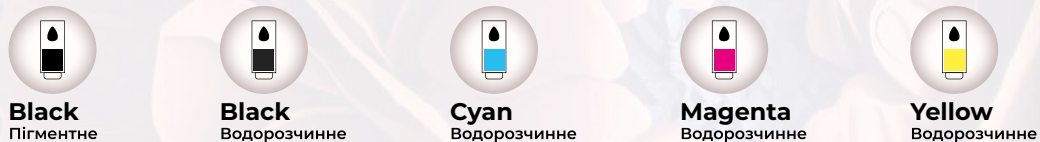

Canon PGI-125/CLI-126 PGBK/BK/C/M/Y, PGI-225/CLI-226 PGBK/BK/C/M/Y, PGI-325/CLI-326 PGBK/BK/C/M/Y,  
PGI-425/CLI-426 PGBK/BK/C/M/Y, PGI-525/CLI-526 PGBK/BK/C/M/Y, PGI-725/CLI-726 PGBK/BK/C/M/Y,  
PGI-825/CLI-826 PGBK/BK/C/M/Y

**PGBK/BK/C/M/Y 90 г**      **CPGI425-5-090-MP**

 Canon PIXMA MG6100, MG6110, MG6120, MG6130, MG6140, MG6150, MG6170, MG6180, MG6200, MG6210, MG6220,  
MG6230, MG6240, MG6250, MG6270, MG6280, MG8100, MG8120, MG8130, MG8140, MG8150, MG8170, MG8180,  
MG8200, MG8220, MG8230, MG8240, MG8250, MG8270, MG8280

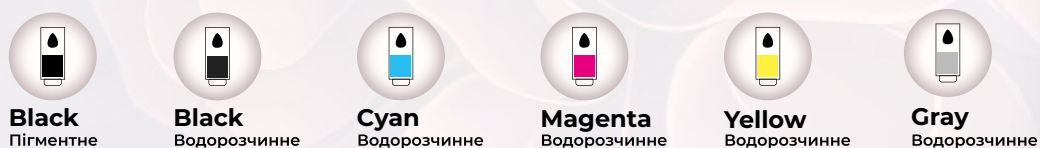

Canon PGI-125/CLI-126 PGBK/BK/C/M/Y/GY, PGI-225/CLI-226 PGBK/BK/C/M/Y/GY, PGI-325/CLI-326  
PGBK/BK/C/M/Y/GY, PGI-425/CLI-426 PGBK/BK/C/M/Y/GY, PGI-525/CLI-526 PGBK/BK/C/M/Y/GY, PGI-725/CLI-726  
PGBK/BK/C/M/Y/GY, PGI-825/CLI-826 PGBK/BK/C/M/Y/GY

**PGBK/BK/C/M/Y/GY 90 г**      **CPGI425-6-090-MP**

# Комплект чорнил Canon PGI-5/CLI-8 BARVA для Canon



 
Canon PIXMA iP3300, iP3500, iP4200, iP4300, iP4500, iP5200, iP5300;  
iX4000, iX5000;  
MP500, MP510, MP520, MP530, MP600, MP610, MP800, MP810, MP830, MP900, MP950, MP960, MP970; MX700,  
MX800, MX850



Canon PGI-5/CLI-8 PGBK/C/M/Y

**PGBK/C/M/Y 90 г**      **CPGI5-4-090-MP**

Canon PIXMA iP4200, iP4300, iP4500, iP5200, iP5300;  
iX4000, iX5000;  
MP500, MP530, MP600, MP610, MP800, MP810, MP830, MP900, MP950, MP960, MP970;  
MX800, MX850

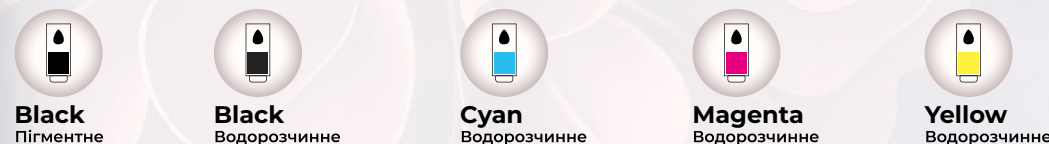

Canon PGI-5/CLI-8 PGBK/BK/C/M/Y

**PGBK/BK/C/M/Y 90 г**      **CPGI450-5-090-MP**



# Чорнило універсальне №4 BARVA для Canon/ HP/ Lexmark



Canon PIXMA E204, E304, E404, E414, E464, E474, E484, E514, E3140, E3340;  
iP1200, iP1300, iP1600, iP1700, iP1800, iP1900, iP2500, iP2600, iP2200, iP2700, iP2702,  
iP2840, iP3000, iP3300, iP3500, iP3600, iP4000, iP4000R, iP4200, iP4200x, iP4300,  
iP4500, iP4500x, iP4600, iP4600x, iP4700, iP4840, iP4940, iP5000, iP5200, iP5200R,  
iP5300, iP7240;  
X4000, iX5000, iX6540, iX6840;  
MG2140, MG2240, MG2440, MG2540, MG2540S, MG2545S, MG2940, MG3040, MG3140,  
MG3240, MG3540, MG3640, MG4140, MG4240, MG5140, MG5240, MG5340, MG5440,  
MG5540, MG5640, MG6440, MG6640, MG6840;  
MP140, MP150, MP160, MP170, MP180, MP190, MP210, MP220, MP230, MP240, MP250,  
MP252, MP260, MP270, MP272, MP280, MP282, MP450, MP450x, MP460, MP470,  
MP480, MP490, MP492, MP495, MP499, MP500, MP510, MP520, MP520x, MP530,  
MP540, MP540x, MP550, MP560, MP600, MP600R, MP610, MP620, MP620B, MP630,  
MP640, MP800, MP800R, MP810, MP830;  
MX320, MX330, MX340, MX350, MX360, MX374, MX394, MX410, MX420, MX434, MX454,  
MX474, MX494, MX514, MX524, MX534, MX700, MX714, MX850, MX860, MX870, MX884,  
MX894, MX924;  
TR7540, TR8540;  
TS204, TS304, TS3140, TS5040, TS5140, TS6040, TS6140



 
**Black**  
Водорозчинне

Canon BCI-3eBK, PGI-5BK, BCI-6BK, CLI-8BK, PGI-520PGBK,  
CLI-521BK, PGI-425PGBK, CLI-426BK, PGI-450PGBK,  
CLI-451BK,  
PGI-470PGBK, CLI-471BK, PGI-480PGBK, CLI-481BK, PG-37,  
PG-40, PG-50, PG-510, PG-512, PG-445, PG-46, PG-84, PG-440;  
HP C6615DE (15), C9351AE (21), 51645AE (45), CC640HE (121),  
CH561HE (122);  
Lexmark 10N0016 (16), 10N0217 (17), 10NX217E (17X)




**Циан**  
Водорозчинне

Canon BCI-6C, CLI-8C, CLI-521C, CLI-426C, CLI-451C, CLI-471C,  
CLI-481C, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56,  
CL-94, CL-441;  
HP C9352AE (22), CC643HE (121), CH562HE (122);  
Lexmark 10N0026 (26), 10N0227 (27)

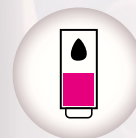

**Magenta**  
Водорозчинне

 Canon BCI-6M, CLI-8M, CLI-521M, CLI-426M, CLI-451M,  
CLI-471M, CLI-481M, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446,  
CL-56, CL-94, CL-441;  
HP C9352AE (22), CC643HE (121), CH562HE (122);  
Lexmark 10N0026 (26), 10N0227 (27)

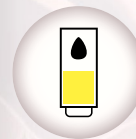

**Yellow**  
Водорозчинне

Canon BCI-6Y, CLI-8Y, CLI-521Y, CLI-426Y, CLI-451Y, CLI-471Y,  
CLI-481Y, CL-38, CL-41, CL-51, CL-511, CL-513, CL-446, CL-56,  
CL-94, CL-441;  
HP C9352AE (22), CC643HE (121), CH562HE (122);  
Lexmark 10N0026 (26), 10N0227 (27)

	90 г	180 г	1 кг	Service Pack
<b>Black</b>	CU4-471	CU4-475	CU4-495	CU4-1SP-B
<b>Cyan</b>	CU4-472	CU4-476	CU4-500	CU4-1SP-C
<b>Magenta</b>	CU4-473	CU4-477	CU4-501	CU4-1SP-M
<b>Yellow</b>	CU4-474	CU4-478	CU4-502	CU4-1SP-Y
<b>BK/C/M/Y</b>	CU4-090-MP	CU4-180-MP		